

Installation instructions

DishDrawer®

DD605 models

Fisher & Paykel
innovative living

US CA

Important!

SAVE THESE INSTRUCTIONS

The models shown in this document may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please go to our website www.fisherpaykel.com or contact your local Fisher & Paykel dealer.

① SAFETY AND WARNINGS

⚠ WARNING!

Electrical hazard

Before installing the DishDrawer®, remove the house fuse or open the circuit breaker.

If permanently connecting the DishDrawer®, be sure the power is isolated and the DishDrawer® unplugged.

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly grounded.

Do not modify the power supply plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an extension cord, adapter plug or multiple outlet box.

Failure to do so may result in electrical shock or death.



⚠ WARNING!

Cut hazard

Take care - panel edges are sharp.

Failure to use caution could result in injury or cuts.




Important safety precautions!

- Installation of this DishDrawer® requires basic mechanical and electrical skills.
- Be sure to leave these Instructions with the Customer.
- Installation must comply with your local building and electricity regulations.
- At the completion of the DishDrawer® installation, the Installer must perform Final Check List.
- Remove all packaging materials supplied with the DishDrawer®.
- This DishDrawer® is manufactured for indoor use only.
- Ensure all water connections are turned OFF. It is the responsibility of the plumber and electrician to ensure that each installation complies with all Codes and Regulations.
- The DishDrawer® MUST be installed to allow for future removal from the enclosure if service is required.
- The switched power outlet must be outside the DishDrawer® cavity so that it is accessible after installation.
- Care should be taken when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord.
- If the DishDrawer® is to be relocated from one installation to another it must be kept upright to avoid damage from water spillage.
- Make sure only new hoses are used for connection (supplied with DishDrawer®). Old hoses should not be reused.
- Failure to install the DishDrawer® correctly could invalidate any warranty or liability claims.
- If the product is installed in a motor vehicle, boat or similar mobile facility, you must bring the vehicle, boat or mobile facility containing the product to the service shop at your expense or pay the service technician's travel to the location of the product.

② PRODUCT DIMENSIONS

Installation diagrams for illustration purposes only

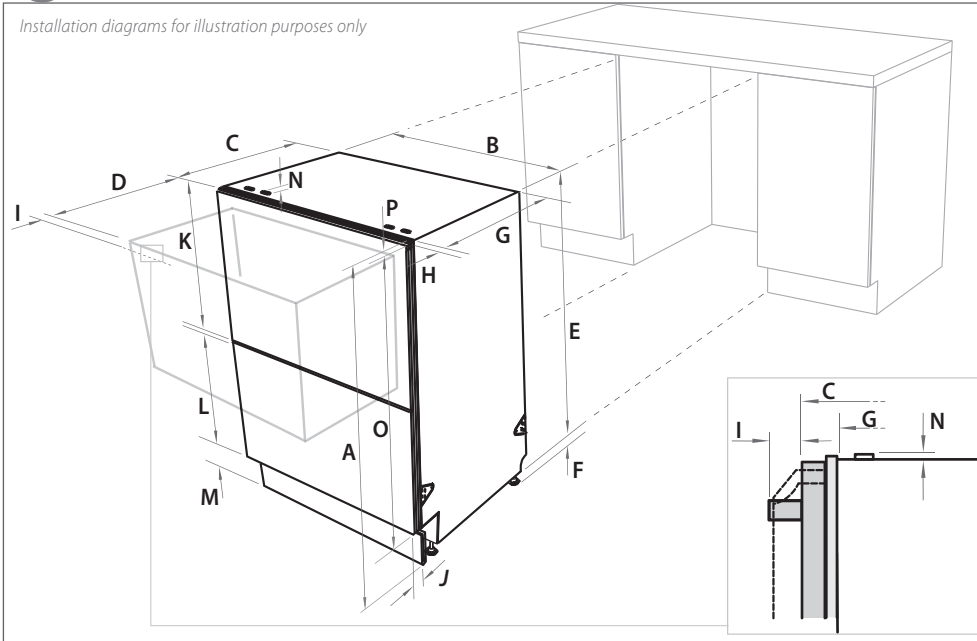

Product dimensions (inches (mm))

	Prefinished LCD DD605	Prefinished Flat door DD605	Integrated DD605
A overall height* of product	32 1/4 - 34 5/8" (819.5- 879.5)	32 1/4 - 34 5/8" (819.5- 879.5)	32 1/4 - 34 5/8" (819.5- 879.5)
B overall width of product	23 7/16"(595)	23 7/16"(595)	23 7/16"(595)
C overall depth of product (excl. curvature/handle)	22 5/16"(570)	22 5/16"(570)	22 5/16"(570)
D depth of drawer (open) (excl. curvature/handle)	20 5/16"(520)	20 5/16"(520)	20 5/16"(520)
E height* of chassis	31 7/8"(809)	31 7/8"(809)	31 7/8"(809)
F height range of levelling feet	2 3/8"(60)	2 3/8"(60)	2 3/8"(60)
G depth of chassis	21 3/4"(552)	21 3/4"(552)	21 3/4"(552)
H depth of drawer front panel (excl. curvature/handle)	1 1/16"(18)	1 1/16"(18)	1 1/16"(18)
I depth of curvature or handle	1 3/16"(30)	**	n/a
J depth of kickstrip	2 - 4 5/16"(50 - 110)	2 - 4 5/16"(50 - 110)	2 5/8" - 5"(67 - 127)***
K height of upper drawer front	15 1/2"(394)	15 1/16"(398)	15 1/16"(398) min
L height of lower drawer front	13 13/16"(351)	14"(356)	12 1/4"(311.5) min
M height of kickstrip (adjustable)	2 3/4 - 4 3/4"(70 - 120)	2 3/4 - 4 3/4"(70 - 120)	2 3/4 - 4 3/4"(70 - 120)
N height of installation tab slots (on top of chassis)	3/4"(2)	3/4"(2)	3/4"(2)
O height of drawer fronts	29 9/16"(751)	30 1/16"(764)	28 1/4"(717.5) min
P height* of top of upper drawer to top of chassis	1/4"(7)	3/4"(2)	n/a


* Chassis heights include tab slots

** Designer handle - 1 5/8" (41 mm)
Curved handle - 1 7/16" (36 mm)

*** Prefinished 2 - 2 1/2" (50-65 mm); Integrated 2 5/8" (67 mm) less the Kickstrip Panel thickness (Minimum Panel thickness using the supplied screws is 3/8" (9 mm)).

③ CABINETRY DIMENSIONS


Installation diagrams for illustration purposes only

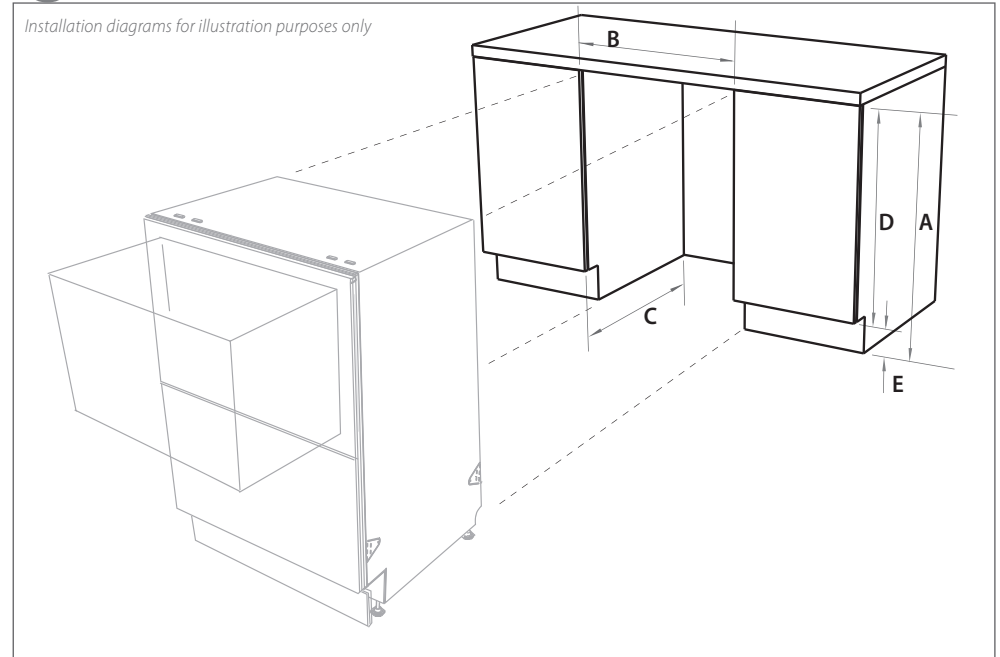


Cabinetry dimensions (inches (mm))

	Prefinished LCD DD605	Prefinished Flat door DD605	Integrated DD605
A inside height of cavity	32 5/16 - 34 3/4" (820 - 882.5)	32 5/16 - 34 3/4" (820 - 882.5)	32 5/16 - 34 3/4" (820 - 882.5)
B inside width of cavity	23 5/8"(600)	23 5/8"(600)	23 5/8"(600)
C inside depth of cavity (inside)	22 7/8"(580)	22 7/8"(580)	22 7/8"(580)
D height of adjacent cabinetry	30"(762)	30"(762)	min. 28 5/8"(720)
E height of kickstrip	2 3/4 - 4 3/4"(70 - 120)	2 3/4 - 4 3/4"(70 - 120)	2 3/4 - 4 3/4"(70 - 120)

Minimum clearances (inches (mm))

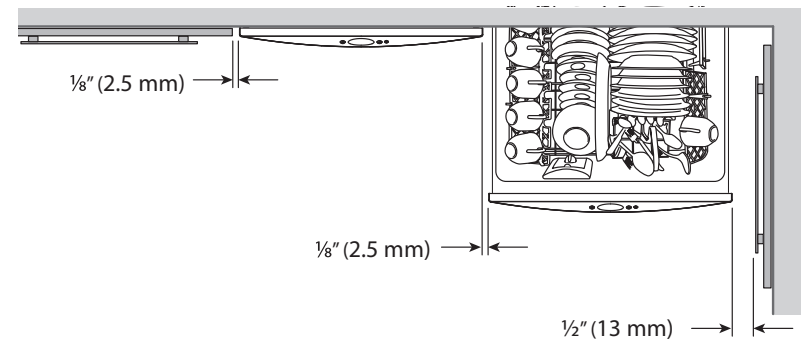

4 PARTS SUPPLIED

 										
Drain hose support (1)	Drain hose joiner (1)	Wire clip (2)	Clamp (1)	Install tabs (2)	Phillips 16 mm screws (9)	Washer (1)	Moisture protection tape (1) (to prevent moisture damage)	Edge Protector (1) (if service hole partition is metal)	Hexagonal socket (2) (Long & Short)	Prefinished toe kick (1) White or Black

If the Drain hose(s) supplied are not long enough to reach your services, you **must** use a Drain Hose Extension Kit P/N 525798 which will extend the drain hose(s) by 3.6m. The kit is available from the nearest Fisher & Paykel Authorized Service Agent, or Toll free 1.888.936.7872 or www.fisherpaykel.com.

5 CAVITY PREPARATION

Important!

Be sure the edges of the services hole are smooth or covered. If the services hole is through a metal partition the hole must be protected with the Edge Protector supplied to prevent damage to the power cord or hoses.

- ◆ These marks indicate mounting tab screw locations
- * Preferred position. If adequate clearance, services hole can be higher to clear toekick space. If hole is higher, ensure drain hose(s) are routed straight into the waste connection.

Note: Services can be located either side of DishDrawer®.



Water Connection

Recommended **HOT** (Maximum 140°F/60°C).
Supplied hose to suit 3/8" (9 mm) male compression fitting.





- **Water Pressure**

	Max	Min
Water softener models	1 MPa (145 psi)	0.1 MPa (14.5 psi)
Other models	1 MPa (145 psi)	0.03 MPa (4.3 psi)
- Drains will need to be separated to satisfy kosher requirements. We suggest you confirm acceptability with your local rabbi in respect to kosher installations.



Max. distance of hoses and cord from chassis edge	Left hand side	Right hand side
Drain hose	79" (2011 mm)	71" (1794 mm)
Inlet hose	61" (1561 mm)	53" (1344 mm)
Power cord	70" (1776 mm)	61" (1559 mm)

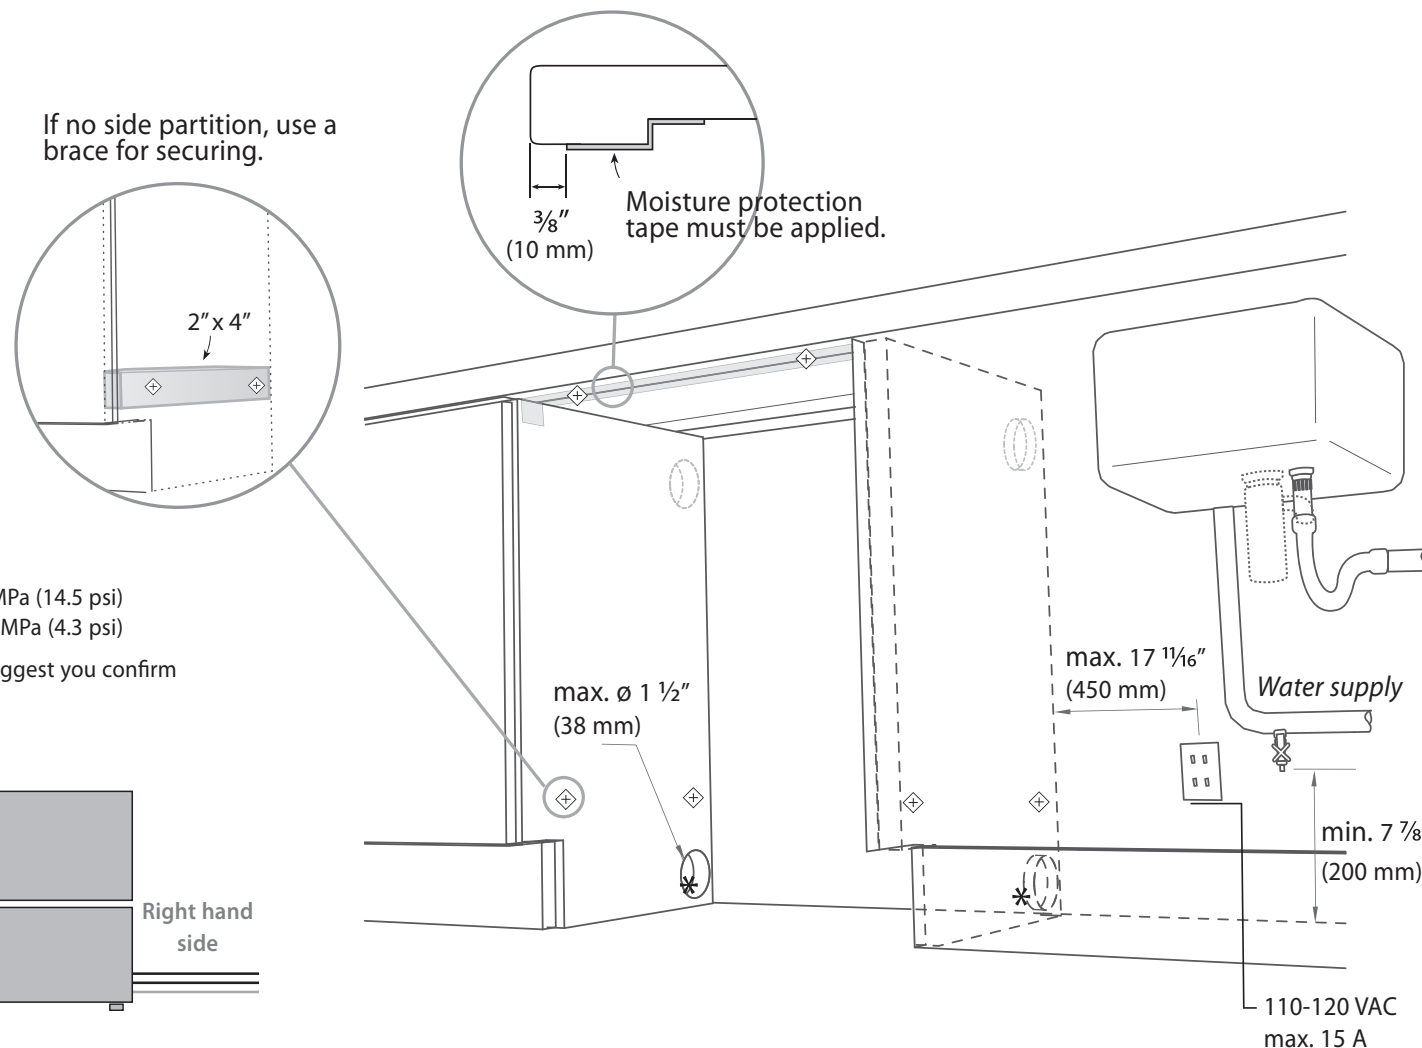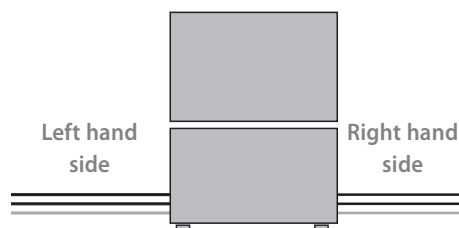



⑥ OPTIONALLY HARD WIRING THE PRODUCT

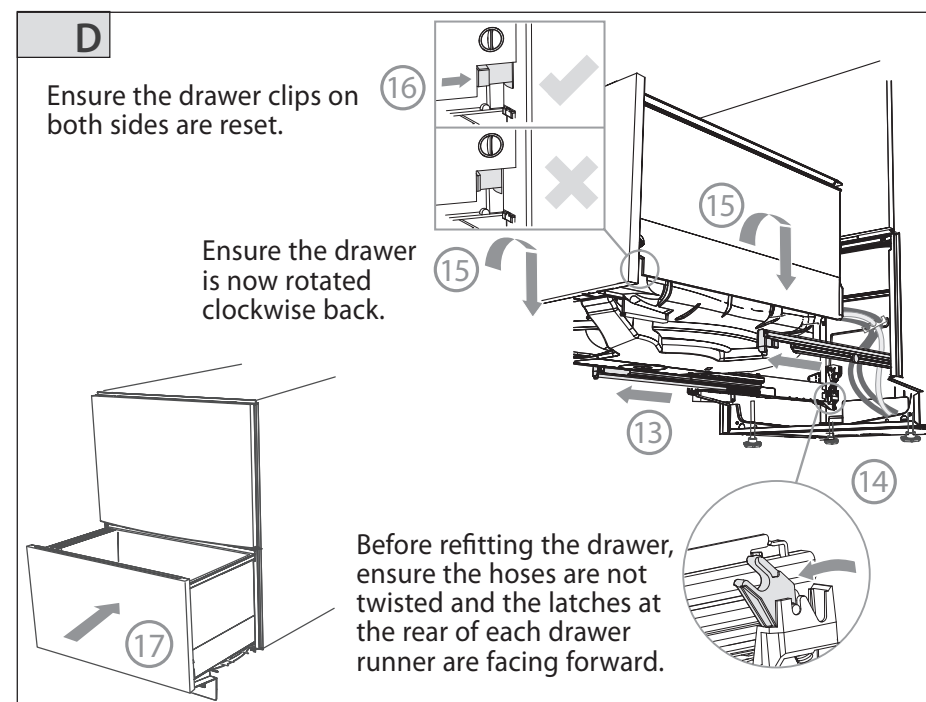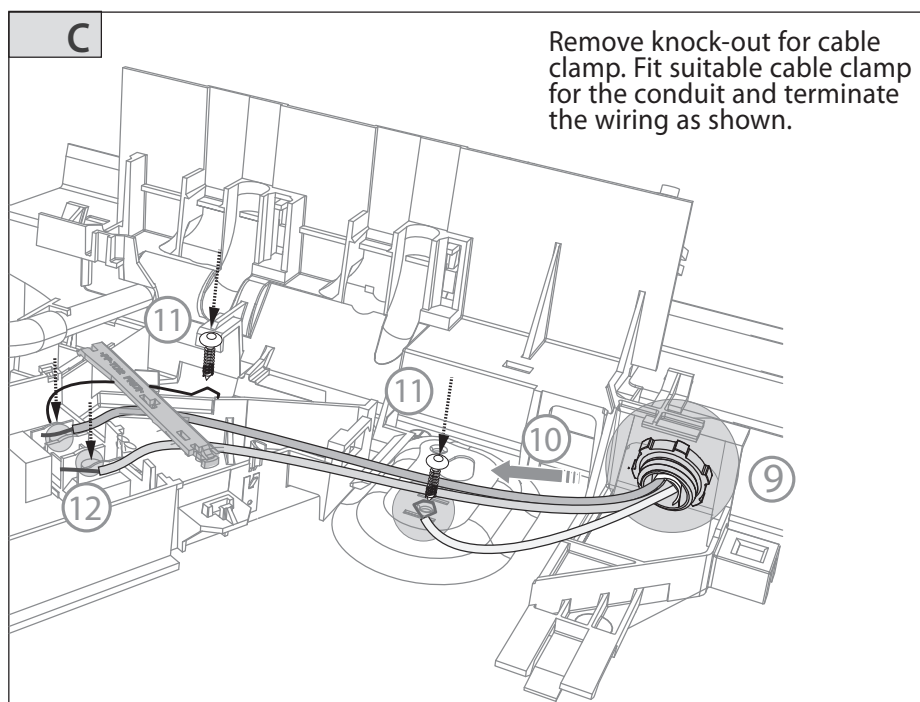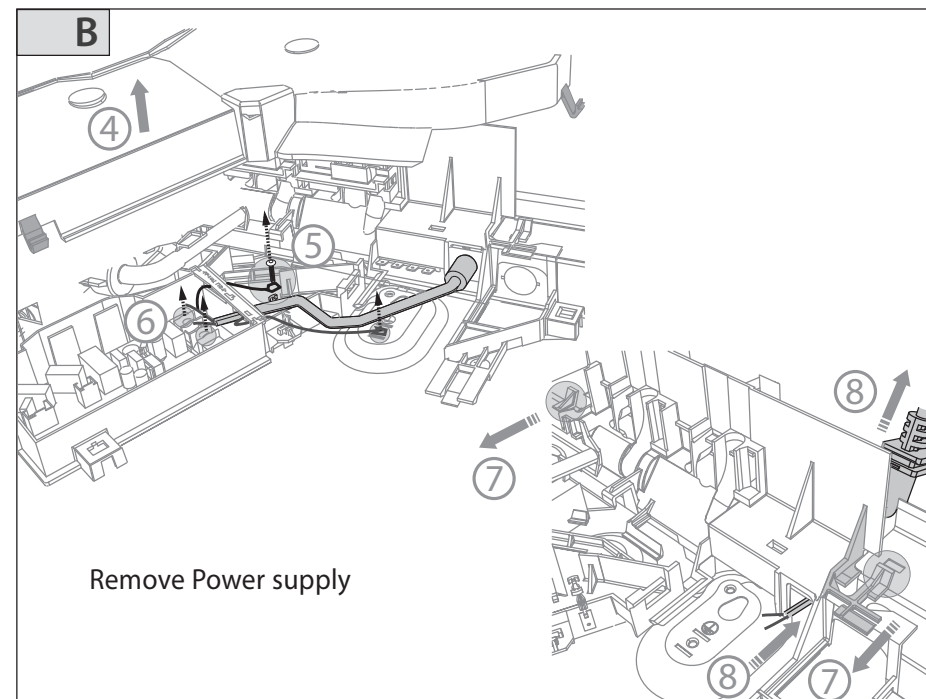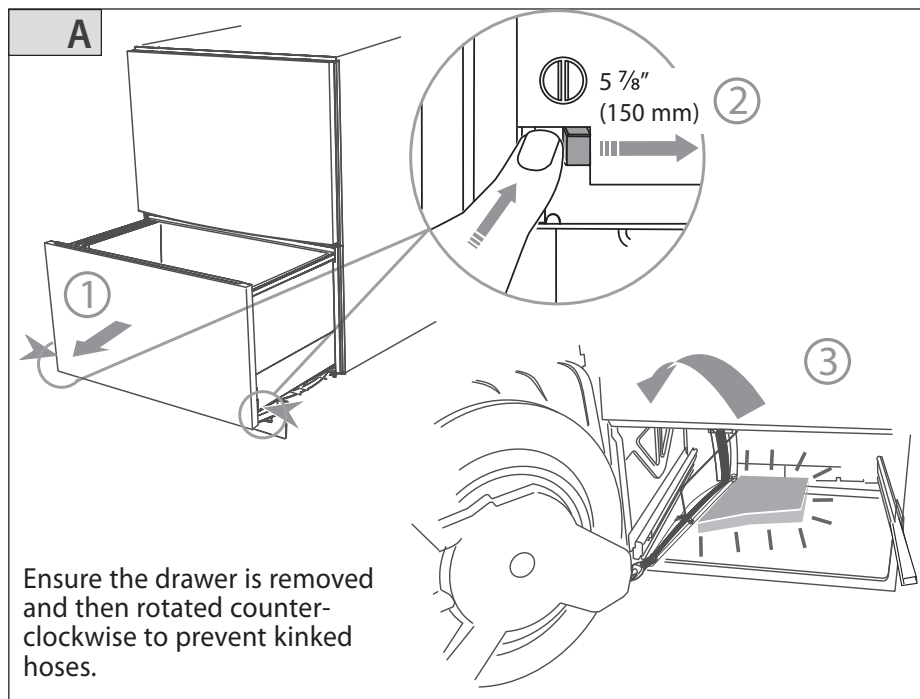

⑦ ROUTE THE HOSES AND MOVE INTO THE CAVITY

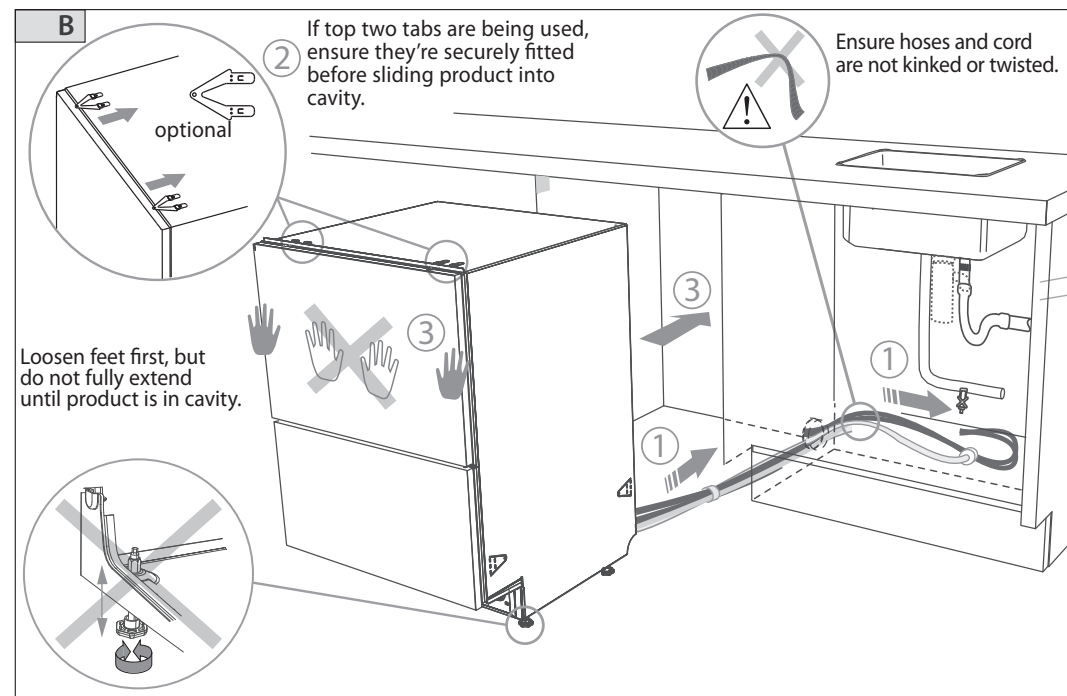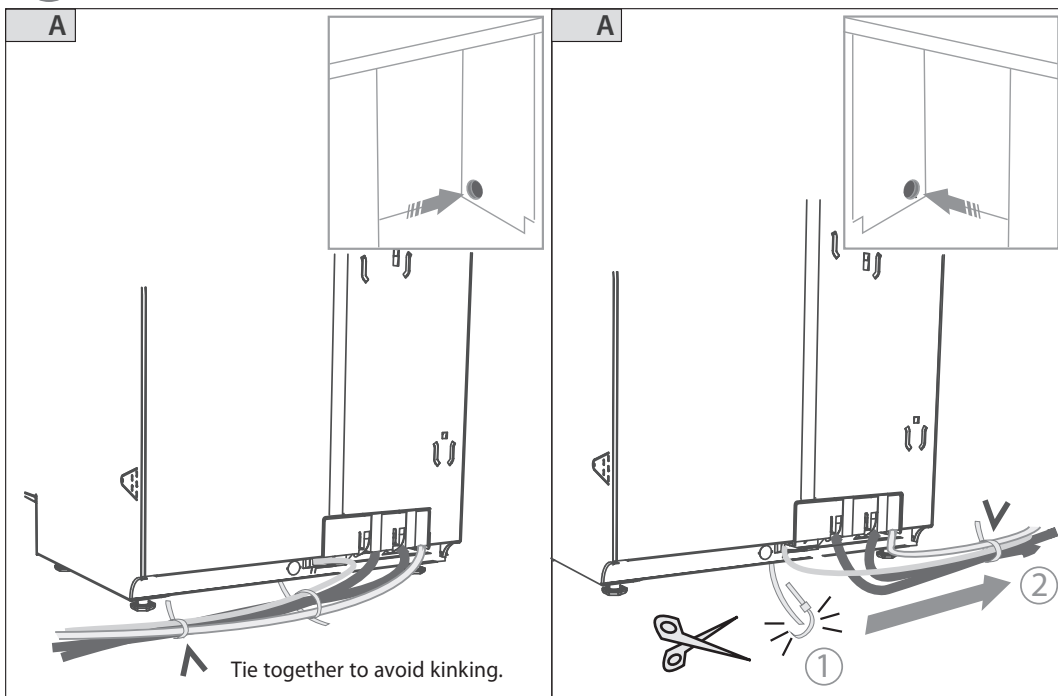

⑧ REMOVE THE DRAWER AND LEVEL THE PRODUCT

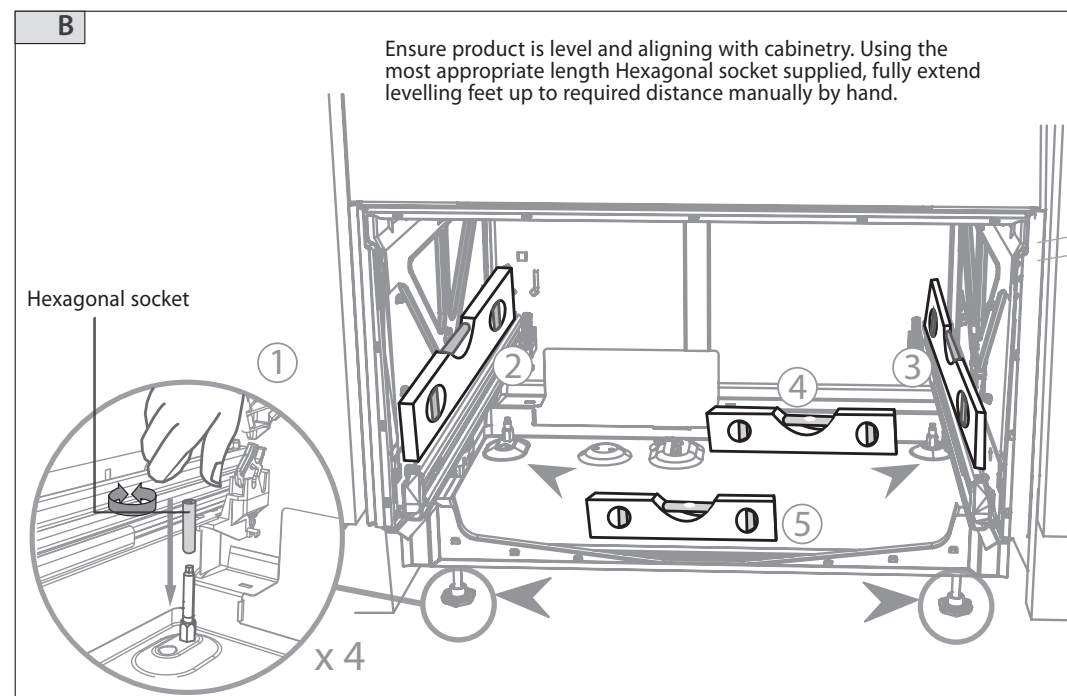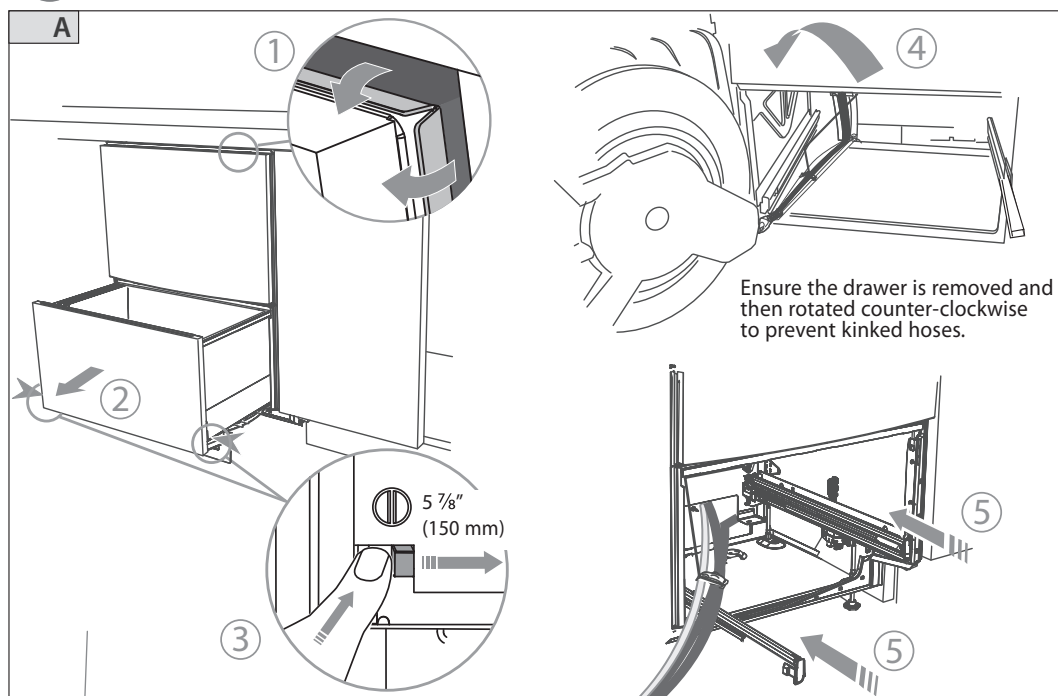

9 SECURE THE PRODUCT AND REFIT THE DRAWER


A

The mounting tabs are in pairs, one on each side of the product. At least two sets of tab pairs must be used. **A** and **B** tab pairs OR **B** and **C** tab pairs or all three pairs.


Ensure the sound insulation is repositioned correctly.

optional


max. 3/4" (19 mm)

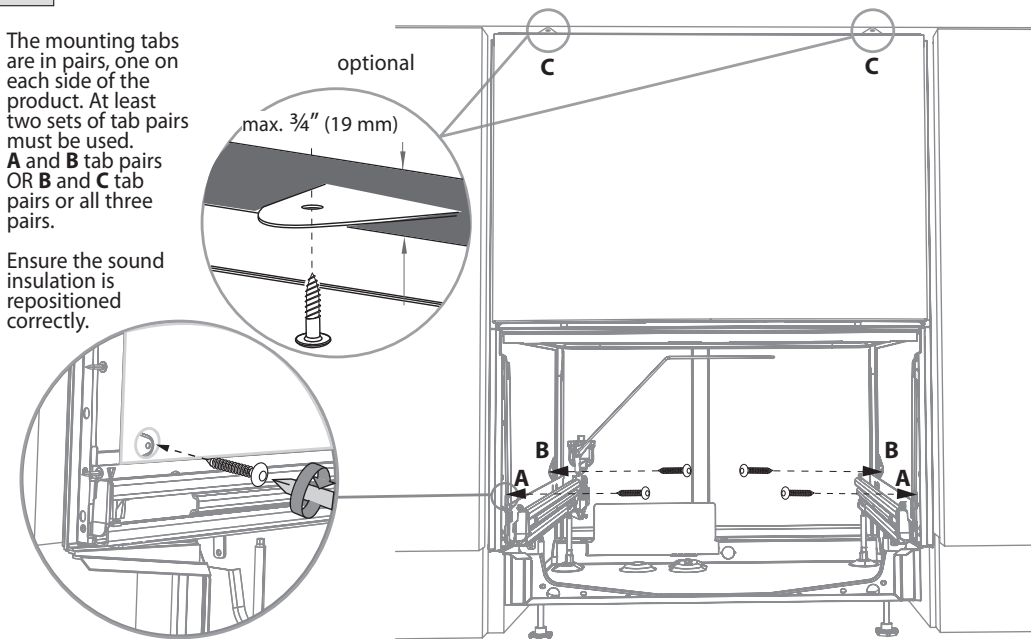


B

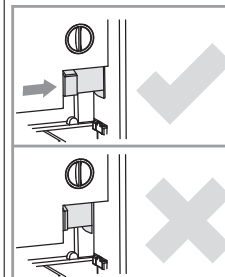

5 Ensure the drawer clips on both sides are reset.

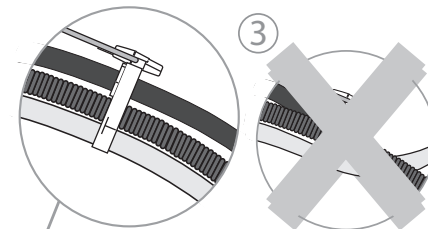


Before refitting the drawer, ensure the hoses are not twisted and the latches at the rear of each drawer runner are facing forward.

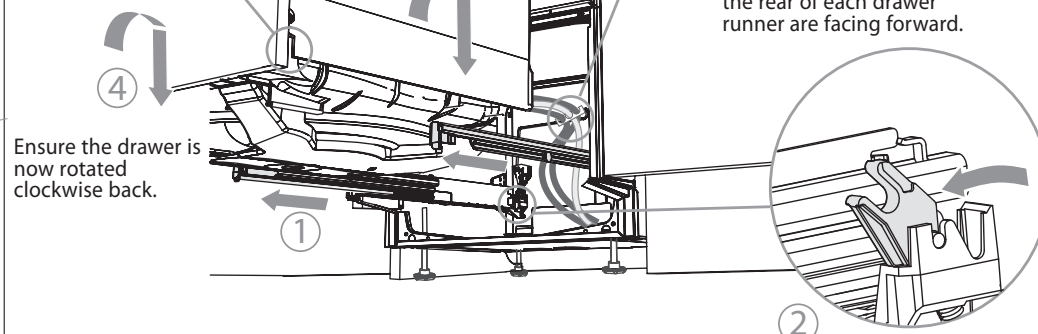


10 FIT THE TOEKICK







A

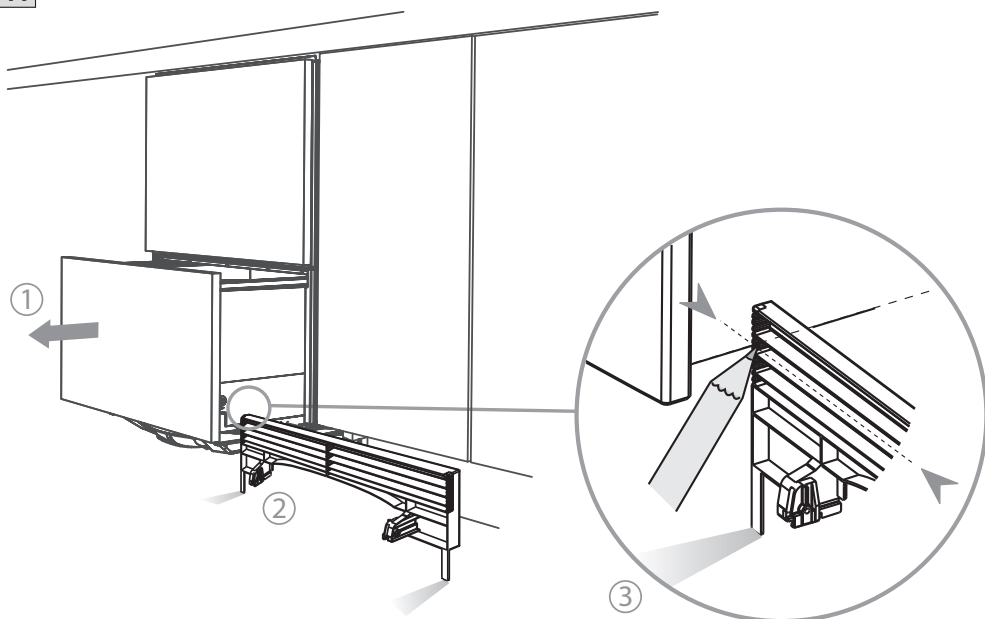

B

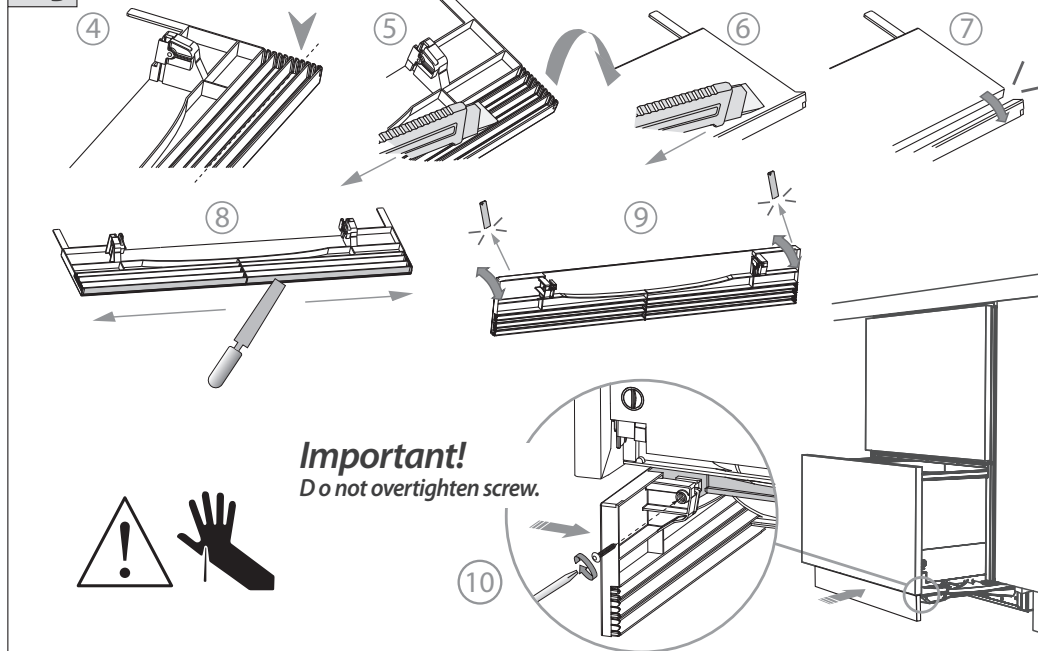


11 PLUMBING AND DRAINAGE OPTIONS

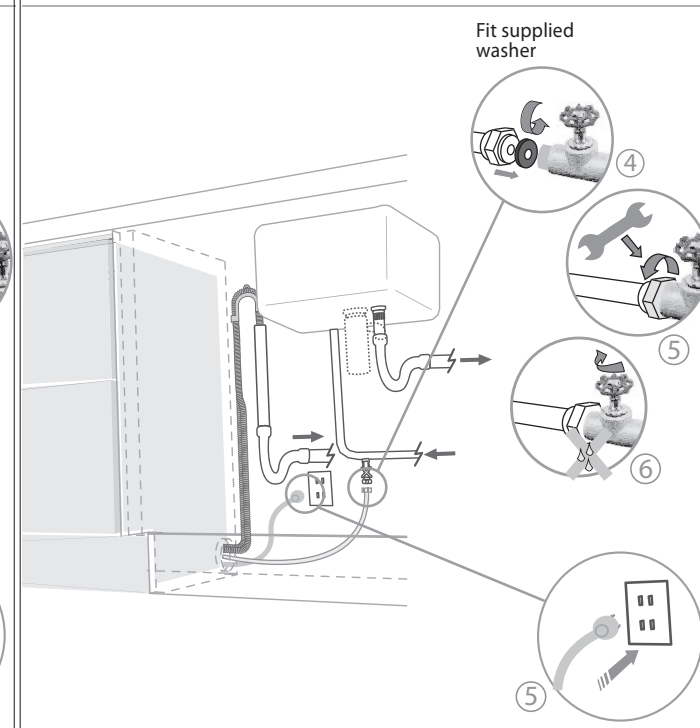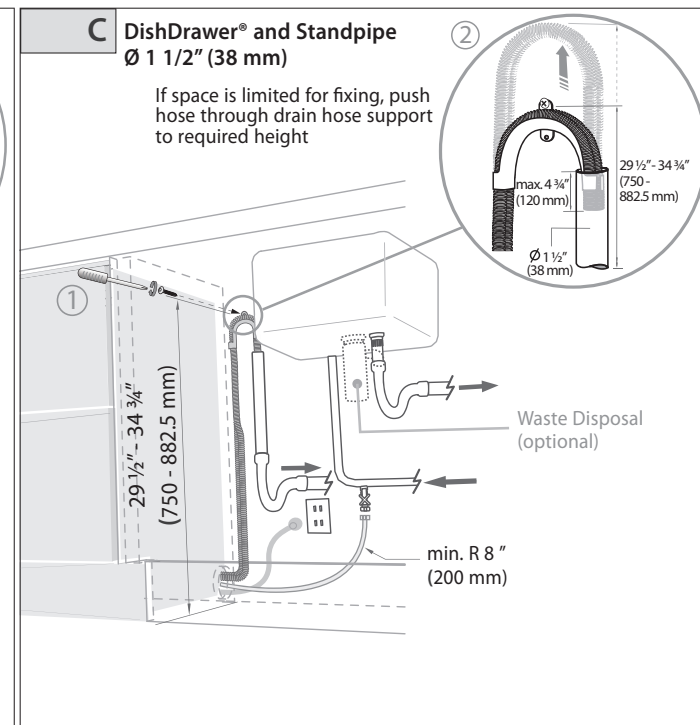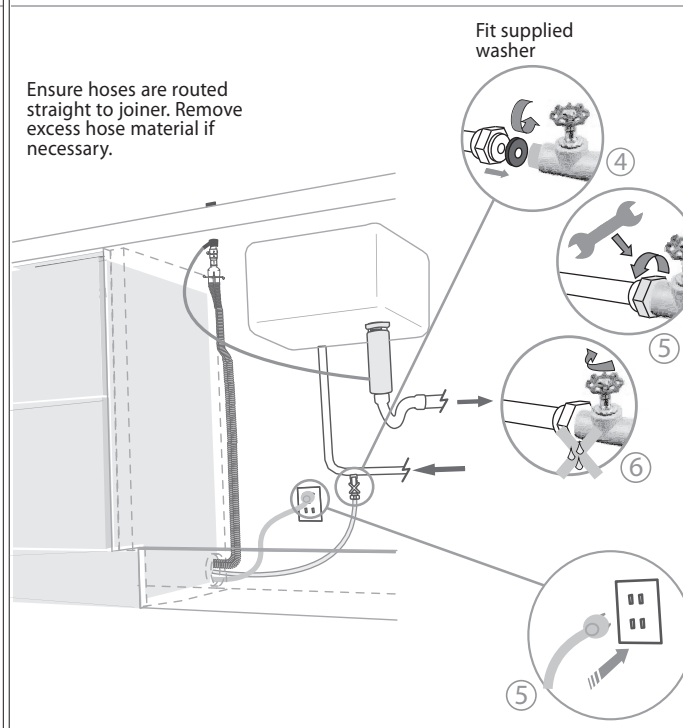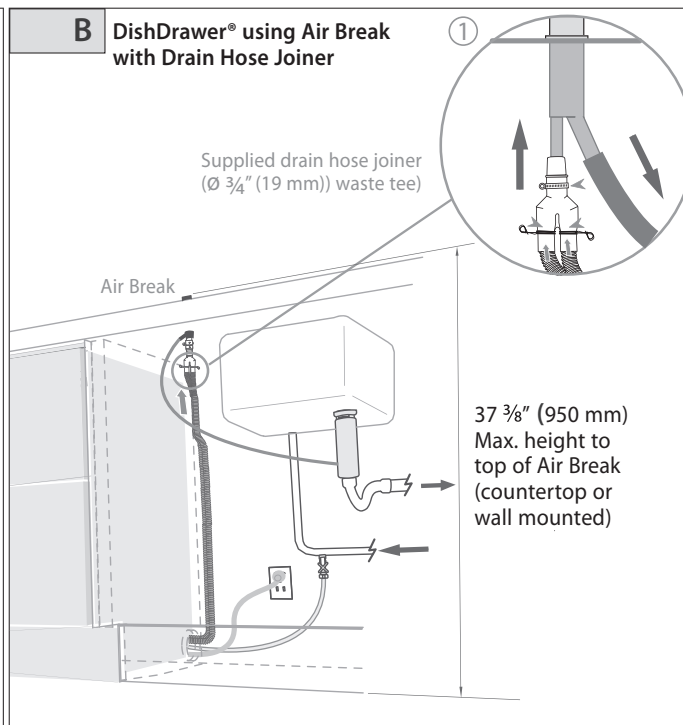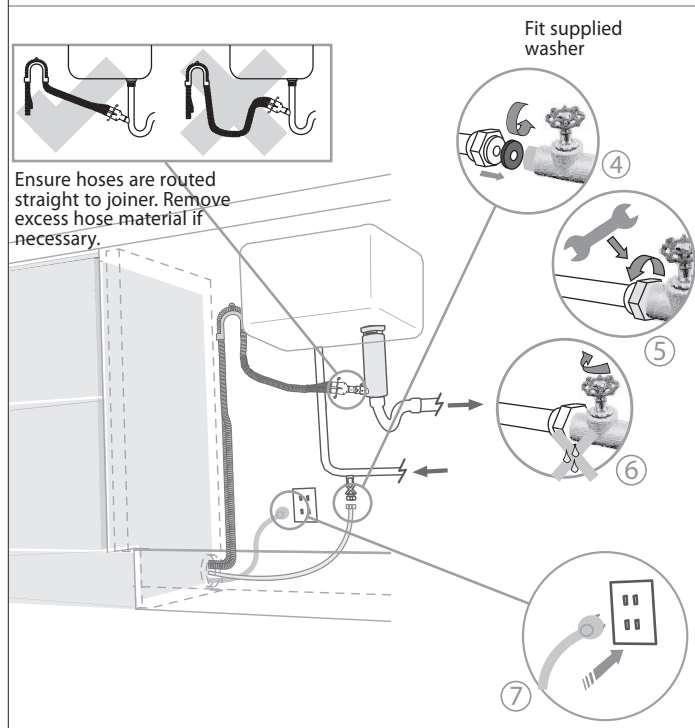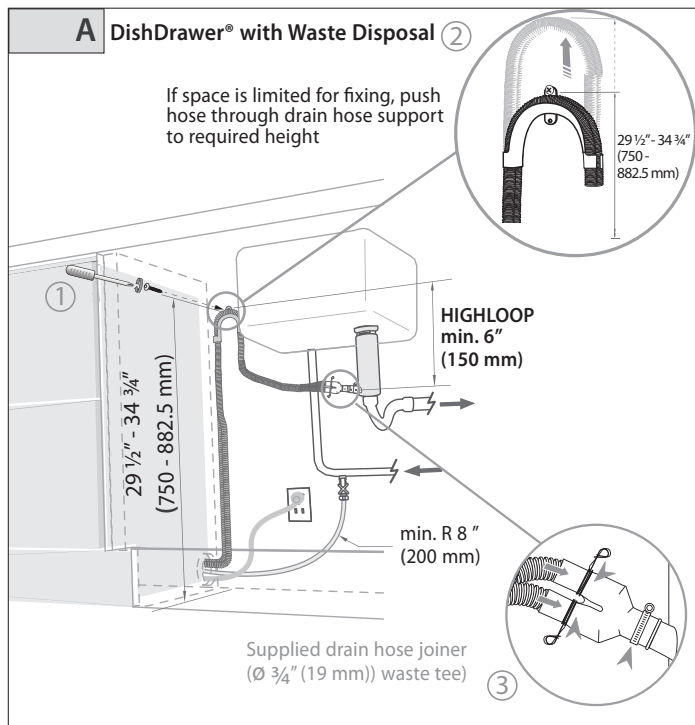

12 FINAL CHECKLIST

- ✓
- ☐ Check all parts are installed.
- ☐ Ensure product is level, securely fastened to the cabinetry and opens and closes freely. The DishDrawer® must be free to fully close with no resistance from the cabinetry.
- ☐ Ensure inlet hose to water supply has rubber washer fitted and is tightened a further half turn after seal contact.
- ☐ Ensure any knockouts or plugs in drain connection have been drilled out and drain connection has been made.
- ☐ The drain hose joiner must not support the weight of excess hoses. Keep hoses as fully extended as possible to prevent sagging. Any excess length of hose should be kept on the dishwasher side of the high loop.
- ☐ If using Plumbing and Drainage OPTION 1, ensure the Highloop is a minimum 6" (150 mm) higher than the drain hose joiner.
- ☐ Turn on the power and water supply. Then press the power button to turn the DishDrawer® on. The DishDrawer® should beep and Wash Programme lights light up.
- ☐ Check the spray arm(s) are in place and free to rotate.

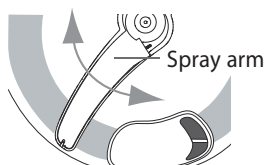

- ☐ Add three cups of water into the DishDrawer®. On the Wash Programme Selector Panel press Rinse and close the drawer(s). Start the programme by pressing the Start/Pause button.
- ☐ After the Rinse programme has finished, ensure machine has run and drained correctly.
- ☐ Check water supply and drainage connection for leakage.

Repeat for each Drawer.

13 TROUBLESHOOTING

- **Excessive water remaining above the filter plate, after the rinse cycle**
Check for kinked drain hoses or blocked waste connection, high loop not properly installed or drain hoses not routed correctly.
- **No water supply (⊗ shows on display)**
Check water is connected, turned on and the spray arm(s) is correctly fitted and free to rotate.
- **No lights come on when the drawer is opened**
Ensure power is connected and is switched on. Check if Auto Power option is on.
- **Water around water supply and drainage connections**
Check connections, existing plumbing and hoses for leaks. Check washer and hose clamps are correctly fitted.
- **If product is tipping**
Ensure the product is secured to the cabinetry.
- **If front panels are misaligned**
Check and relevel product. Check the cabinetry is square.
- **Drawer(s) don't close properly**
Ensure nothing is obstructing the drawer(s) from closing properly ie sound insulation, hoses or drawer latches.
- If a problem occurs, consult the Troubleshooting section of the User Guide.
- If after checking these points you still need assistance, please refer to the Service & Warranty book for warranty details and your nearest Authorized Service Centre, or contact us through our website, www.fisherpaykel.com.