

QUICK START GUIDE

DishDrawer™ dishwasher (Designer)


NZ AU US CA

Fisher & Paykel

Keep this document handy for easy reference.

- For detailed information on the features of your dishwasher, see your 'User guide'.
- Before using your dishwasher, make sure you read the full 'User guide', with special attention to the 'Safety and warnings' section.
- For contact information or if you require service, assistance or replacement parts, see the end of this document or your 'Service & warranty' booklet.

Your model

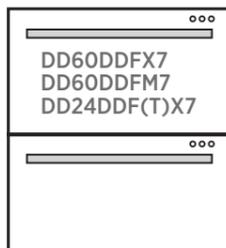

Note: each drawer in double models has its own controls and can run independently of the other drawer.




Operating instructions - Starting a wash




Discard scraps

Scrape large food particles off (e.g. bones, fruit stones) and remove any foreign objects (e.g. toothpicks, strings, paper).

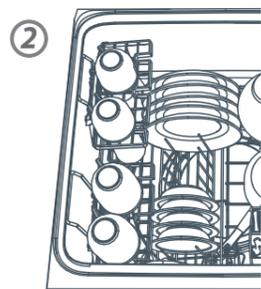


Load dishes carefully

To help with wash performance, arrange dishes so they are evenly spaced and not nesting.

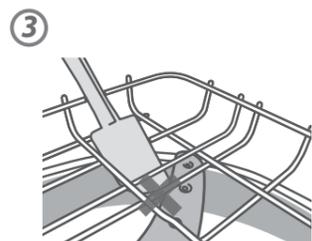

Check spray arm(s)

Ensure there are no items blocking the spray arm(s) from rotating.

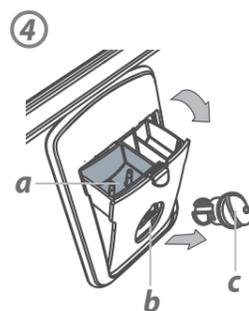


Add detergent and check rinse aid

Fill the detergent dispenser (a) with powdered detergent and close the dispenser door.

Important!

Do not place liquid detergent or tablets in the detergent dispenser.

If the indicator on its plug (c) glows bright red, refill the rinse aid dispenser (b) with liquid rinse aid. Make sure you then refit the rinse aid plug back into its original position.

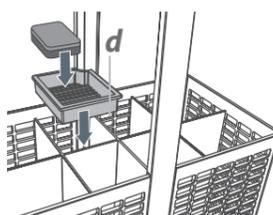

If using a tablet, place it in the cutlery basket (d) or at the bottom of the drawer.



Select wash

Power the dishwasher on then select wash program .



Start wash or set Delay start

Close the drawer and press .

Wash program controls

Wash program indicators

These show which program is selected.



Wash program selector

Press to scroll through the wash programs.

HEAVY

NORMAL

FAST

DELICATE

RINSE

ECO

STANDARD PROGRAMS - designed to clean and dry your dishes

HEAVY

Heavily soiled pots, pans and dishes.

NORMAL

Dishes that are quite heavily soiled or food soils that have been left to dry overnight

FAST

Lightly soiled dishes.

DELICATE

Lightly soiled and heat sensitive crockery.

RINSE

Prevents odors and soils drying on dishes.

ECO selector and indicator

Press if you'd like the program to use less energy. The indicator will glow red when an Eco program has been selected.

ECO PROGRAMS - designed to clean your dishes energy-efficiently

HEAVY ECO

Heavily soiled everyday dishes.

NORMAL ECO

Normal soiled dishes for optimum water and energy usage. The Energy Guide is based on this cycle.

FAST ECO

Lightly soiled, non-greasy dishes.

DELICATE ECO

Lightly soiled, non-greasy and heat sensitive crockery.

Main controls



Power on/off

Press to turn the dishwasher on or off.

Opening the drawer will automatically turn the dishwasher on for 30 seconds.



Start/Pause

Press to start, pause, or resume a wash.

After pausing a wash, wait for 3 beeps before opening the drawer. Forcing it open in mid-cycle may cause damage or injury.



Keylock

Keylock disables all the buttons – helpful when cleaning the dishwasher.

To activate, press and hold until you hear **one beep** (3 seconds). The light above the button will glow steadily.

Cancel wash/Cancel Delay start

Press to cancel a wash that has already started or to cancel the Delay start setting.

If there is any water in the drawer, it will automatically drain before the dishwasher turns off.

Set Delay start

- Press and hold until the light above it changes from blue to purple, then release. You are now in Delay start mode.
- Press briefly again, repeating as many times as the number of hours you want to delay the start of a wash by. The dishwasher will emit a beep for every hour of delay time (1 to 12 hours).

You have now set Delay start. The wash will start once the delay time is over, provided the drawer is closed.

Childlock

Childlock locks the drawer and disables all the buttons, preventing unauthorized use by children.

To activate, press and hold until you hear **two beeps** (5 seconds). The light above the button will glow steadily.

To cancel, press and hold until the light above it goes out.

After the wash


The dishwasher will beep six times to indicate the end of the wash program.

You may notice the following noises at the end of the wash. These are all part of normal operation:


- In double models, both drawers may be draining simultaneously.
- The drying fan may continue to run after a wash program has finished for a set time or until the drawer is opened. The fan assists with drying and uses negligible amounts of energy.

For best drying results, we recommend unloading the dishes once they have cooled.


Dos and don'ts of loading

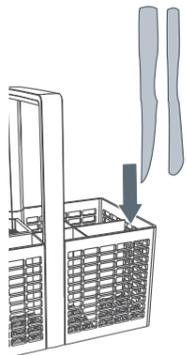


Sharp or pointed items must be placed horizontally or with sharp edges/points facing down to avoid risk of injury.

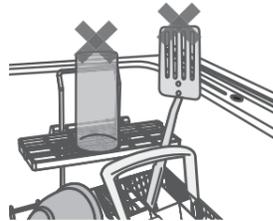


Protruding items will stop the internal lid of the drawer from sealing properly, which could result in a service call.

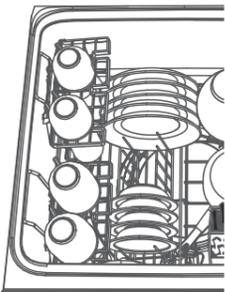


A neatly arranged load with evenly spaced dishes helps wash performance.

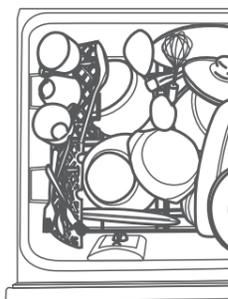


Overcrowding reduces wash performance.

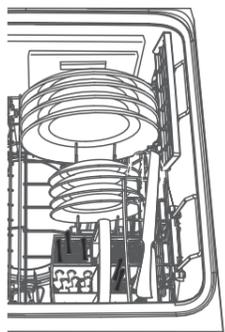


Ensure there is enough space between plates. Mix spoons, knives and forks within the cutlery basket to prevent them from nesting.

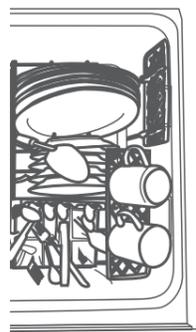

If plates and cutlery are nesting, they are less likely to be cleaned well.

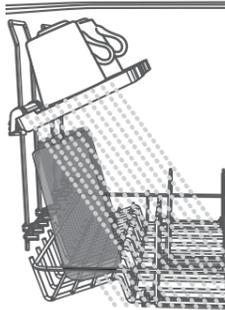

Ensure that water reaches all items on the adjustable racks.

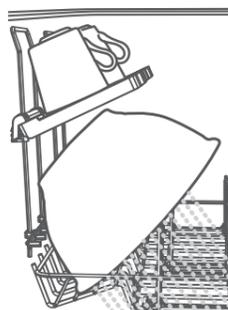

Dishware is blocking water from reaching items on the adjustable racks.

Preference options

You can change the setting of these options to suit your preferences or circumstances. We recommend selecting the most suitable settings before you start using your dishwasher.

Option	Rinse aid	Water softener*	Open drawer auto power-on	Beeps at end of wash	Closed drawer autolock
What does it do?	Regulates the amount of rinse aid dispensed. Reduce this setting if there is excess foam after a wash. Increase this setting if dishes are wet or streaky after a wash.	Refer to the 'Water softener' section of the 'User guide' for details.	Your dishwasher is factory-set to automatically power on for 30 seconds whenever you open the drawer. You can turn this setting off.	Your dishwasher is factory-set to beep six times at the end of a wash. You can turn this setting off.	When this setting is on, the drawer will automatically lock 30 seconds after it's closed. It can then be unlocked by pressing (unless Keylock or Childlock is also activated). Useful in boats or motor homes.

How to change the setting of an option

1 CHECK & OPEN

Check that there is no wash underway, press , then open the drawer.

2 ENTER MENU & SCROLL TO OPTION

To enter the menu: press the selector on top first with one finger, then the button on the front with another finger, hold both until one long beep sounds, then release.

- You are now in the Rinse aid option of the preference options menu.
- If you want to change the Rinse aid setting, go to step 3 now.
- If you want to change the setting of another option, you will need to scroll to that option first.

To scroll to the next option: press . To know which option you're in, watch the lights above and (see table below). When you have scrolled to the end of the sequence, it will start again with Rinse aid (after the lower tone).

Option	Rinse aid	Water softener*	Open drawer auto power-on	Beeps at end of wash	Closed drawer autolock
Which option am I in?	red unlit	blue unlit	purple red	blue red	red red
Possible settings	1 to 5	0 to 5	On or Off	On or Off	On or Off
Example	HEAVY NORMAL FAST DELICATE RINSE 4 indicators lit = setting is 4		On Off	HEAVY NORMAL FAST DELICATE RINSE Off	

3 CHANGE SETTING

Press to change the setting within an option. For example, to change the Rinse aid setting from 4 (factory default) to 2, you need to press 3 times.

4 SAVE SETTING & QUIT MENU

Press . This will save the new setting and quit the preference options menu.

*This option is disabled on models without water softener. It appears in the sequence of options but cannot be adjusted.

For more info

For detailed information on the features of your dishwasher

➤ see your 'User guide'

For warranty information

➤ see your 'Service and warranty' booklet

If you...

- have any questions or comments
- need a Fisher & Paykel authorized technician to service your product
- need replacement parts or accessories
- want to register your product

see your 'Service and warranty' booklet or contact us

NZ toll-free, 24/7 0800 372 273
 AU toll-free, 24/7 1300 650 590
 USA toll-free, 24/7 1 888 936 7872
 CA toll-free, 24/7 1 888 936 7872

www.fisherpaykel.co.nz
 www.fisherpaykel.com.au
 www.fisherpaykel.com
 www.fisherpaykel.ca