FISHER & PAYKEL

BLACK INDUCTION COOKTOP

CI122DTB, CI244DTB, CI304DTB & CI365DTB models

US CA
592123D 10.22

A WARNING!

Electric Shock Hazard

Failure to follow this advice may result in electric shock or death.



- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance.
- Connection to a good earth wiring system is essential and mandatory.
- Alterations to the domestic wiring system must only be made by a qualified electrician.

A WARNING!



Cut Hazard

Failure to use caution could result in injury.

• Take care: some edges are sharp.

READ AND SAVE THIS GUIDE

General Use

- · Read these instructions carefully before installing this product.
- · Save these instructions for the local electrical inspector's use.
- Installation must comply with your local building and local electricity regulations.
- Electrical installation (including electrical grounding) must be done in accordance with the National Electrical Code, ANSI/NFPA70 - latest edition and/or local codes.
 In Canada: Electrical installation must be in accordance with the current CSA C22.1 Canadian Electrical Codes Part 1 and/or local codes. Particular attention shall be given to the relevant requirements regarding ventilation.
- This appliance is to be installed and serviced only by Fisher & Paykel trained and supported service technician or qualified person.
- The manufacturer accepts no responsibility for the incorrect installation of appliances.
 Incorrect installation may result in personal injury, damage to property and may invalidate any warranty or liability claims.
- · Do not modify this appliance.
- Do not use or store flammable materials on or near this appliance.
- Packing elements (eg plastic bags, polystyrene foam, staples, packing straps etc) and tools should not be left around during and after installation, especially if they are within easy reach of children, as these may cause serious injuries.
- · Make sure you recycle the packaging material.
- Before disposing of any appliance, make sure that it can no longer be used and that all
 hazardous parts are removed or made harmless, so that children playing with the old
 appliance cannot harm themselves.
- Only genuine replacement parts may be used for servicing the appliance. These are available from your nearest Fisher & Paykel Service Center.
- This cooktop must be connected to the mains power supply only by a suitably qualified person.
- DO NOT use adapters, reducers, or branching devices when connecting the cooktop to the mains power supply to prevent overheating and fire.
- The power supply cable must not touch any hot parts and must be positioned so that its temperature will not exceed 165°F (75°C) at any point.
- This cooktop requires adequate supply of cool air to fully function. The base of the
 cooktop must have direct unrestricted ventilation to the room where the cooktop is
 installed. There must be a 3/16" (4mm) air gap at the front of the cooktop (see 'Venting
 Clearances' page).

-- PRIOR TO INSTALLATION -----

Before installation, please ensure the following:


- The countertop is made of a heat resistant material.
- The power supply cable is not accessible through cupboard doors or drawers.
- There is adequate flow of cool air from the cabinetry to the base of the cooktop. You
 may ventilate from adjacent cupboards, but ensure that the available air supply will not
 be restricted.
- The ventilation area must be at least two 2" (50mm) diameter holes or of equivalent area.
- The isolating switch is easily accessible by the customer.
- Use heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surfaces surrounding the cooktop.
- DO NOT install the cooktop directly above a dishwasher, fridge, freezer, washing machine or clothes dryer, as the humidity may damage the cooktop electronics.
- If the cooktop is installed above an oven, ensure the oven has a built-in cooling fan.
- Ensure the installation complies with all clearance requirements and applicable standards and regulations.
- · Consult your local building authorities and by-laws if in doubt regarding the installation.
- To eliminate the risk of burns or fire by reaching over heated surface units, cabinet storage space located above the surface units should be avoided. If cabinet storage is to be provided, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" (127mm) beyond the bottom of the overhead cabinets.

During installation, please ensure the following:

- Seal the exposed bare edges of the cutout with an oil-based paint or moisture-proof
 polyurethane to prevent possible moisture creeping between the cooktop trim and
 the countertop.
- Take extreme care not to chip, crack, or break the top glass surfaces during installation.
 A heavy metal tool or part accidentally dropped on the glass could damage it.
- If, after following the instructions given, correct performance cannot be achieved, please contact your nearest Fisher & Paykel Service Centre, Customer Care, or contact us through our local website listed at the end of this document.

WARNING!

The owner carries all risk for flush mounting the cooktop. The owner must ensure the cooktop has been cut out from the countertop before servicing can be carried out. Fisher & Paykel will not be liable for any costs associated with removing or replacing a flush-mounted and/or sealed-in product, nor for repairing any damage that may be incurred by doing this.

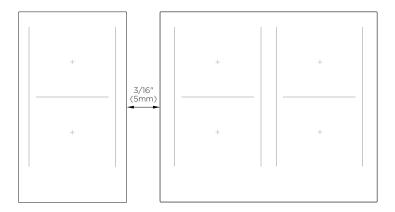

We recommend installing products in separate cutouts with a minimum distance of 3/16" (5mm) between the glass edges. If installing multiple products within the same cutout adjacent to each other, a joining strip kit is required. This kit creates a non non-visual, structural join between the two cooktops that ensures the weight of both cooktops is sufficiently supported. Joining strip kits can be purchased separately through an authorised Fisher & Paykel dealer. Visit fisherpaykel.com for more information.

The minimum clearance measurements for different products may vary. Always use the greater distance when pairing different products (eg an induction model and wok burner model).

COMPONENTS REQUIRED

PARTS SUPPLIED



Clamping brackets (4) and screws (4)



Foam tape (1)

TOOLS REQUIRED









Wrench

Crosshead screwdriver

Silicone


Cutter








Router

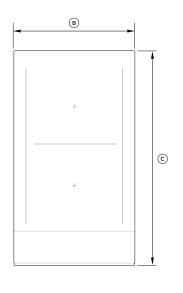

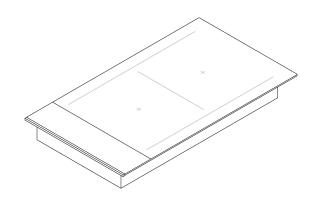

PLAN

ISOMETRIC






FRONT


PROFILE

PRODUCT DIMENSIONS	CI122DTB	
PRODUCT DIMENSIONS	IN	ММ
Overall height of cooktop	2 3/4	69
Overall width of cooktop	11 13/16	300
© Overall depth of cooktop	20 7/8	530
Height of chassis	2 1/2	63
(E) Width of chassis	10 1/4	260
(F) Depth of chassis	18 7/8	480
Height of cooktop glass*	1/4	6
Depth of front overhang of cooktop glass**	1/2	13
Depth of rear overhang of cooktop glass	1 7/16	37
① Depth of side overhang of cooktop glass	3/4	20

^{*} Includes flange and tape

^{**} Includes front trim

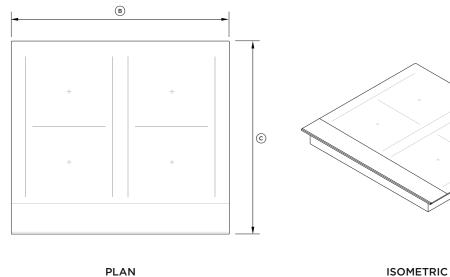

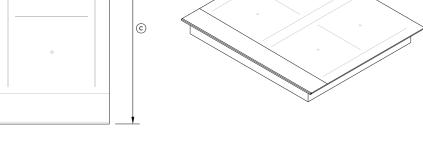

PROFILE

1 F E

PRODUCT DIMENSIONS	CI244DTB	
PRODUCT DIMENSIONS	IN M	
Overall height of cooktop*	3 7/8	98
Overall width of cooktop	23 5/8	600
© Overall depth of cooktop	20 7/8	530
Height of chassis	3 11/16	93
Width of chassis	21 3/4	552
© Depth of chassis	18 7/8	480
Height of cooktop glass**	1/4	6
Depth of front overhang of cooktop glass***	1/2	13
① Depth of rear overhang of cooktop glass	1 1/2	38
Depth of side overhang of cooktop glass	15/16	24


^{*} Includes conduit junction

 
D

FRONT

^{**} Includes flange and tape

^{***} Includes front trim

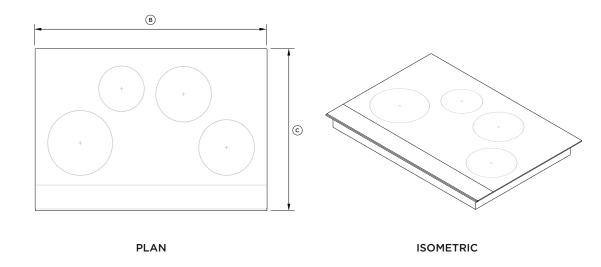



FRONT	PROFILE


	CI3	1304DTB
PRODUCT DIMENSIONS	IN	ММ
Overall height of cooktop*	3 7/8	98
Overall width of cooktop	29 15/16	760
© Overall depth of cooktop	20 7/8	530
Height of chassis	3 11/16	93
Width of chassis	28 7/16	722
Depth of chassis	18 7/8	480
Height of cooktop glass**	1/4	6
Depth of front overhang of cooktop glass***	1/2	13
① Depth of rear overhang of cooktop glass	1 7/16	37
① Depth of side overhang of cooktop glass	3/4	19


^{*} Includes conduit junction

^{**} Includes flange and tape

^{***}Includes front trim

 PROFILE

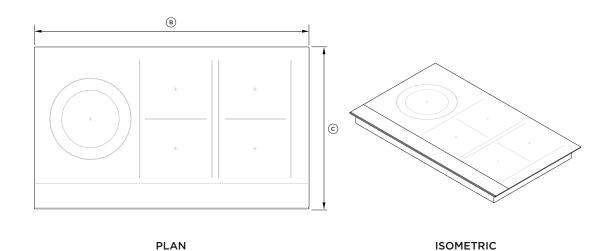




PRODUCT DIMENSIONS		CI365DTB
PRODUCT DIMENSIONS	IN MI	
Overall height of cooktop*	3 3/8	86
Overall width of cooktop	35 7/16	900
© Overall depth of cooktop	20 7/8	530
Height of chassis	3 3/16	81
Width of chassis	33 3/4	858
(F) Depth of chassis	19 1/16	484
Height of cooktop glass**	1/4	6
Depth of front overhang of cooktop glass***	1/2	13
① Depth of rear overhang of cooktop glass	1 5/16	33
Depth of side overhang of cooktop glass	13/16	21

^{*} Includes conduit junction

FRONT


^{**} Includes flange and tape

^{***}Includes front trim

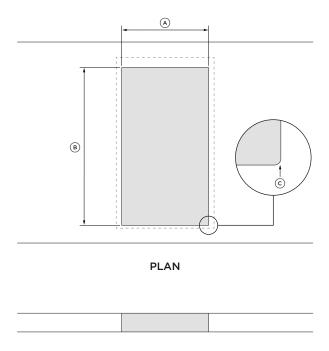


FRONT

CUTOUT DIMENSIONS		
CUTOUT DIMENSIONS	IN	ММ
Overall width of cutout	10 5/8	270
Overall depth of cutout	19 5/16	490
© Corner radius of cutout	max 3/8	max 10

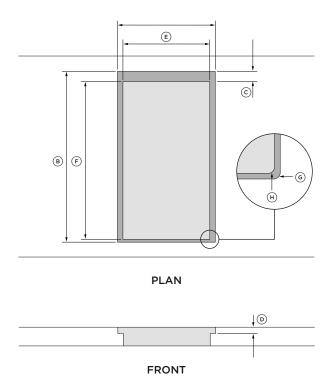


CUTOUT DIMENSIONS	CI122DTB	
CUTOUT DIMENSIONS	IN	ММ
Overall width of routered recess	12	305
Overall depth of routered recess	21 1/16	535
© Offset overhang allowance	1 5/16	34
Height of routered recess	1/4	6
© Width of cutout	10 5/8	270
© Depth of cutout	19 5/16	490
© Corner radius of routered recess	max 1/16	2
Corner radius of cutout	max 3/8	10

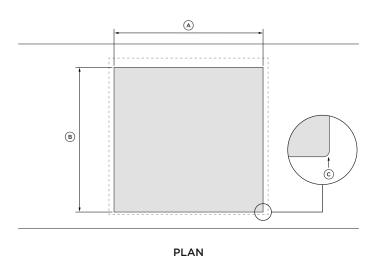



FRONT

CUTOUT DIMENSIONS	SIGNIC CONTRACTOR OF THE PROPERTY OF THE PROPE	
CUTOUT DIMENSIONS	IN	ММ
Overall width of cutout	22 1/16	560
Overall depth of cutout	19 5/16	490
© Corner radius of cutout	max 3/8	max 10

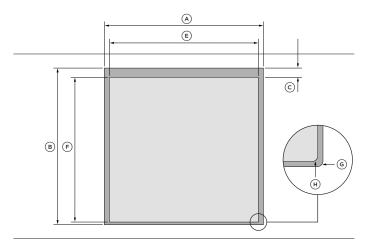


PLAN



FRONT

CUTOUT DIMENSIONS	С	CI244DTB	
CUTOUT DIMENSIONS	IN	ММ	
Overall width of routered recess	23 13/16	605	
Overall depth of routered recess	21 1/16	535	
© Offset overhang allowance	1 5/16	34	
Height of routered recess	1/4	6	
© Width of cutout*	22 1/16	560	
© Depth of cutout*	19 5/16	490	
© Corner radius of routered recess	max 1/16	2	
Corner radius of cutout	max 3/8	10	

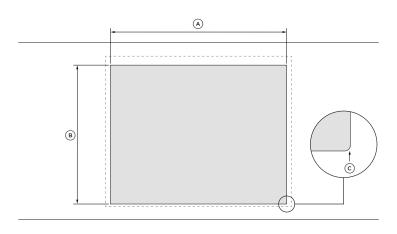


PLAN



FRONT

CUTOUT DIMENSIONS	С	
CUTOUT DIMENSIONS	IN	ММ
Overall width of cutout	28 3/4	730
Overall depth of cutout	19 5/16	490
© Corner radius of cutout	max 3/8	max 10

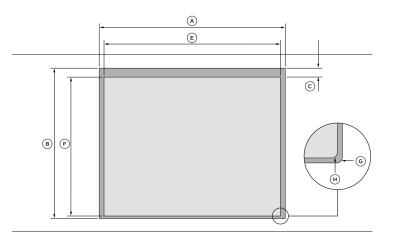


PLAN



FRONT

CUTOUT DIMENSIONS	CI304DTB	
CUTOUT DIMENSIONS	IN	мм
Overall width of routered recess	30 1/8	765
Overall depth of routered recess	21 1/16	535
© Offset overhang allowance	1 5/16	34
Height of routered recess	1/4	6
© Width of cutout	28 3/4	730
© Depth of cutout	19 5/16	490
Corner radius of routered recess	max 1/16	2
Corner radius of cutout	max 3/8	10

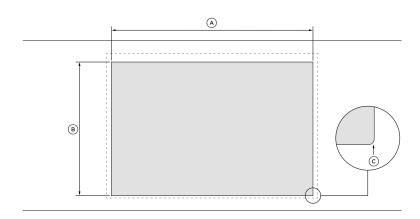


PLAN



FRONT

CUTOUT DIMENSIONS	С	
COTOOT DIMENSIONS	IN	ММ
Overall width of cutout	34 1/4	870
Overall depth of cutout	19 7/16	494
© Corner radius of cutout	max 3/8	max 10

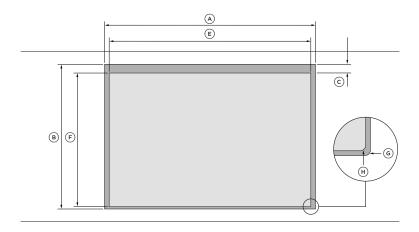



PLAN



FRONT

CUTOUT DIMENSIONS		CI365DTB	
CUTOUT DIMENSIONS	IN	ММ	
Overall width of routered recess	35 5/8	905	
Overall depth of routered recess	21 1/16	535	
© Offset overhang allowance	1 3/16	30	
Height of routered recess	1/4	6	
© Width of cutout	34 1/4	870	
© Depth of cutout	19 7/16	494	
© Corner radius of routered recess	max 1/16	2	
Corner radius of cutout	max 3/8	10	

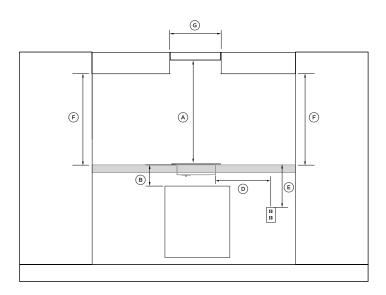

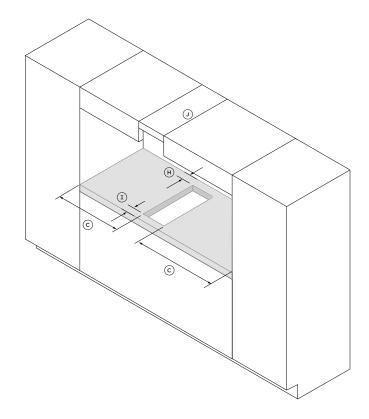


CLEARANCE DIMENSIONS —		C122DTB	
CLEARAN	CE DIMENSIONS	IN	ММ
UnprProte	m clearance from glass surface to: otected overhead cabinet centered above cooktop*† ected overhead cabinet centered above cooktop*† e hood**	30 24 25 5/8	762 610 650
_	m clearance below top of countertop to top of any ce, companion product or obstruction below cooktop***	2 9/16	65
_	m clearance from side edges of cutout to nearest stible surface	1 3/16	30
_	um distance from right edge of cutout to center tion box	30	762
Minimu	m clearance below top of countertop to junction box	9	230
_	m clearance from countertop to overhead cabinet rectly above the cooktop)	23 1/2	450
_	m distance between overhead cabinets ed above cooktop)	11 13/16	300
_	m clearance from rear edge of cutout to nearest stible surface	1 9/16	39
Minimuof cour	m clearance from front edge of cutout to front edge ater	1 3/8	35
① Maximu	ım depth of overhead cabinetry	13	330


^{*}To eliminate the risk of burns or fire by reaching over heated surface units, cabinet storage space located above the surface units should be avoided. If cabinet storage is to be provided, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" (127mm) beyond the bottom of the cabinets.

 $^{^{\}dagger}$ (a) = 30" (762mm) minimum clearance between the top of the cooking surface and the bottom of an unprotected wood or metal cabinet; or (a) = 24" (610mm) minimum when bottom of wood or metal cabinet is protected by not less than ½"-thick flame-retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015"-thick stainless steel, 0.024"-thick aluminum, or 0.020"-thick copper.

^{**}Refer to your range hood installation guide for further details on clearances.

^{***}Clearance stated is for proud installation of the cooktop. For flush installations, the height of the cooktop glass should be added to the clearance.

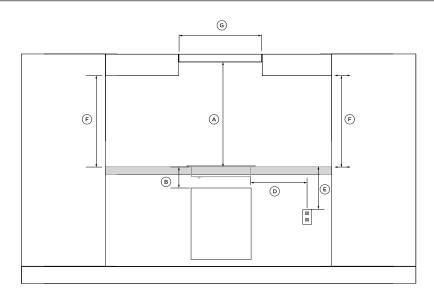

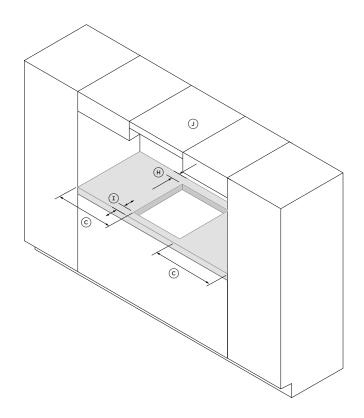


		CI244DTB	
CL	EARANCE DIMENSIONS	IN	ММ
A	Minimum clearance from glass surface to: • Unprotected overhead cabinet centered above cooktop*† • Protected overhead cabinet centered above cooktop*† • Range hood**	30 24 25 5/8	762 610 650
В	Minimum clearance below top of countertop to top of any appliance, companion product or obstruction below cooktop***	3 3/4	95
©	Minimum clearance from side edges of cutout to nearest combustible surface	1 3/16	30
D	Maximum distance from right edge of cutout to center of junction box	30	762
E	Minimum clearance below top of countertop to junction box	9	230
F	Minimum clearance from countertop to overhead cabinet (not directly above the cooktop)	23 1/2	450
G	Minimum distance between overhead cabinets (centered above cooktop)	23 5/8	600
Н	Minimum clearance from rear edge of cutout to nearest combustible surface	1 9/16	39
I	Minimum clearance from front edge of cutout to front edge of counter	1 3/8	35
J	Maximum depth of overhead cabinetry	13	330


^{*}To eliminate the risk of burns or fire by reaching over heated surface units, cabinet storage space located above the surface units should be avoided. If cabinet storage is to be provided, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" (127mm) beyond the bottom of the cabinets.

 $^{^+}$ (A) = 30" (762mm) minimum clearance between the top of the cooking surface and the bottom of an unprotected wood or metal cabinet; or (A) = 24" (610mm) minimum when bottom of wood or metal cabinet is protected by not less than $^+$ 4"-thick flame-retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015"-thick stainless steel, 0.024"-thick aluminum, or 0.020"-thick copper.

^{**}Refer to your range hood installation guide for further details on clearances.

^{***}Clearance stated is for proud installation of the cooktop. For flush installations, the height of the cooktop glass should be added to the clearance.

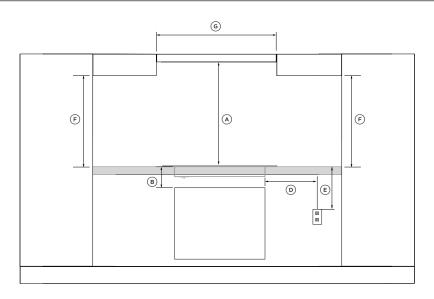

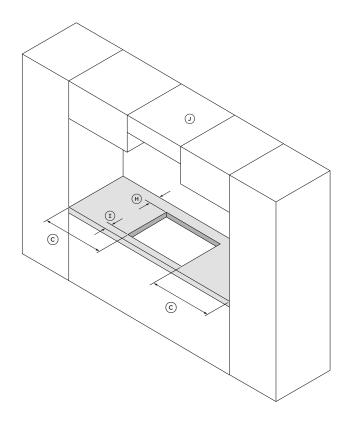


		CI304DTB	
CL	EARANCE DIMENSIONS	IN	ММ
A	Minimum clearance from glass surface to:		
	 Unprotected overhead cabinet centered above cooktop*† 	30	762
	Protected overhead cabinet centered above cooktop*†	24	610
	Range hood**	25 5/8	650
B	Minimum clearance below top of countertop to top of any appliance, companion product or obstruction below cooktop***	3 3/4	95
©	Minimum clearance from side edges of cutout to nearest combustible surface	1 3/16	30
D	Maximum distance from right edge of cutout to center of junction box	30	762
E	Minimum clearance below top of countertop to junction box	9	230
F	Minimum clearance from countertop to overhead cabinet (not directly above the cooktop)	23 1/2	450
G	Minimum distance between overhead cabinets (centered above cooktop)	29 15/16	760
Н	Minimum clearance from rear edge of cutout to nearest combustible surface	1 9/16	39
I	Minimum clearance from front edge of cutout to front edge of counter	1 3/8	35
J	Maximum depth of overhead cabinetry	13	330


^{*}To eliminate the risk of burns or fire by reaching over heated surface units, cabinet storage space located above the surface units should be avoided. If cabinet storage is to be provided, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" (127mm) beyond the bottom of the cabinets.

 $^{^{\}dagger}$ (A) = 30" (762mm) minimum clearance between the top of the cooking surface and the bottom of an unprotected wood or metal cabinet; or (A) = 24" (610mm) minimum when bottom of wood or metal cabinet is protected by not less than $^{\prime}$ 4"-thick flame-retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015"-thick stainless steel, 0.024"-thick aluminum, or 0.020"-thick copper.

^{**}Refer to your range hood installation guide for further details on clearances.

^{***}Clearance stated is for proud installation of the cooktop. For flush installations, the height of the cooktop glass should be added to the clearance.

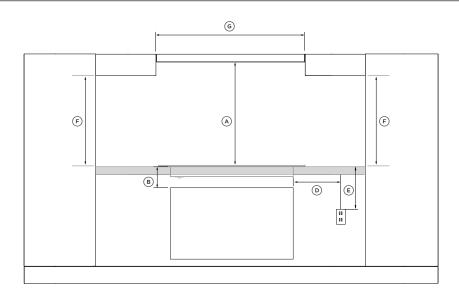

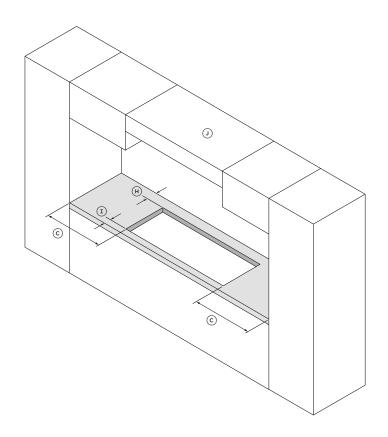

CLEARANCE DIMENSIONS —		CI365DTB	
		ММ	
Minimum clearance from glass surface to: Unprotected overhead cabinet centered above cookt Protected overhead cabinet centered above cookt Range hood**	•	762 610 650	
Minimum clearance below top of countertop to top of appliance, companion product or obstruction below	3 3/8	85	
© Minimum clearance from side edges of cutout to near combustible surface	1 3/16	30	
Maximum distance from right edge of cutout to cent of junction box	ter 30	762	
© Minimum clearance below top of countertop to junct	tion box 9	230	
Minimum clearance from countertop to overhead call (not directly above the cooktop)	binet 23 1/2	450	
Minimum distance between overhead cabinets (centered above cooktop)	35 7/16	900	
(*) Minimum clearance from rear edge of cutout to near combustible surface	rest 1 3/8	35	
 Minimum clearance from front edge of cutout to from of counter 	nt edge 1 3/8	35	
Maximum depth of overhead cabinetry	13	330	

^{*}To eliminate the risk of burns or fire by reaching over heated surface units, cabinet storage space located above the surface units should be avoided. If cabinet storage is to be provided, the risk can be reduced by installing a range hood that projects horizontally a minimum of 5" (127mm) beyond the bottom of the cabinets.


 $^{^+}$ (A) = 30" (762mm) minimum clearance between the top of the cooking surface and the bottom of an unprotected wood or metal cabinet; or (A) = 24" (610mm) minimum when bottom of wood or metal cabinet is protected by not less than $^+$ 4"-thick flame-retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015"-thick stainless steel, 0.024"-thick aluminum, or 0.020"-thick copper.

^{**}Refer to your range hood installation guide for further details on clearances.

^{***}Clearance stated is for proud installation of the cooktop. For flush installations, the height of the cooktop glass should be added to the clearance.

DRAWER OR OTHER OBSTRUCTION


This cooktop requires adequate supply of cool air to fully function. The base of the cooktop must have direct unrestricted ventilation to the room where the cooktop is installed. There must be a 3/16" (4mm) air gap at the front of the cooktop.

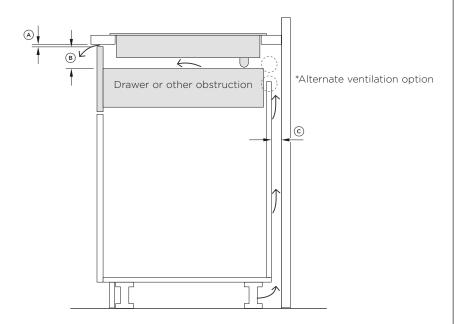

CLEARANCE DIMENSIONS		IN	ММ
Minimum ventiliation gap at the front of the cooktop		3/16	4
	CI122DTB	2 1/2	65
Minimum clearance below top of countertop	CI244DTB	3 3/8	95
to top of any appliance, companion product or obstruction below cooktop	CI304DTB	3 3/8	95
obstruction below cooktop	CI365DTB	3	85
© Minimum ventiliation gap at the rear of the cooktop		13/16	20

^{*}If ventilation gap at the rear of the cooktop is not possible, add two \times 2" diameter (50mm) holes in the side wall to allow adequate cooling air.

OVEN WITH COOLING FAN

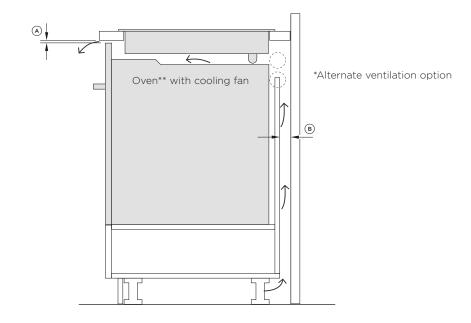


CLEARANCE DIMENSIONS	IN	ММ
Minimum ventiliation gap at the front of the cooktop	3 /16	4
Minimum ventiliation gap at the rear of the cooktop	13/16	20


^{*}If ventilation gap at the rear of the cooktop is not possible, add two x 2'' diameter (50mm) holes in the side wall to allow adequate cooling air.

^{**}Some ovens require installation in a sealed box. Please refer you oven installation guide for more information.

(4)

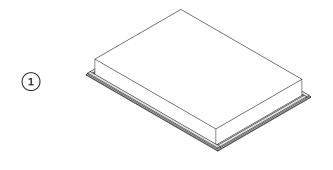


Turn the cooktop upside down on a protective cover.

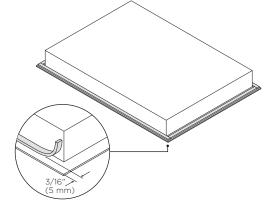


Apply adhesive foam seal around the glass overhang, 3/16" (5mm) from the edge of the glass.

Ensure the adhesive side facing is down to form a continuous seal around the cooktop.

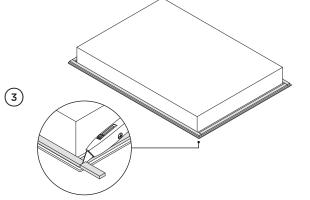


Trim the excess sealing material using a sharp cutter or trimmer knife.

Take care not to damage the benchtop.

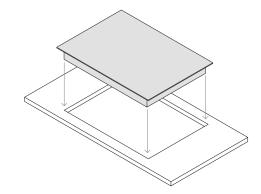

Gently lower the cooktop into the cutout ensuring you have access below the countertop to fit and secure the brackets.

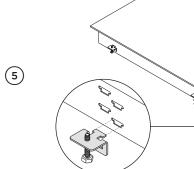

Locate the side brackets* to the appropriate slots on the cooktop chassis. The correct slot height is determined by the thickness of your countertop.




Tighten all screws to secure the cooktop to the countertop.
Ensure cooktop is level.

(2)


^{*}The number of brackets varies based on your cooktop model.

(6)

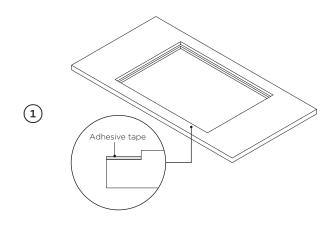


Prepare the countertop for flush installation. Use a router to cut out the edges of the countertop to specified depth 3/16" (5mm). Attach an adhesive tape along

the edges of the routered recess.

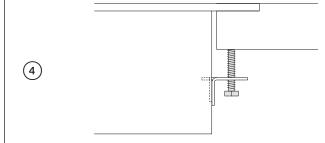

Tighten all screws to secure the cooktop to the countertop.


Ensure cooktop is level.

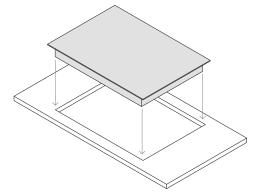


(2)

3


Gently lower the cooktop into the cutout ensuring you have access below the countertop to fit and secure the brackets.

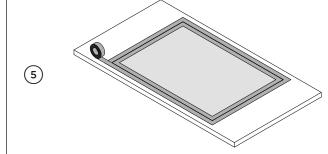

Mask off the area to be siliconed ensuring both the cooktop and countertop are protected.

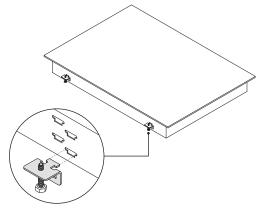

Locate the side brackets* to the appropriate slots on the cooktop chassis. The correct slot height is determined by the thickness of your countertop.

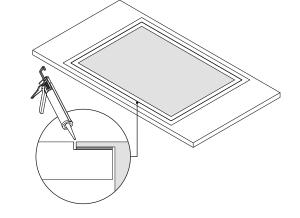

Apply silicone in the gap between benchtop and cooktop Wipe off excess silicone.


^{*}The number of brackets varies based on your cooktop model.

Before connecting the cooktop to the mains power supply check that:

- The domestic wiring system is suitable for the power drawn by the cooktop.
- The voltage corresponds to the value given in the rating plate.
- The power supply cable sections can withstand the load specified on the rating plate.


MODEL	MAX. CURRENT DRAW	MAX. LOAD	VOLTAGE
Cl122DTB*	14A	3400W	208V
	16A	3840W	240V
CI244DTB	26A	6400W	208V
	30A	7400W	240V
CI304DTB	28A	6500W	208V
	32A	7400W	240V
CI365DTB	39A	9600W	208V
	45A	11000W	240V


^{*}The CI122DTB is supplied with a cable. This must be wired into a suitably rated plug, permanent connection outlet or power isolator.

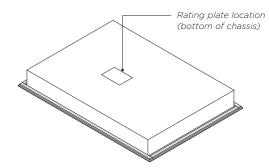


Rating plate label can be found on the bottom of the cooktop chassis.


CI244DTB, CI304DTB & CI365DTB MODELS

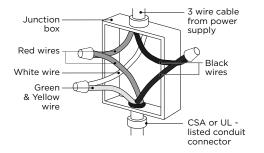

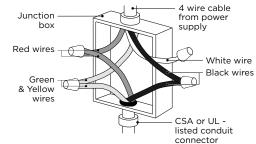

------CI122DTB MODEL

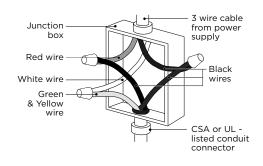

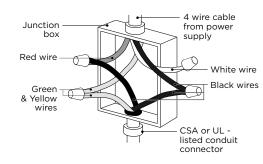

INSTALLER CHECKLIST

Read all installation guidance in this document to see if the unit has been correctly inst	alled.
Ensure that installation has been completed correctly before use.	

Ensure that installation has been completed correctly before use.			
TO BE COMPLETED BY THE INSTALLER			

Ensi	ure that:		
	Is the cooktop earthed?		To check that the 'hot surface' indicators function correctly, turn off all the zones. Is H displayed in all the cooking zone displays?.
	Check that there is an adequate and constant flow of cool air from the cabinetry to the base of the cooktop.		Have you demonstrated the basic operation to the customer?
	Check that the power supply cable is not accessible via cupboard doors or drawers and that it is NOT touching the cooktop. Is the cooktop clamped down securely? Check that all the cooking zones function correctly. Place suitable pans with water in them on each zone, then turn all of them on to a high setting. Is the water heating?		 Explain the following to the customer: 1 The importance of taking note of the safety warnings at the beginning of the user guide, especially for persons with pacemakers or other electrical implants. 2 The 'hot surface' indicators. 3 Using induction suitable cookware only. 4 The pan detection feature.
	Are all touch controls and displays functioning?		
Com	nplete and keep for safe reference:		
Mod	del		
Seria	al No.		
Purc	chase Date		
Purc	chaser		
Dea	ler Address		
Insta	aller's Name		
Insta	aller's Signature	_	
Insta	allation Company		
Insta	allation Date		

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2022. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.