

---

# 60CM BUILT-IN CONVECTION OVEN FIRST USE

---

Get to know your appliance	3
Set up the oven	5
Set a cooking function and temperature	6
Set the timer	8
Set cooking duration	9
Schedule cooking end time	10
Adjust cooking duration and end time	11
Set oven preferences	12
Get to know cooking functions	13
Clean and maintain your oven	14

**FISHER & PAYKEL**

**NZ AU GB SG**

**60CM BUILT-IN CONVECTION OVEN**

---

**CONTEMPORARY**

OB60SBCGX5, OB60SBCGB5, OB60SBCPGX5, OB60SBCPGB5

## GET TO KNOW YOUR APPLIANCE



 
### How to get the best results from your oven

- Download the app to access extra information and recipe ideas.
- Set up and condition the oven before you use it.
- Remove accessories and position shelves before heating oven.
- Clean the oven regularly.
- Register your product to get streamlined service support.



Air fry tray and roasting dish not shown.

# GET TO KNOW YOUR APPLIANCE

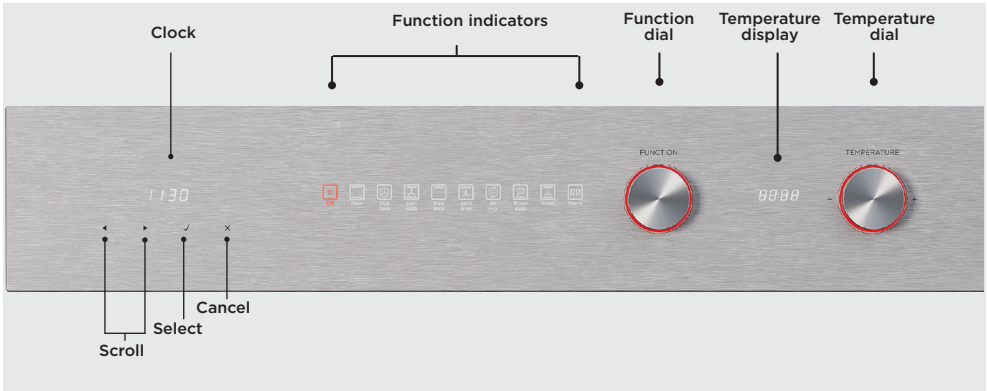

## CONTROL PANEL

<b>Clock</b>	Displays the time, timer, cooking start time, duration and end time.
<b>Function indicators</b>	Indicators light up to show which function is selected.
<b>Function dial</b>	Turn the function control dial to select a cooking function. Available functions vary between oven models.
<b>Temperature display</b>	Displays the set temperature.
<b>Temperature dial</b>	Turn the temperature control dial to set the cooking temperature.
<b>Scroll</b>	Press <b>LEFT</b> ◀ or <b>RIGHT</b> ▶ to scroll or adjust settings.
<b>Select</b>	Press <b>SELECT</b> ✓ to confirm selections and settings.
<b>Cancel</b>	Press <b>CANCEL</b> ✕ to exit.

 
## SET UP THE OVEN

Before using your oven, check there is no plastic or cardboard left inside it, then set the clock. We recommend conditioning your oven for 1 hour before initial use to remove manufacturing residue. A small amount of smoke may be present. Ensure the kitchen is well ventilated.



### Remove cable ties

1. Remove any packaging and the cable ties that are securing the shelves and trays.

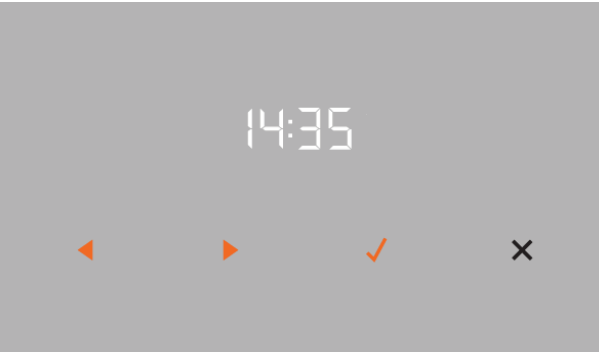


### Set the clock

2. Press **RIGHT** ► to switch between *24hr* to *12hr* clock. Press **SELECT** ✓ to confirm.

Use **LEFT** ◀ or **RIGHT** ► buttons to set the time.

 Press **SELECT** ✓ to confirm.

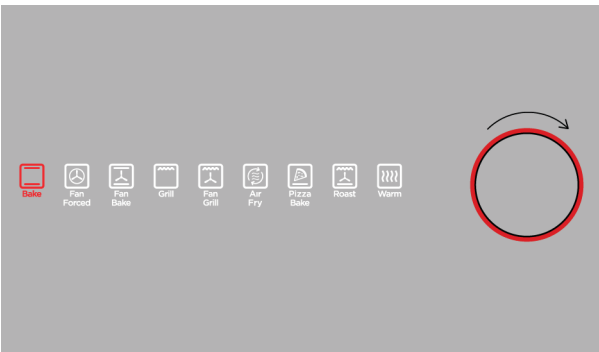

### Condition the oven

3. Select **BAKE** □, then set the oven at 200°C for 30 minutes.

Next, set to **GRILL** □ for 5 minutes, then **FAN FORCED** □ for 20 minutes.

 
Wipe clean once oven has cooled.

## SET A COOKING FUNCTION AND TEMPERATURE


The oven will begin to heat when you set a function and a temperature. To prevent burning, place food in the oven once it reaches the set temperature.



1. Position the shelves at the desired height. Your oven has six available shelf positions.

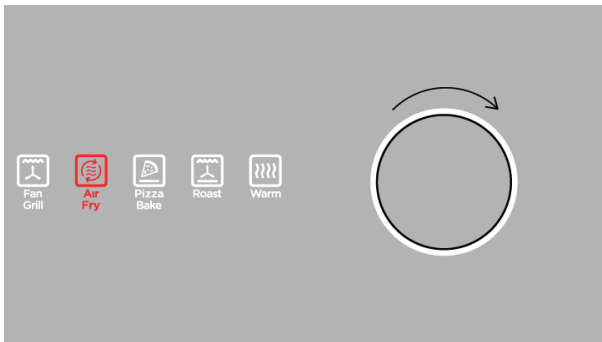

 
2. Turn the function control dial to select a cooking function. The dial halo will glow white.

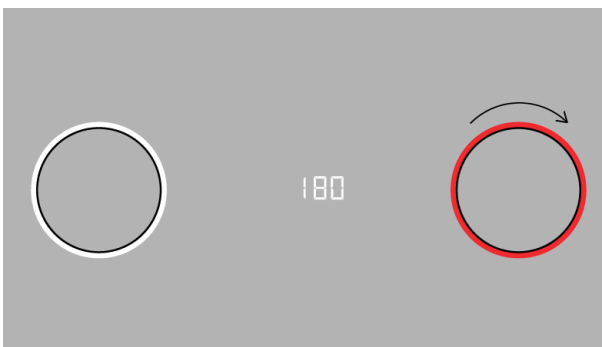

3. Turn the temperature dial to set a temperature. While the oven heats, the dial will glow red and the display will alternate between current temperature and set temperature.

The oven will beep and the dial will glow white when the oven reaches the set temperature.

## SET A COOKING FUNCTION AND TEMPERATURE

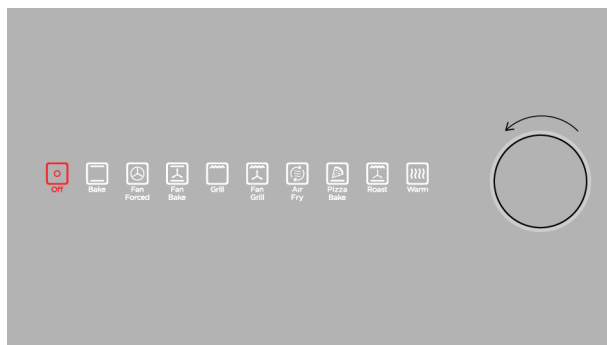 


### Turning the oven off

Use the function dial to select **OFF** to turn the oven off.

## SET THE TIMER



 Use the timer to keep track of cooking times or as a general timer for up to 4 hours. The timer counts down in minutes until the last hour, then it counts down in seconds. The timer does not turn the oven off.

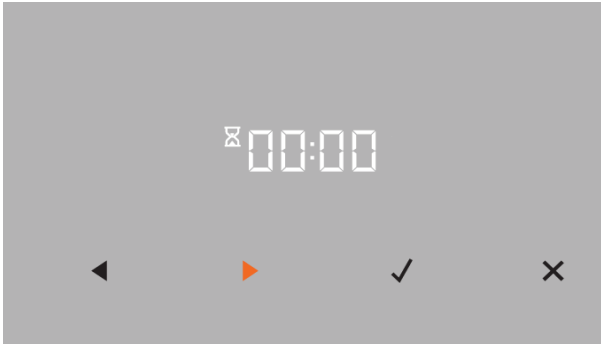

1. Press **RIGHT** ► to access **TIMER** ⌚ settings. The timer indicator will flash.

Press **SELECT** ✓ to confirm.

 


2. Press **LEFT** ◀ or **RIGHT** ► to set the time. Press and hold to adjust more quickly.

Press **SELECT** ✓ to confirm the time.

Press **CANCEL** ✕ to see the clock while the timer is set.

Press **RIGHT** ► to go back to the timer.

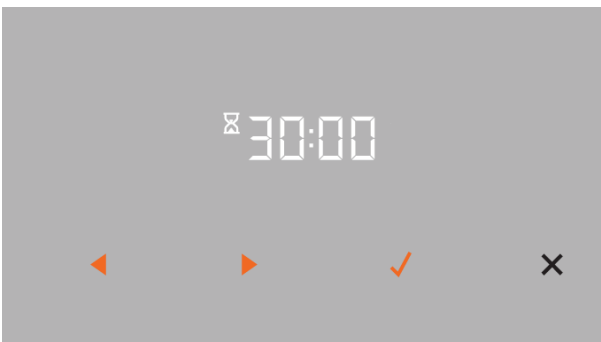

### Adjust or cancel the timer

3. Press **SELECT** ✓ while the timer is displayed. Use **LEFT** ◀ or **RIGHT** ► to adjust the timer. Press **SELECT** ✓ to confirm.

 
An alert will sound when the timer ends. Press any button to stop the alert.

To cancel the timer, press and hold **CANCEL** ✕ until the clock displays and the **TIMER** ⌚ indicator turns off.

## SET COOKING DURATION




Use **COOKING DURATION** to program cooking to run for a set duration. Cover food or place it on a lower shelf in the oven to prevent food burning as the oven preheats. Not recommended with **GRILL**, **FAN GRILL** or **AIR FRY**.

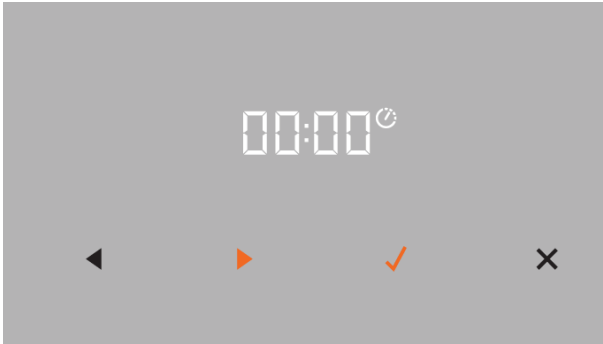

### Set a cooking duration

1. Place food in the oven, then press **RIGHT** ► twice to access **COOKING DURATION** ⌚ settings. The cooking duration indicator will flash.

 
Press **SELECT** ✓ to confirm.

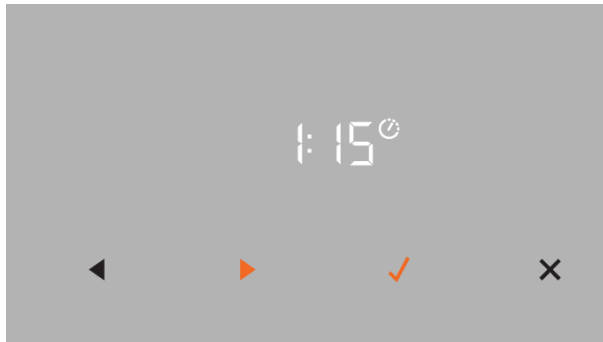

2. Use **RIGHT** ► to set the time. to set the desired cooking duration. Include preheating time if required.

Press **SELECT** ✓ to confirm.

 The function dial will flash.

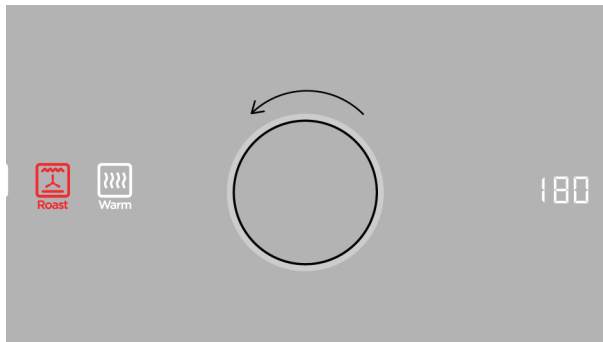

3. Set a function and temperature to start cooking immediately.


The oven will turn off after the set duration.

To schedule the cook to start later, set an end time.


## SCHEDULE COOKING END TIME



 
Use **COOKING END TIME** to schedule cooking to end at a set time. Cover food or place it on a lower shelf in the oven to prevent food burning as the oven preheats. Not recommended with **GRILL** or **AIR FRY**.

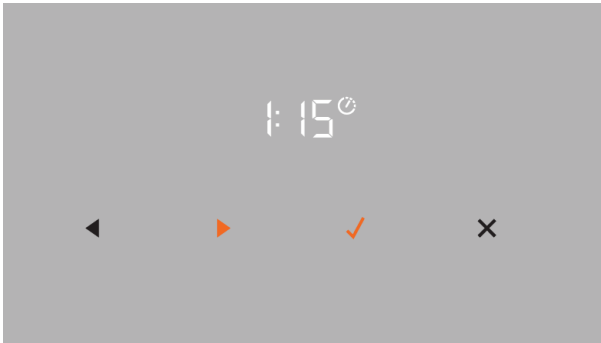

 1. Place food in the oven, then press **RIGHT** ►, twice, to access **COOKING DURATION** ⌚ settings. Use **RIGHT** ► to set the desired cooking duration. Include preheating time if required. Press **SELECT** ✓ to confirm.

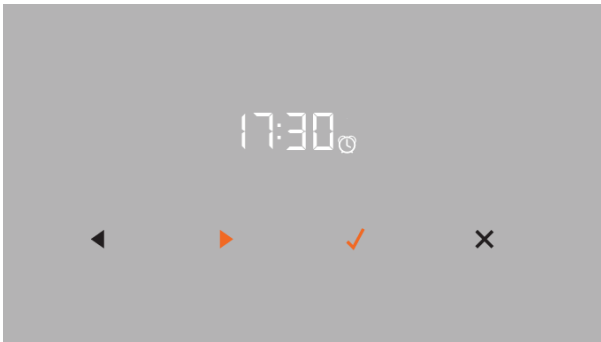

 
2. Press **RIGHT** ► to access **COOKING END TIME** ⌚ settings. Press **SELECT** ✓ to confirm. Use **RIGHT** ► to set an end time for when you want the food to be ready. Press **SELECT** ✓ to confirm.

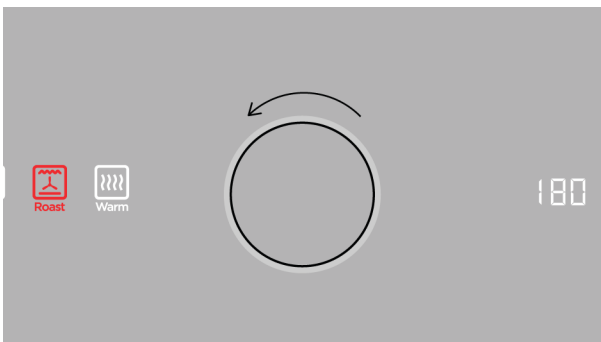

3. Set a function and temperature. The oven will turn on when the clock reaches the relevant start time (**COOKING END TIME** minus **COOKING DURATION**). It will turn off at the set end time.

## ADJUST COOKING DURATION AND END TIME

 
You can check, adjust or cancel cooking duration and end time at any stage before and during cooking.

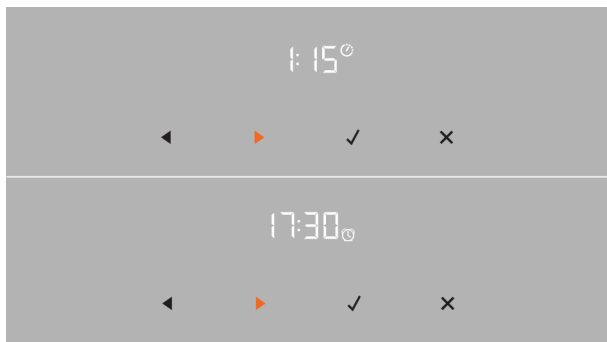

### Check duration or end time

Press **LEFT** ◀ or **RIGHT** ▶ to scroll and check the set **COOKING DURATION** ⌚ or **COOKING END TIME** ⌚.

 
Press **CANCEL** X to see the clock while duration or end time is set.

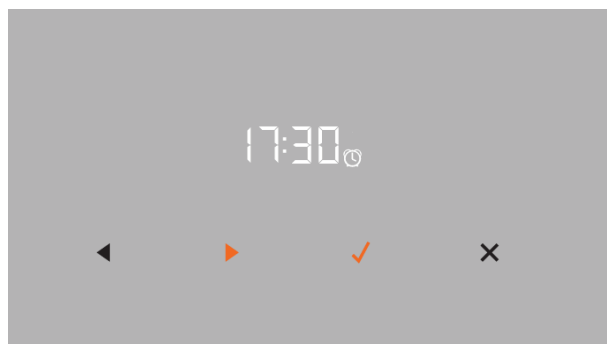

### Adjust duration or end time

Press **RIGHT** ▶ to scroll to **COOKING DURATION** ⌚ or **COOKING END TIME** ⌚. Press **SELECT** ✓ to confirm the setting you want to adjust.

 Use **LEFT** ◀ or **RIGHT** ▶ to adjust the time. Press **SELECT** ✓ to confirm new settings.

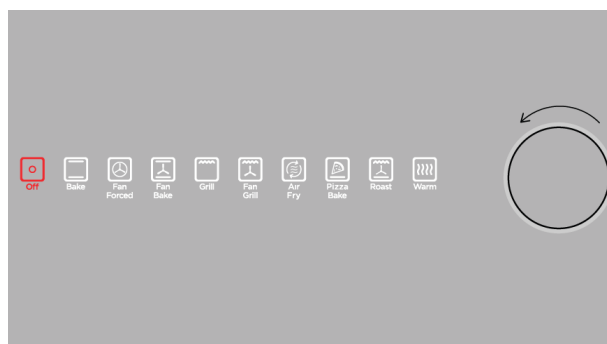


### Cancel duration and end time

Turn the function dial to **OFF** to cancel duration and end time.

## SET OVEN PREFERENCES

 
You can set certain features of the oven to suit your preferences. The display must be showing the clock, and the function dial must be set to off before you can change preferences.

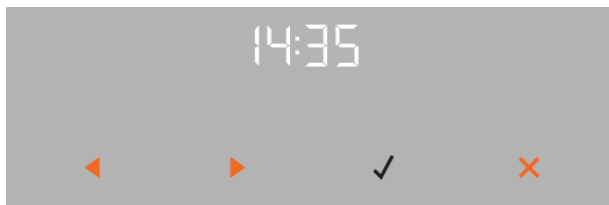

### Access preferences menu

Press **CANCEL** X twice to get to the clock screen if required.

 Press and hold **LEFT** ◀ and **RIGHT** ▶ buttons together to access the preference menu.

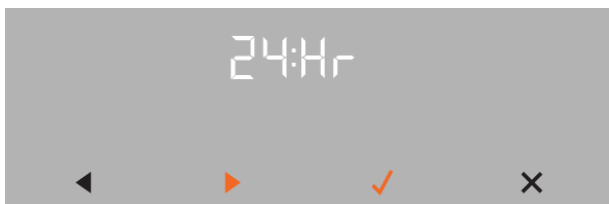

### Set 12-hour or 24-hour clock

Press **RIGHT** ▶ to switch between 24:hr and 12:hr display for the clock.

 
Press **SELECT** ✓ to confirm.



### Set Celcius or Fahrenheit

Press **RIGHT** ▶ to scroll to temperature settings, then press **RIGHT** ▶ to select Celcius (°C) or Fahrenheit (°F).

Press **SELECT** ✓ to confirm.

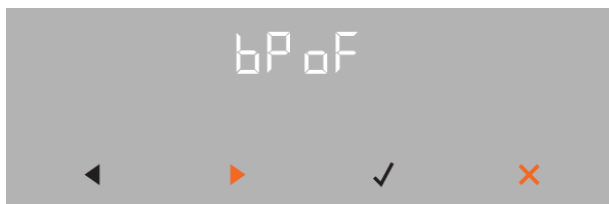

### Turn tones and beeps ON/OFF

Press **RIGHT** ▶ to scroll to audio settings, then press **RIGHT** ▶ select **ON** (bP on) or **OFF** (bP oF).

Press **SELECT** ✓ to confirm.



### Turn oven light ON/OFF

Press **RIGHT** ▶ to scroll to audio settings, then press **RIGHT** ▶ select **ON** (bP on) or **OFF** (bP oF).












Press **SELECT** ✓ to confirm.

## GET TO KNOW COOKING FUNCTIONS

Select the function that best suits your cooking needs. Available functions vary between models.

For models without **BAKE** or **CLASSIC BAKE**, use **FAN FORCED**.

Use all the functions with the oven door closed.

FUNCTION	DESCRIPTION
 Bake	Upper and lower heat is naturally distributed for even browning. Moisture is retained for delicate foods.
 Fan forced	Rear heat is circulated by the fan for even browning. Excess moisture is removed for crisp results.
 Fan bake	Upper and lower heat is evenly circulated by the fan for fast browning. Excess moisture is removed for crisp results.
 Grill	Intense upper heat focused on the centre of the oven. Ideal for quick top browning. Excess moisture is removed for crisp results. No preheating required.
 Fan grill	Intense upper heat is circulated to ensure even surface browning and crisp results.
 Air fry	Intense upper and lower heat is circulated to ensure even surface browning and crisp results. Ideal for browning foods cooked from frozen, or that would usually be deep fried.
 Pizza bake	Lower heat is evenly circulated by the fan. Ideal for pizza that requires gentle top browning. Excess moisture is removed for crisp bases. For best results, cook on a pizza stone preheated for at least 1 hour.
 Roast	Intense searing followed by evenly distributed upper and lower heat. Proteins will have a crisp, browned exterior and a succulent interior. No preheating required.
 Warm	Upper and lower heat is naturally distributed at low heat to keep cooked food hot. Plates and serveware can be warmed through.
 Slow cook	Rear heat is circulated by the fan for gentle cooking. No preheating required.
 Self clean	This is not a cooking function. Scan the QR code in 'Clean and maintain your oven' to see the Care and maintenance guide for details.

## CLEAN AND MAINTAIN YOUR OVEN

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

### **Clean door glass after each use**

Allow oven to cool, then wipe the door glass clean after each use to prevent stains becoming baked on.

### **Clean inside of the oven after each use**

Allow oven to cool, then clean up any easy-to-reach spills, food or grease stains to prevent them becoming baked on.

### **Run regular self clean cycles (pyrolytic models)**

Run a **SELF CLEAN** cycle as required to remove food residue and buildup in the oven.



### **Care and maintenance information**

Scan the QR code or visit [fisherpaykel.com](http://fisherpaykel.com) and search for your model code.

OB60SBCPGX5, OB60SBCPGB5, OB60SBCGX5, OB60SBCGB5

