

---

# INDUCTION COOKTOPS INSTALLATION GUIDE

---

Components required	3
Accessing your product specifications	4
Prior to installation	5
Proud installation	7
Flush installation	9
Electrical specifications	11
Installer checklist	12

**FISHER & PAYKEL**

**USCA**

433237A 02.26

**36"**

CI365ZZDTB5

**30"**

CI304ZZDTB5

**24"**

CI244ZZDTB5

**12"**

CI122ZZDTB5

## COMPONENTS REQUIRED

---

### TOOLS

#### Not supplied

- Silicone gun
- Phillips screwdriver
- Level
- Box cutter
- Router
- Hex key
- Spanner
- Masking tape
- Duct tape
- Black installations:  
Black, matte finish silicone rated to  
100°C or above
- Grey installations:  
Grey, matte finish silicone rated to  
100°C or above

### PARTS

#### Supplied and required

- Securing brackets (4)
- Clamp screws (4)
- Foam tape (1)

## ACCESSING YOUR PRODUCT SPECIFICATIONS

---



---

For full product, cabinetry and service specifications, refer to the Planning Guide. To access the Planning Guide, scan the QR code or visit [fisherpaykel.com/specify](https://fisherpaykel.com/specify). Search by appliance type, product name or model code.

For installation support please contact the Fisher & Paykel design support team at [designsupport@fisherpaykel.com](mailto:designsupport@fisherpaykel.com)

---

## PRIOR TO INSTALLATION

---



[fisherpaykel.com/specify](https://fisherpaykel.com/specify)

1. Refer to the Planning Guide for cabinetry, cavity, panel and service specifications.



2. Carefully remove products from cartons. Set aside on a protected surface.



3. Ensure all products and accessories are present.

## PRIOR TO INSTALLATION

---



4. Dispose of packaging responsibly.

## PROUD INSTALLATION

---



**1.** Turn the cooktop upside down on a protective cover.



**2.** Apply adhesive foam seal around the glass overhang, 5mm from the edge of the glass.

Ensure the adhesive side facing is down to form a continuous seal around the cooktop.



**3.** Trim the excess sealing material using a sharp cutter or trimmer knife.

Take care not to damage the bench top.

## PROUD INSTALLATION

---



**4.** Ensure you have access below the countertop to fit and secure the brackets.

Gently lower the cooktop into the cutout.



**5.** Locate the side brackets.

Insert the brackets at the slot height to suit your countertop thickness.



**6.** Tighten all screws to secure the cooktop to the countertop.

Do not overtighten  
Ensure cooktop is level.

## FLUSH INSTALLATION

---



1. Prepare the countertop for flush installation.  
Attach an adhesive tape along the edges of the routed recess.




2. Ensure you have access below the countertop to fit and secure the brackets.  
Gently lower the cooktop into the cutout




3. Locate the side brackets.  
Insert the brackets at the slot height to suit your countertop thickness.

## FLUSH INSTALLATION

---

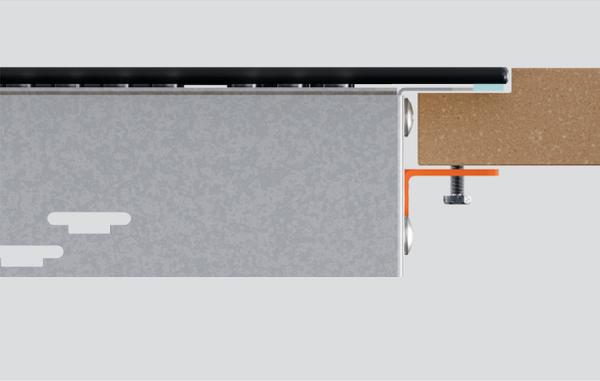

**4.** Tighten all screws to secure the cooktop to the countertop. Do not overtighten. Ensure cooktop is level.

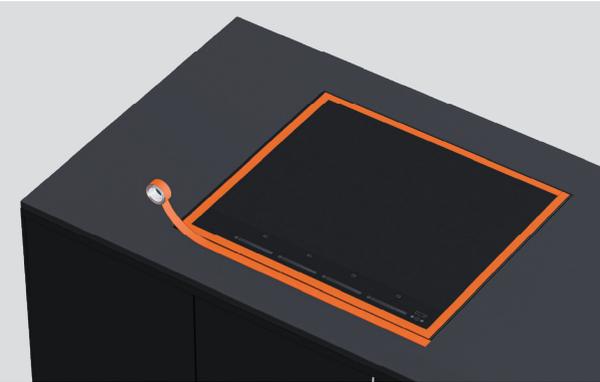

**5.** Apply masking tape to the cooktop glass and then the bench top,



**6.** Apply silicone in the gap between bench top and cooktop. Wipe off excess silicone.

## ELECTRICAL SPECIFICATIONS

Before connecting the cooktop to the mains power supply check that:

- The domestic wiring system is suitable for the power drawn by the cooktop.
- The voltage corresponds to the value given in the rating plate.
- The power supply cable sections can withstand the load specified on the rating plate.

<b>SPECIFICATIONS</b>	<b>MODEL CI365ZZDTB5</b>
RATED POWER (W)	10400
SUPPLY (Hz)	60Hz
VOLTAGE (V)	208 - 240V
DEDICATED CIRCUIT (A)	USA 40A, Canada 50A

	<b>MODEL CI304ZDTB5</b>
RATED POWER (W)	7400
SUPPLY (Hz)	60Hz
VOLTAGE (V)	208-240V
DEDICATED CIRCUIT (A) -	USA 35A, Canada 40A

	<b>MODEL CI244ZZDTB5</b>
RATED POWER (W)	7400
SUPPLY (Hz)	60Hz
VOLTAGE (V)	208 - 240V
DEDICATED CIRCUIT (A)	USA 35A, Canada 40A

	<b>MODEL CI122ZDTB5</b>
RATED POWER (W)	3700
SUPPLY (Hz)	60Hz
VOLTAGE (V)	208 - 240V
DEDICATED CIRCUIT (A)	20A

## ELECTRICAL SPECIFICATIONS


Before connecting the cooktop to the mains power supply check that:

- The domestic wiring system is suitable for the power drawn by the cooktop.
- The voltage corresponds to the value given in the rating plate.
- The power supply cable sections can withstand the load specified on the rating plate.

MAX. CURRENT DRAW	MAX. LOAD	VOLTAGE
32A	7800W	120/240 V
32A	6800W	120/208 V


### 4 WIRE CONNECTION

- Using UL listed wire connectors, connect the 2 black wires together, the 2 red wires together and the 2 white wires together. Connect the green (or yellow-green) ground wire from the cooktop cable to the green (or yellow-green) ground wire in the junction box using UL listed wire connectors.
- Install junction box cover.

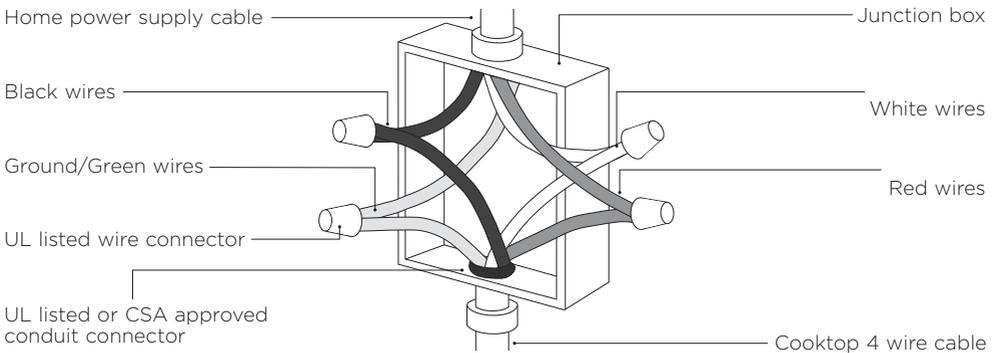

### 3 WIRE CONNECTION

- If three-wire connections are permitted by your local electrical code, the circuit may be wired as shown below if a four-wire cable is not available.
- Using UL listed wire connectors, connect the 2 black wires together and the 2 red wires together. Connect the green (or yellow-green) and white cooktop cables to the white (neutral) wire in the junction box using the UL listed wire connectors.
- Install junction box cover.

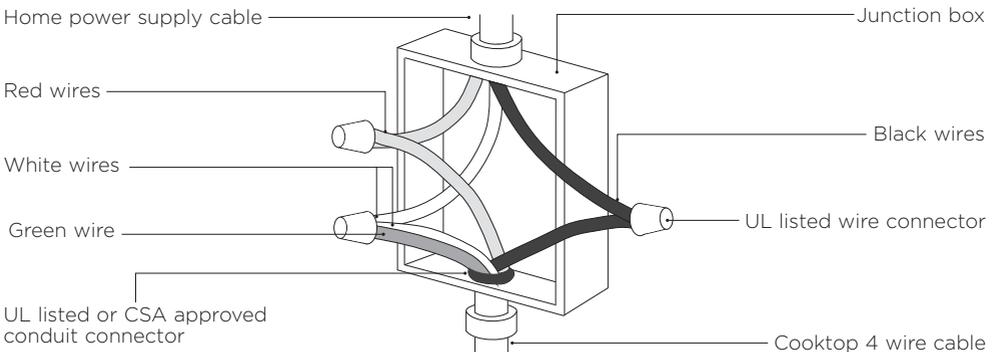

## INSTALLER CHECKLIST

---

### General;

- Read safety and warnings in the user guide before operating the cooktop.
- Specified clearance maintained.
- Unit is level – front to back and side to side.
- All packaging materials have been removed.
- There is constant flow of cool air from the cabinetry to the base of the cooktop.
- Cooktop is securely clamped.
- Basic operation has been demonstrated to the customer.
- Cooking zones are functioning correctly. Turn on all of them to a high setting and leave them on for at least one minute.
- Touch controls and displays are functioning.

### Electrical

- Receptacle with correctly rated over-current protection is provided for service cord connection.
- Adequate ground connection.
- Power supply cable is accessible and is not touching the cooktop.

..... **CONNECTION LOCATION** .....

## INSTALLER CHECKLIST

---

Complete and keep for safe reference:

Model \_\_\_\_\_

Serial no. \_\_\_\_\_

Purchase date \_\_\_\_\_

Purchaser \_\_\_\_\_

Dealer address \_\_\_\_\_

Installer's name \_\_\_\_\_

Installer's signature \_\_\_\_\_

Installation company \_\_\_\_\_

Installation date \_\_\_\_\_

**FISHERPAYKEL.COM**

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets  
and are subject to change at any time.

The product specifications in this guide apply to the specific products and  
models described at the date of issue. Under our policy of continuous product  
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,  
please go to our website or contact your local Fisher & Paykel dealer.

**433237A 02.26**