
60CM PYROLYTIC OVEN FIRST USE

Get to know your appliance	3
Set up the oven	6
Select a cooking method or function	7
Set the timer	9
Set Delayed cook or Auto off	10
Use the temperature sensor	11
Use Multi shelf	12
Connect to Wi-Fi	13
Enable Remote mode	14
Turn Sabbath mode on	15
Enable Voice to open	16
Cooking methods and functions	17
Clean and maintain your oven	18

FISHER & PAYKEL

NZ AU UK IE SG

60CM PYROLYTIC OVEN

 
OB60SAMPUNB5, OB60SAMPUNG5, OB60SAMPUB5, OB60SAMPUG5,
OB60SACPUDX5, OB60SAMPTB5, OB60SAMPTG5, OB60SACPTDX5

GET TO KNOW YOUR APPLIANCE




How to get the best results from your oven

- Download the app to use remote mode and get updates.
- Set up and condition the oven before you use it.
- Run regular CLEAN cycles.
- Register your product to get streamlined service support.

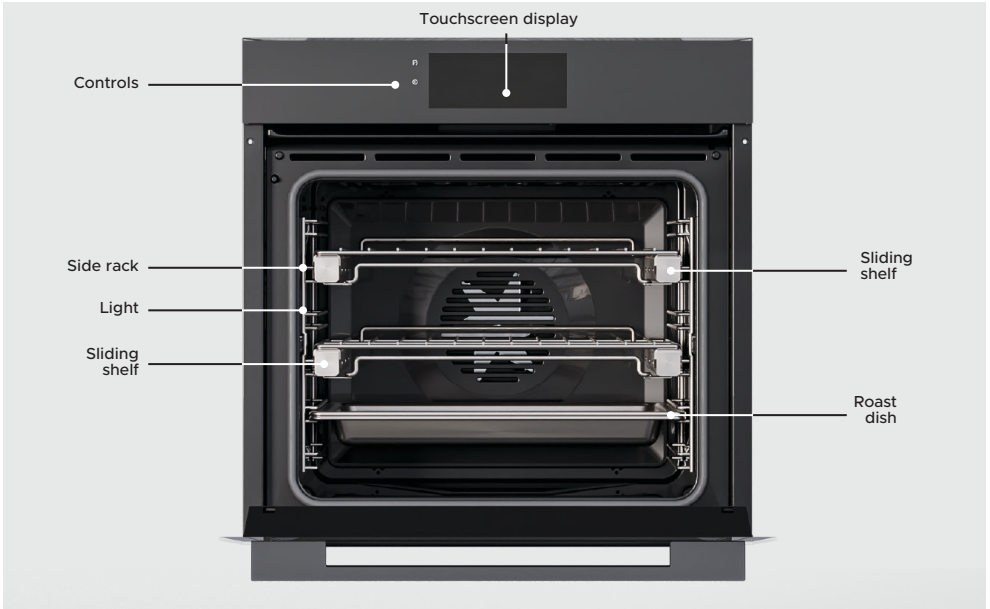

All imagery shown in this guide is representative. Your product may differ.

 GET TO KNOW YOUR APPLIANCE

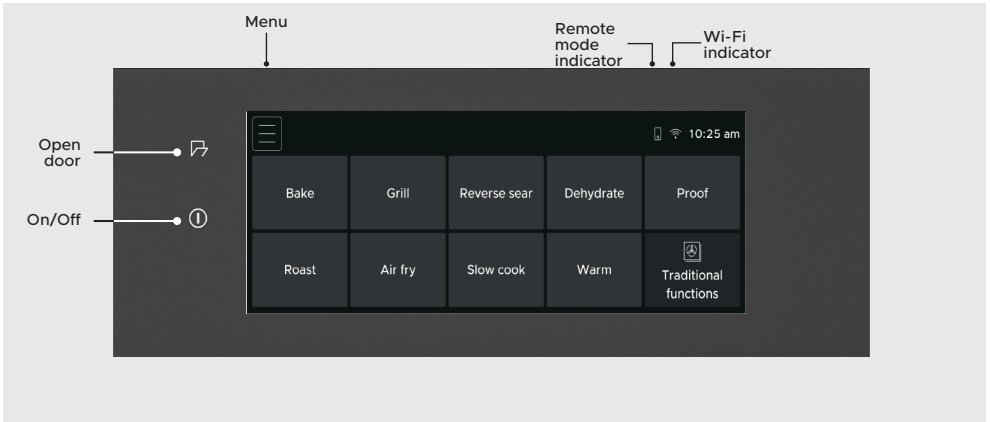

HOME SCREEN

Control dial*

- Turn the dial to scroll.
- Press to select.
- Press and hold to go back.

Open Door button

Press and hold to open or close the oven door on handleless models.

Power button

Press and hold to turn the display on when oven is in standby. The oven will go into standby after a period of inactivity, and the display and clock will turn off. If Remote Mode is enabled, the power button will pulse when oven is in standby.

 
Menu

Press to access additional features and settings.







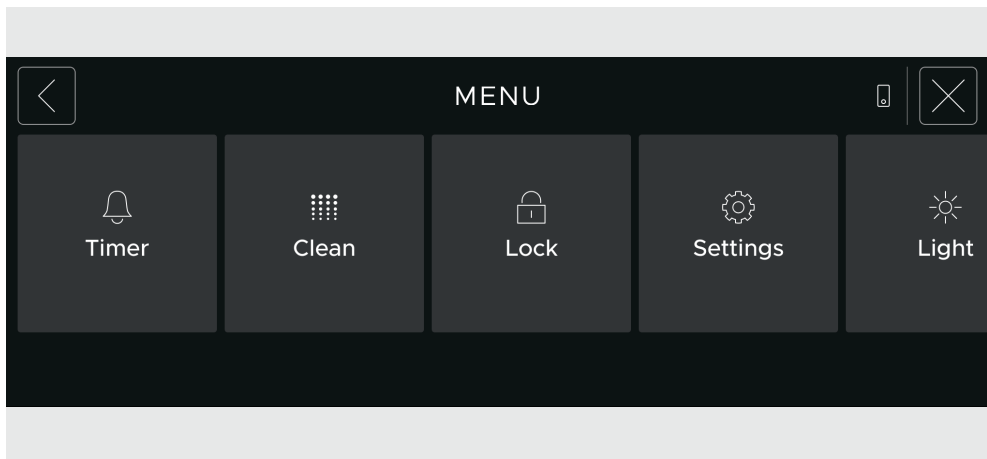

Cooking methods

Choose from a range of optimised cooking methods or traditional functions.

*some models only



MENU

	TIMER	Set a timer to keep track of cooking times or as a general timer. The timer does not turn the oven off.
	CLEAN	Set a CLEAN cycle to clean the inside of the oven. Refer to Care and Maintenance guide for full instructions.
	LOCK	Lock the controls to prevent accidental use. When locked, the controls will be unresponsive and the appliance will not turn on. Press and hold the screen anywhere to unlock.
	SETTINGS	Adjust the settings to suit your preferences or set up a Wi-Fi connection.
	LIGHT	Press LIGHT to turn the oven lights on or off.
	REMOTE	Connect appliance to your mobile device to operate it remotely via the app.
	BACK	Go back one level.
	EXIT	Press to return to the home screen.

 
SET UP THE OVEN

Before using your oven, check there is no plastic or cardboard left inside it, then set the clock. We recommend conditioning your oven for 1 hour before initial use to remove manufacturing residue. A small amount of smoke may be present. Ensure the kitchen is well ventilated.




Remove cable ties

Remove any packaging and the cable ties that are securing the shelves and trays.

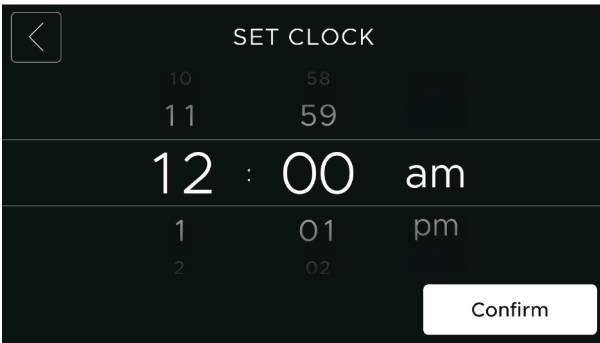

Set the clock

 Swipe up or down to set the time, then press confirm.

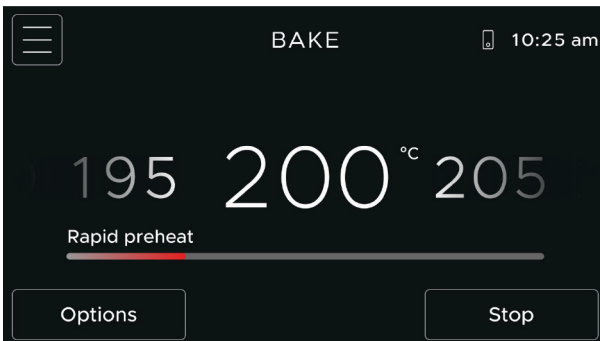

Condition the oven

Navigate to the TRADITIONAL FUNCTIONS menu. Select BAKE, then set the oven at 200°C for 30 minutes. Next, set to GRILL for 5 minutes, then FAN FORCED for 20 minutes.

For models without BAKE, set to MAXI GRILL at 200°C for 30 minutes, then FAN FORCED for 20 minutes.

 
Wipe clean once oven has cooled.

SELECT A COOKING METHOD OR FUNCTION


Select a cooking method and follow on-screen prompts for an optimised cooking environment, or choose from a range of traditional cooking functions.



1. Position the shelves at the desired height.

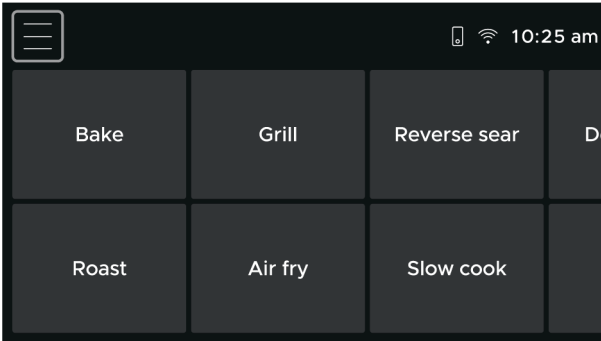


 2. Select a cooking method or scroll to select TRADITIONAL FUNCTIONS.

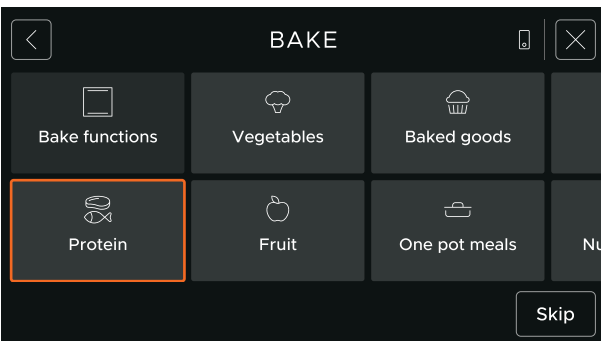


3. Select a food category or function as required.

 SELECT A COOKING METHOD OR FUNCTION

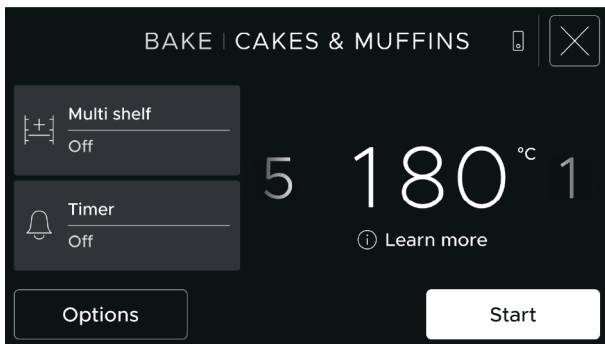


4. Adjust the temperature if needed and add any additional timers or cooking options, then press **START**.

 Press **STOP** at any point during cooking to turn the oven off.

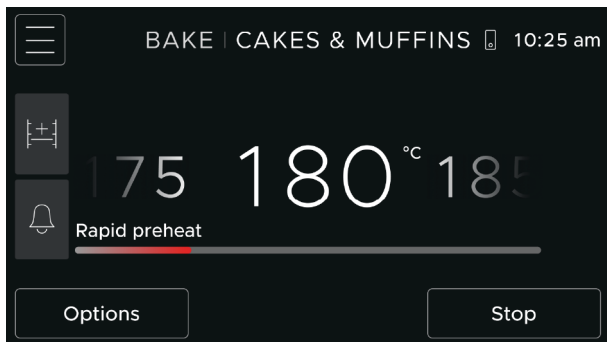

Methods with preheat

 A progress bar will show while the oven is heating. To prevent burning, place food in oven once oven reaches temperature.

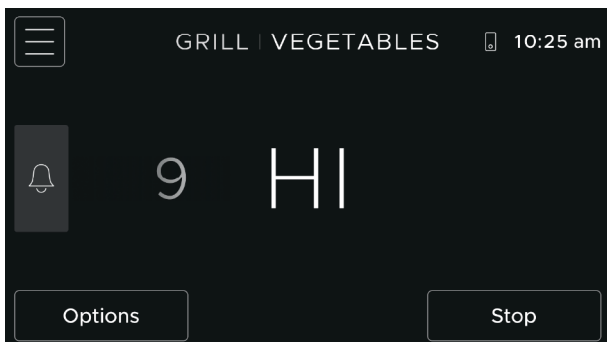

Methods without preheat

 
If there is no progress bar, place food in the oven when you start the cook.

Press **STOP** at any point to turn the oven off.

SET THE TIMER




Use the timer to keep track of cooking times or as a general timer. The timer does not turn the oven off.

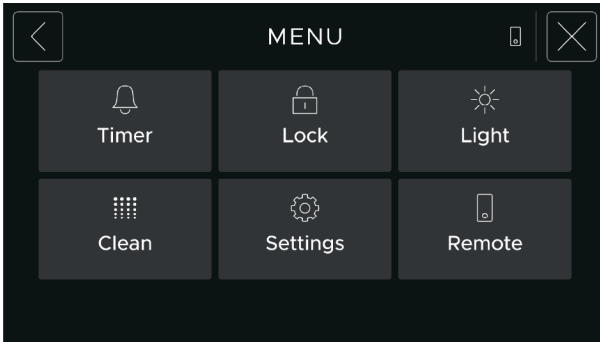

1. Select **TIMER** from the menu or from the cooking screen.



 2. Scroll to set the desired duration, then press **CONFIRM** to start the countdown.

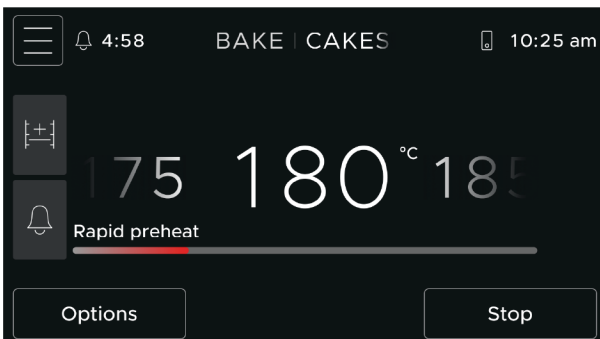


3. The remaining time will show on the screen. Press it to adjust or cancel the timer.

When the timer is complete, an alert will sound and a message will show on the screen. Press **DONE** to dismiss the message.

SET DELAYED COOK OR AUTO OFF



 You can set DELAYED COOK or AUTO OFF when using most cooking methods or functions. Use DELAYED COOK to set the oven to turn on later, cook for a set duration and turn off at a set time. Use AUTO OFF to set the oven to turn off after a set duration.

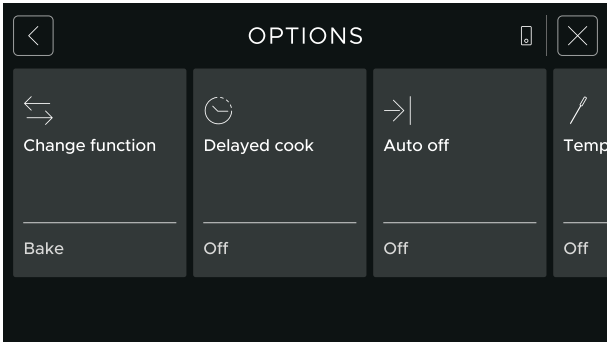

Press **OPTIONS** on the cooking screen, then select **DELAYED COOK** or **AUTO OFF**.

 


Delayed cook

Set a cook duration and a cooking end time, and press **CONFIRM**.

Cover food or place it on a lower shelf in oven to prevent burning as the oven preheats.

Not recommended with **GRILL**, **FAN GRILL**, **PROOF**, or **DEFROST**.

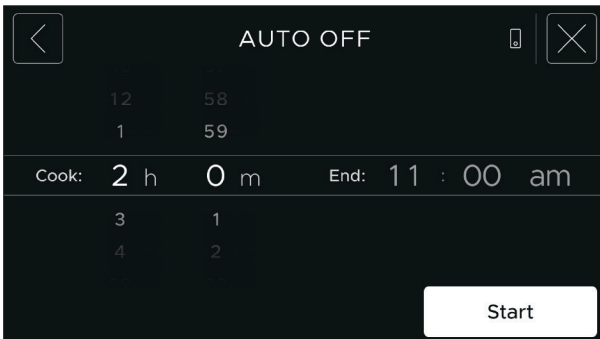

Auto off

Set a cook duration, and press **CONFIRM**.

 
The oven will turn off after the set duration.

USE THE TEMPERATURE SENSOR




Use the wired temperature sensor or a compatible wireless sensor to monitor your cook to achieve your desired doneness.

Insert the sensor into the thickest part of the protein, avoiding bone, and ensure the tip doesn't protrude or touch cookware.

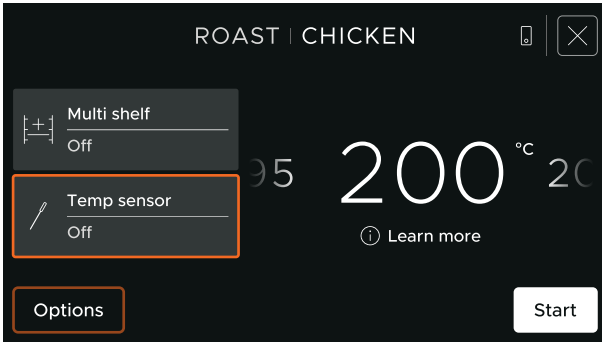


 1. Select a cooking method or function and press **OPTIONS** or **TEMP SENSOR**.

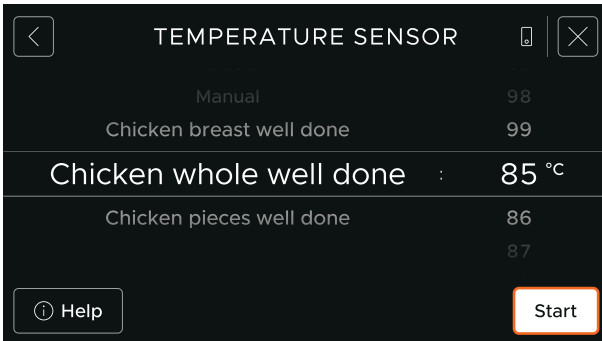

2. Select the relevant protein and desired doneness or removal temperature, then press **START**.

 Allow your oven to preheat if necessary.

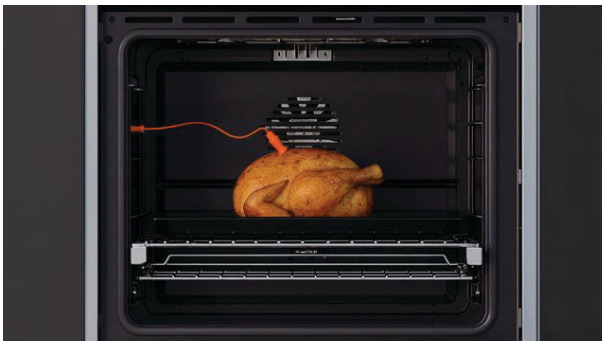


3. Place food in the oven. If using the wired sensor, plug it into the socket on the inside-left of the oven until it clicks into place.

Rest meat before serving to allow the internal temperature to rise.


USE MULTI SHELF



 
Use the MULTI SHELF option so heat distributes evenly when you cook food on more than one shelf at a time. You can turn it on or off before and during cooking.

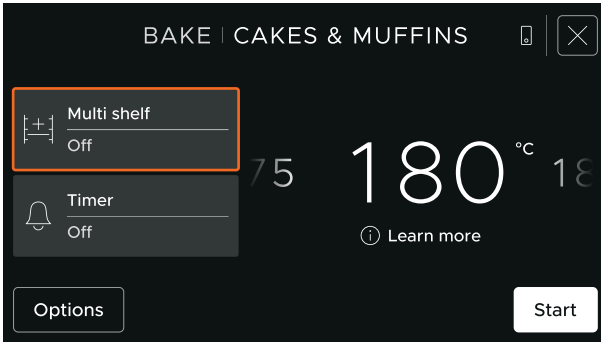

 1. Select a cooking method or function, and press MULTI SHELF.

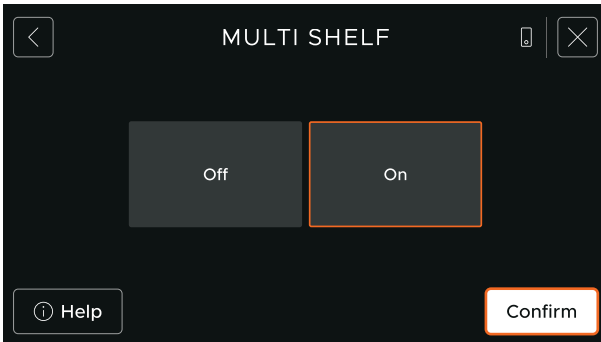

 2. Press ON, then CONFIRM.

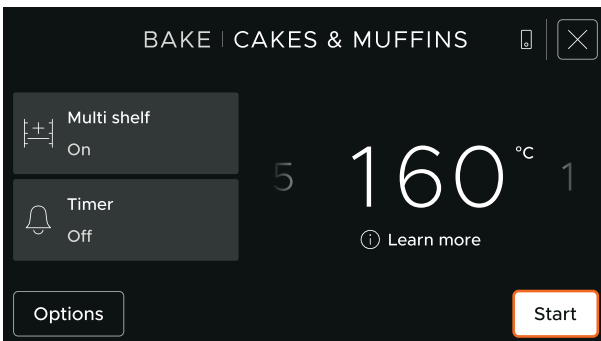


3. Press START, and allow your oven to preheat if necessary before putting the food in. Press MULTI SHELF again to turn it off.

CONNECT TO WI-FI




Connect your appliance to your home wireless network to receive updates and connect to the app.

 It may take up to 10 minutes to connect your appliance.

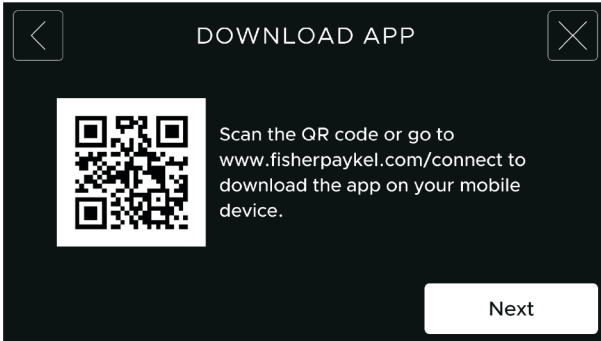


On your mobile device

 Scan the QR code to download the app, then create an account and add your appliance.

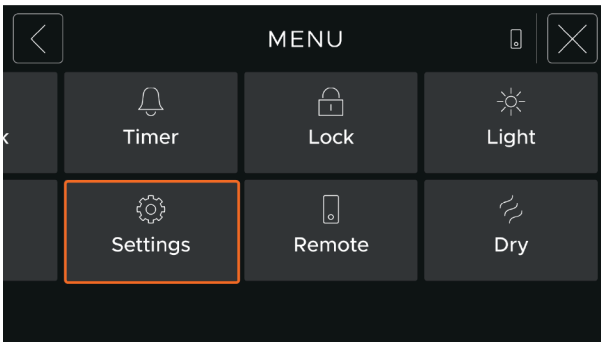

On your appliance

 1. Ensure your home Wi-Fi network is on, then go to MENU and select **SETTINGS**.

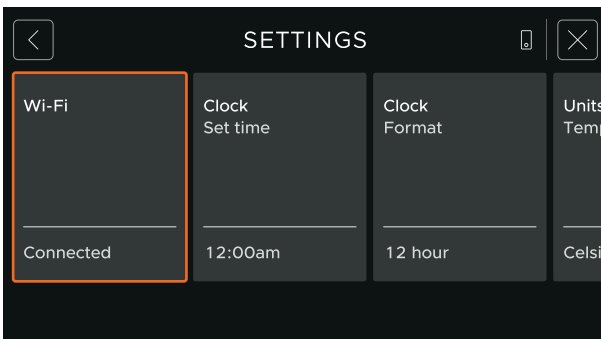


2. Select **WI-FI** and follow the onscreen instructions to connect.


ENABLE REMOTE MODE



 
Enable REMOTE MODE to operate your appliance remotely via the app.

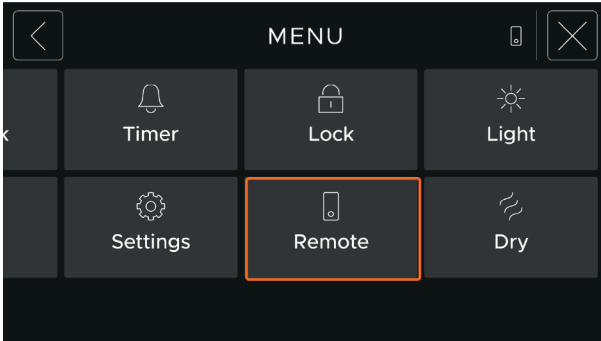

 1. Go to MENU, and select REMOTE.

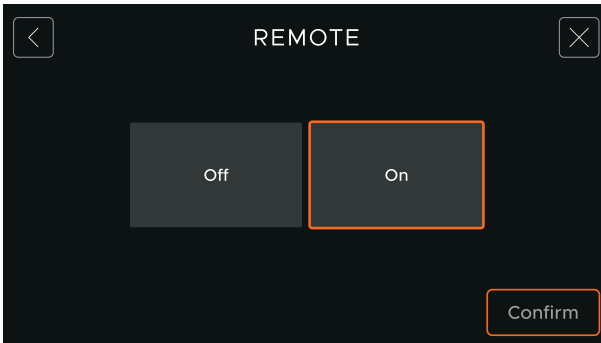

 2. Select ON, then press CONFIRM.

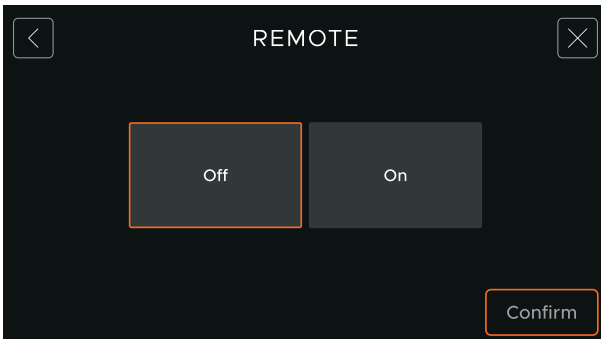

Disable Remote Mode

Go to MENU, and select REMOTE. Select OFF, then press CONFIRM.

 
TURN SABBATH MODE ON

For the Sabbath observant. Sets your oven to heat continuously for as long as needed. The display will be unresponsive and no tones or alerts will sound. Your oven will stay in Sabbath mode until cancelled. Use the supplied door-opening tool to open handleless models when Sabbath Mode is on.


LOW
Keep hot food warm

MODERATE
Reheat cold food


HIGH
Cook raw food

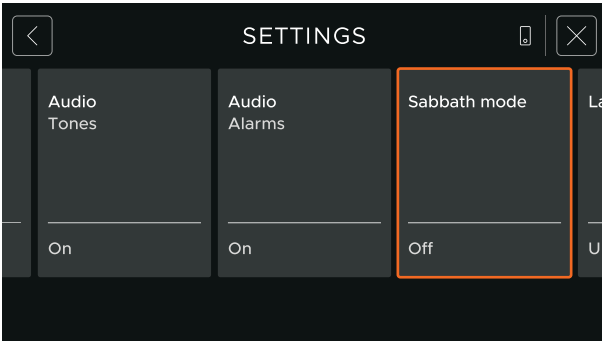

 1. Go to **SETTINGS** and select **SABBATH MODE**.

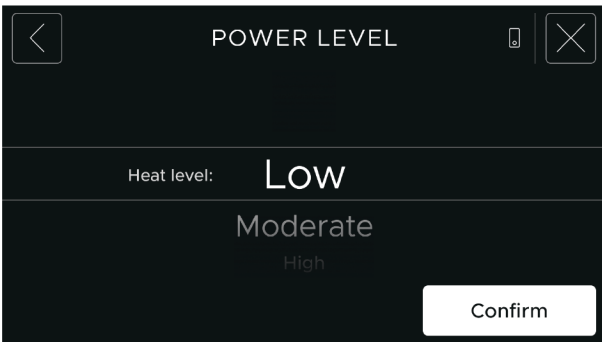

 2. Set a heat level and press **CONFIRM**. Follow the onscreen instructions to set the oven light on or off and to set a **SABBATH MODE** duration.

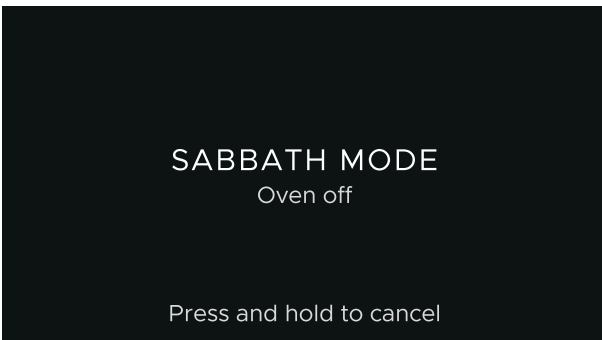


3. The oven will stay in **SABBATH MODE** until the set duration has passed or until cancelled. Press and hold the screen to cancel **SABBATH MODE**.


ENABLE VOICE TO OPEN

Enable 'Voice to open' on handleless models to open the oven door. Your appliance must be connected to Wi-Fi and have Remote Mode enabled. Voice control also requires a smart speaker or your mobile device to control the oven door.

 Only use voice control when you can see the oven and it is safe to open the door.

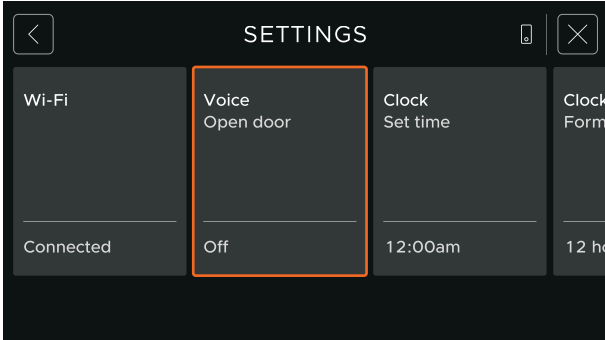

 1. Go to **SETTINGS** and select **VOICE OPEN DOOR**.

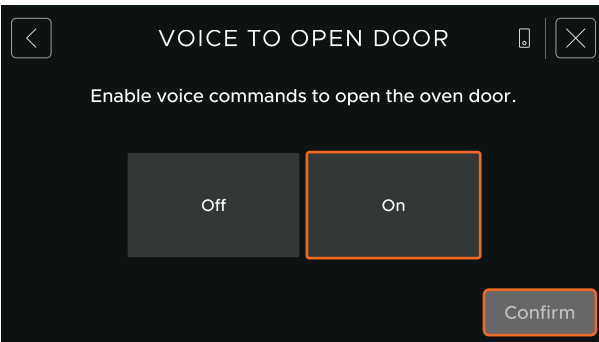

2. Select **ON**, then **CONFIRM**. Follow the instructions on the screen and in the app to complete the setup.

COOKING METHODS AND FUNCTIONS

Method-led cooking lets you select what you want to cook and how you want to cook it. Your oven will then recommend the optimal heat type and temperature for perfect cooking results. Explore the full range of methods and functions available.

Methods

Cooking methods support you to achieve your desired result across a range of food categories. Each method may be supported by one or more functions.

Air fry	Eco slow cook
Bake	Reverse sear
Dehydrate	Roast
Grill	Slow cook
Proof	Warm

Functions

Functions are specific cooking environments. They deliver heat in a fixed way and can involve either a single step or a sequence of steps.

Air fry	Eco slow cook
Bake	Fan grill
Classic bake	Grill
Classic fan	Roast
Dehydrate	Slow cook
Fan bake	Vent bake
Fan forced	

CLEAN AND MAINTAIN YOUR OVEN

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

Clean door glass after each use

Wipe the door glass clean after each use and before running a pyrolytic self clean cycle to prevent stains becoming baked on.

Clean inside of the oven after each use

Clean up any easy-to-reach spills, food or grease stains in the oven to prevent them becoming baked on.

Run pyrolytic self clean cycles

Run a CLEAN cycle as required to remove food residue and buildup in the oven.

Refer to the 'Care and Maintenance Guide' before running any pyrolytic self-cleaning cycles.



Care, maintenance and troubleshooting information

Scan the QR code or visit fisherpaykel.com and search for your model code.

OB60SAMPUNB5, OB60SAMPUNG5, OB60SAMPUB5, OB60SAMPUG5,
OB60SACPUDX5, OB60SAMPTB5, OB60SAMPTG5, OB60SACPTDX5

