

## WASH PROGRAM DATA

Wash program times and temperatures indicated are approximate. For information on which program to use for your load, refer to your user guide.

### New Zealand and Australia

#### DD60\*I single models

CYCLE	WASH PROGRAM (CYCLE TIME)					
	HEAVY (165min)	MEDIUM (150min)	ECO* (202min)	FAST (35min)	DELICATE (139min)	RINSE (15min)
Pre wash	60°C	40°C	No	No	No	Yes
Main wash	65°C	50°C	40°C	48°C	50°C	No
Post rinse	Yes	Yes	Yes	Yes	Yes	No
Final rinse	60°C	60°C	42°C	40°C	55°C	No
Drying phase	Yes	Yes	Yes	No	Yes	No

#### DD60\*I double models

CYCLE	WASH PROGRAM (CYCLE TIME)					
	HEAVY (-130min)	MEDIUM (-115min)	ECO* (-202min)	FAST (-35min)	DELICATE (-107min)	RINSE (-15min)
Pre wash	60°C	40°C	No	No	No	Yes
Main wash	65°C	50°C	40°C	48°C	50°C	No
Post rinse	Yes	Yes	Yes	Yes	Yes	No
Final rinse	60°C	60°C	42°C	40°C	55°C	No
Drying phase	Yes	Yes	Yes	n/a	Yes	No

#### DD60\*I single & double models

USAGE PER DRAWER	WASH PROGRAM					
	HEAVY	MEDIUM	ECO*	FAST	DELICATE	RINSE
Water (L)	10.0	9.4	6.9	6.8	9.9	2.6
Energy (kWh)	0.88	0.66	0.36	0.33	0.54	n/a

\*Reference program for energy/water label in compliance with AS/NZS 2007 and AS/NZS 6400. Wash times and energy consumption can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 20°C incoming water (New Zealand and Australia).

# STANDARDS TEST

## New Zealand and Australia

The DishDrawer™ Dishwashers are tested to AS/NZS 2007 and AS/NZS 6400 standards for both wash and dry performance, energy and water consumption using the parameters detailed below.

### Wash program

Eco

At the end of the program, open the drawer 50 mm to improve the dry performance.

### Detergent quantity

23.75 g per drawer - added to the main powdered detergent dispenser

### Rinse aid setting

4

### Capacity

7 place settings per drawer

### Accessories


Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid, fold away cup racks and glass supports are to be used for the test. Ensure the small items container it is removed from cutlery basket if provided.

### Height setting of cup racks

Adjust the height to a position clear of other load items.


Note: Ensure the product is level and has the correct drain hose height. Refer to 'Installation Guide' for details.

### Correct orientation of glass supports on side of drawer

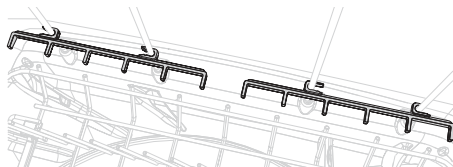

### Recommended loading pattern

Top and bottom drawer

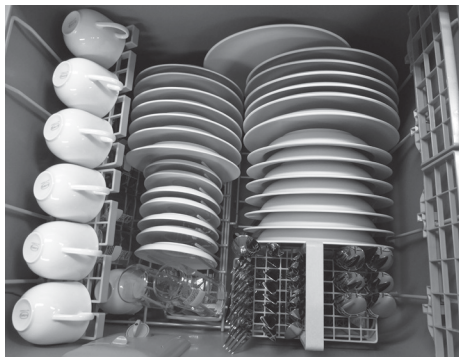

### Cutlery basket

