

**FISHER & PAYKEL**

**DISHDRAWER™洗碗机**

---

嵌入式

DD60DTX6HI1型和DD60STX6HI1型

用户指南

CN



# 目录

---

安全警告	5
首次使用	7
装餐具建议	9
洗涤程序	10
洗涤选项	12
预约	14
童锁	15
洗涤剂	17
快干剂	19
水软化器	20
首选项	22
碗杯架	24
维护	28
维护警报	32
故障排除	33
故障代码	36
制造商保修和服务指南	38
洗涤程序数据	39
标准测试	40

---

## 注册

登录公司网站[fisherpaykel.com/register](http://fisherpaykel.com/register)注册你购买的电器。





### 阅读并妥善保存本指南

在使用DishDrawer™洗碗机时遵循基本的安全预防措施，包括：

#### 一般性问题

- 为了最大限度的降低火灾或爆炸风险，防止财产损失、人身伤害或死亡，必须遵守本指南中的说明。
- DishDrawer™洗碗机仅用于本指南所述的用途。
- 此电器仅供家用或下列场合使用：
  - 商场、办公室和其他工作环境的员工厨房
  - 农舍
  - 酒店、汽车旅馆和其他居住环境的客人
  - 床位加早餐居住环境
- 通过NSF 184认证的家用洗碗机不适合持有营业执照的餐饮业使用。
- 家用洗碗机仅使用建议的洗涤剂或快干剂，把它们放在儿童够不到的地方。在每次洗涤程序结束之后，检查洗涤剂单元格是否空了。
- 在装要清洗的餐具时，切勿让锋利餐具划伤DishDrawer™洗碗机内盖，让锋利餐刀手柄朝上防止割伤手。
- 在使用DishDrawer™洗碗机过程中或结束之后，滤板可能很烫，切勿触摸滤板。
- 在正确安装所有面板之前，切勿使用DishDrawer™洗碗机。
- 切勿擅自改动控制器。
- 切勿滥用DishDrawer™洗碗机，不得坐在或站在洗碗机的抽屉里或碟架上。
- 不应让抽屉长时间处于打开状态，否则可能会绊倒人。
- 折叠式杯架用于放置茶杯、玻璃杯和厨具。如果折叠式杯架位于洗碗机内，切勿靠在杯架上，切勿用杯架支撑体重。
- 为了降低人身伤害风险，切勿让儿童在DishDrawer™洗碗机里面或上面玩耍。
- 在某些情况下，如果洗碗机闲置了两个星期或更长时间，热水加热系统里可能会产生氢气。氢气是爆炸性气体。如果热水加热系统闲置两个星期或更长时间，在使用DishDrawer™洗碗机之前打开所有热水龙头几分钟时间，让每个龙头里的水流出来，这样可以释放聚积的氢气。由于氢气是可燃气体，此时切勿吸烟，切勿使用明火。
- 在报废DishDrawer™洗碗机之前，先拆卸洗碗机门。
- 部分洗碗机洗涤剂有强碱性。如不慎吞食，可能会极度危险。避免皮肤和眼睛接触洗涤剂，打开DishDrawer™洗碗机门时让儿童远离洗碗机。
- 当DishDrawer™洗碗机工作时，切勿打开抽屉。
- 敲一下抽屉门暂停洗碗，在听到四声蜂鸣声之后才能打开抽屉。
- 只有在安装好电机、滤板、过滤器、钢丝架和喷淋臂之后方可使用DishDrawer™洗碗机。如要确定是否正确安装了这些零件，参看**维护**部分。
- 在把餐具装入洗碗机时务必小心，防止抽屉内盖盖不严。在放置餐具时，餐具不得高出抽屉。
- 如果DishDrawer™洗碗机长期闲置不用，要断开洗碗机电源和水阀。
- 除非有成人监督，否则不得让儿童清洁和维护此电器。
- 切勿让儿童玩弄或攀爬此电器或任何报废电器。
- 不得让儿童使用家用电器。必须让8岁以下儿童远离电器，除非始终有人看护他们。8岁以上儿童和有肢体、感官或精神障碍或缺乏经验知识的人士不应使用此电器，除非有成人监督他们，或者向他们解释清楚使用说明，且他们了解了可能会发生的危险情况。

## 安全警告

- 如果使用洗碗机清洁剂除垢，建议你在除垢之后及时加洗涤剂执行一次洗涤程序，防止清洁剂损坏洗碗机。
- DishDrawer™洗碗机用于清洗普通家用厨具。切勿用DishDrawer™洗碗机清洗受汽油、油漆、铁锈、腐蚀性、酸碱化学品污染的器物。
- 切勿清洗塑料厨具，除非塑料厨具标有**可用洗碗机清洗**等字样。对于没有标注文字的塑料厨具，遵循塑料厨具制造商的建议。
- 避免清洗贴有胶沾标签的容器。标签在洗涤过程中脱落可能会损坏洗碗机。

## 安装

- 必须根据安装说明书安装DishDrawer™洗碗机并调整其位置方可使用。如果DishDrawer™洗碗机缺失安装说明书，可以致电授权修理店索取，也可以在本指南封底列出的斐雪派克中文网站下载。
- 此电器必须由接受过斐雪派克专业培训和支持的维修技术员安装和维修。
- 如果电源线破损，为了避免危险，必须请接受过斐雪派克专业培训和支持的维修技术员或资深电工更换电源线。
- 确保用随机提供的支架把DishDrawer™洗碗机固定在相邻橱柜上，否则它可能会晃动，可能会造成洗碗机损坏或人身伤害。
- 如果此电器破损、发生故障、部分拆卸了、零件缺失或损坏、电源线或插头破损，切勿再使用。
- 切勿在DishDrawer™洗碗机附近存放或使用汽油或其他可燃性气体和液体。
- 连接到额定电压适合并有适当保护措施电源，避免电路过载。
- 确保电源线的位置不会被人践踏，不会绊倒人，否则会造成损坏或形成张力。
- 切勿把DishDrawer™洗碗机安装或贮存在温度低于冰点的地方或室外。
- 切勿用延长线或便携式电源插座（例如多孔插座）连接DishDrawer™洗碗机和电源。
- 此电器必须有接地保护。如果发生故障或损坏，接地保护给电流提供一条电阻最小的泄流通路降低触电风险。
- 此电器配有一条导线，它有设备接地线和接地插头。插头必须插入按当地法规和法令要求安装和接地的合适插座。设备接地线连接不当可能会造成触电隐患。如果你对电器接地是否正确存有疑虑，可请资深电工或接受过斐雪派克专业培训和支持的维修技术员检查。
- 切勿改动电器配备的电源插头；如果插头与插座不匹配，请联系接受过斐雪派克专业培训和支持的维修技术员或资深电工。
- 如果DishDrawer™洗碗机作为永久连接的电器安装，此电器必须连接接地金属，永久性布线系统或设备接地线必须连接设备接地端子或此电器上的导线。


## 维护

- 在进行清洁或维护之前，先断开电器电源。
- 在断开电器电源时，为了避免造成损坏，要拔下插头，切勿拉扯电源线或电源线与插头的结合部分。
- 除非本指南明确说明，否则切勿修理或更换电器的任何零件，切勿试图维修电器。建议联系接受过斐雪派克专业培训和支持的维修技术员或客户服务部。
- 保持电器周围地面清洁干燥，降低滑倒风险。
- 切勿在电器周围或下方堆放易燃物，例如棉绒、纸张、抹布和化学品。


## 首次使用

- 确保安装人员对照**安装说明书**上的**最后核对表**检查了所有项目。
- 阅读本指南，要特别留意**安全警告**部分。
- 除去并采用环保方法处置所有内外包装材料。回收利用自己可用的物品。

DD60STXI型

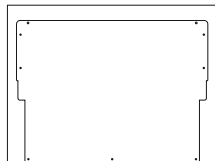

DD60DTXI型

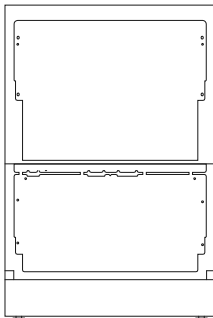

### 控制面板概述



### 控制面板功能

- |            |            |
|------------|------------|
| ① 洗涤程序选择按钮 | ⑦ 锁指示灯     |
| ② 洗涤选项选择按钮 | ⑧ 喷淋臂阻塞指示灯 |
| ③ 启动       | ⑨ 过滤器清洁指示灯 |
| ④ 洗涤程序指示灯  |            |
| ⑤ 洗涤选项指示灯  |            |
| ⑥ 预约指示灯    |            |

## 首次使用

### 餐具

洗碗机在高温下用洗涤剂清洗餐具，可能会损坏某些餐具。参看制造商的洗涤建议，如有疑问，请用手洗。

#### 刀叉和银器

建议用冲洗程序及时清洗用过的所有刀叉和银器，防止食物干结后形成污点。银器不应该接触不锈钢，混洗会形成污点。在洗涤程序结束之后，及时从DishDrawer™洗碗机里取出银器和刀叉擦干。

#### 铝餐具

洗涤剂会使铝餐具黯淡无光。光泽变化程度取决于铝餐具的质量。

#### 其他金属餐具

铁餐具和铸铁餐具会生锈，在其他餐具上留下污点。铜餐具、锡铅合金餐具和黄铜餐具会形成污点。

#### 木餐具

木餐具通常对高温和水很敏感，常用DishDrawer™洗碗机清洗可能会使质量下降。

#### 玻璃器皿

大多数玻璃器皿可以用洗碗机清洗。水晶器皿、雕花玻璃器皿和古董玻璃器皿可能会发生蚀刻现象，透明度下降。

#### 塑料餐具

某些塑料餐具遇热水可能会变形或变色。参看制造商的洗涤建议。可用洗碗机清洗的塑料餐具应放在下面，在清洗过程中不至于上浮、灌满水或掉到底架下面。

#### 装饰品

大多数现代瓷器可用洗碗机清洗。彩釉上绘有图案的古瓷器、带金边的瓷器和手绘瓷器可能不适合用机器清洗。

#### 胶粘餐具

用机器清洗胶粘餐具时，某些黏合剂会变软或溶解。

### 水硬度

硬水中的钙镁等矿物质含量很高。硬水会对DishDrawer™洗碗机的洗涤效果造成不利影响，时间长了会造成零件损坏。玻璃器皿用硬水清洗会变得不透明，碟子会留下斑点或发白。不同地区的水硬度各不相同。

#### 如果你家里使用硬水


- 参看洗涤剂用量建议部分。
  - 使用快干剂。建议你快干剂设置调高到5提高洗涤效果。参看首选项部分了解详情。
- 定期使用洗碗机清洁剂/除垢剂除垢，或者在发现DishDrawer™洗碗机有水垢时使用清洁剂/除垢剂除垢。

#### 如果你家里使用软水或软化水

- 避免使用过多洗涤剂。


## 装餐具建议

在把餐具放进抽屉时，确保底部旋转喷淋臂喷出的水可喷到所有区域。如果水流受阻，洗涤效果会下降。

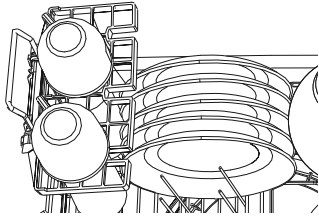

### 确保

- 喷淋臂旋转顺畅。
- 玻璃和其他易碎品稳定。
- 所有碟子面朝下。
- 盘子间隔均匀。
- 固定所有锋利刀具，避免造成人身伤害或电器损坏。

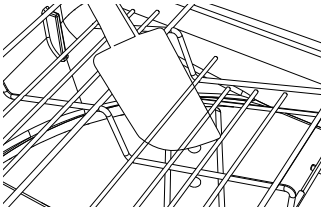

### 避免


- 排得过密。
- 餐具突出到碟架和刀叉篮下面阻碍喷淋臂旋转。
- 餐具高出抽屉。
- 折叠式杯架上的任何杯子阻碍水流。

## 洗涤程序

DishDrawer™洗碗机有很多洗涤程序，可以满足你的洗碗要求。给每次装的餐具选择最合适的洗涤程序，确保达到最佳洗涤效果。


洗涤程序	洗涤程序说明
自动	适合清洗任何类型的餐具。洗碗机自动选择最佳洗涤程序
强洗	适合清洗油污重的汤锅、平底锅和餐具
标准洗	最适合清洗油污重或隔夜未洗的餐具
柔洗	适合清洗油污小、容易清洗的餐具；不烘干
60分钟	适合清洗油污重或隔夜未洗的餐具；不烘干
玻璃洗	适合清洗油污小、不耐高温的陶瓷餐具和酒杯等玻璃器皿
经济洗（默认）	最适合洗油污一般的餐具，节省水电
冲洗	防止餐具干燥后有异味或污渍

### 设置洗涤程序

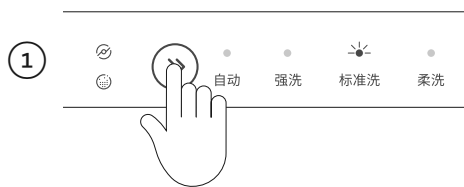

确保接通DishDrawer™洗碗机电源，并加洗涤剂。

按>>按钮滚动显示可用洗涤程序，显示器上所选洗涤程序对应的指示灯亮。

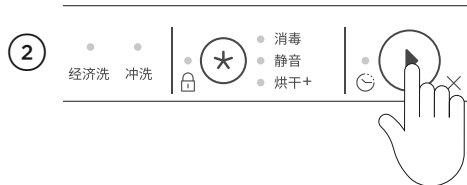

按▶按钮开始执行洗涤程序，然后关抽屉。

## 洗涤程序

### 暂停洗涤程序



敲两下洗碗机门。

### 在开门情况下取消洗涤程序




按住▶按钮。

如果抽屉里有水，DishDrawer™洗碗机自动排水，然后断电停机。

- 按住▶按钮激活预约。预约指示灯闪烁，洗碗机发出一声蜂鸣声。参看取消预约部分了解详情。

### 在关门情况下取消洗涤程序

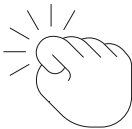

敲两下洗碗机门暂停当前洗涤程序。打开抽屉，然后按住▶按钮。

## 洗涤选项

在设置洗涤程序之后，还可以选择下列其中一个洗涤选项。

每次只能设置一个洗涤选项。

### 加烘干

提高最终冲洗温度，并延长烘干阶段的时长。

### 静音


降低电机转速减小噪声，特别适合开放式起居室和夜晚使用。

### 消毒


提高冲洗阶段的水温对餐具进行消毒。

洗涤程序	可用洗涤选项
自动	加烘干
强洗	加烘干，消毒
标准洗	加烘干，消毒，静音
柔洗	加烘干
60分钟	加烘干
玻璃洗	加烘干
经济洗（默认）	
冲洗	

## 设置洗涤选项

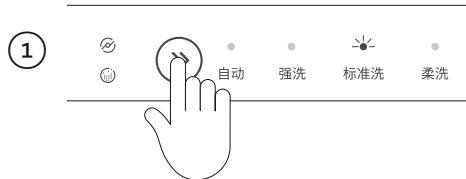

确保接通DishDrawer™洗碗机电源，加洗涤剂并选择洗涤程序。

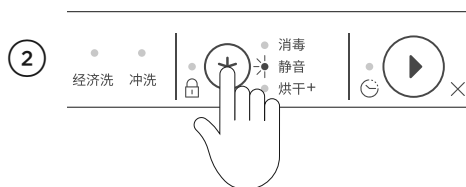

按>>按钮滚动显示可用洗涤选项，显示器上所选洗涤选项对应的指示灯亮。

按▶按钮开始执行洗涤程序，然后关抽屉。



## 洗涤选项

### 使用消毒

**消毒**洗涤选项调节洗涤程序符合NSF 184第6节要求的消毒条件。在**消毒**过程中始终监视洗涤程序，确保符合这些条件。

只有使用**消毒**洗涤选项的洗涤程序符合NSF 184第6节要求的消毒条件。其他洗涤程序的水温可能达不到要求的消毒温度。参看上页的表了解哪些洗涤程序有消毒选项。

水温必须达到70°C才符合消毒条件。在使用**消毒**选项之前，确保所有餐具都可以用洗碗机清洗。

如果在洗涤程序执行过程中中断洗涤程序或关闭水阀，可能达不到加热消毒要求。可能需要再次执行此程序。



### 如果消毒成功

洗涤程序正常结束。



### 如果消毒失败

洗碗机发出警报，在打开抽屉时，**消毒**指示灯闪烁。

- ① 检查水阀是否关闭了，洗涤程序是否中断了。
- ② 按▶按钮停止蜂鸣声，再按一次清除警报代码。
- ③ 重置消毒程序，然后再次执行消毒程序。

参看故障代码部分了解详情。

## 预约

设置DishDrawer™洗碗机在当天的稍后时间启动，并执行所需洗涤程序。可以在选择洗涤程序之后设置预约，最长可以设置12小时。

### 设置预约



按住▶按钮，每响一声表示增加1小时延迟时间，最长可以设置12小时。

- 如果滚动过12小时，DishDrawer™洗碗机退出预约。
- 松开▶按钮，洗碗机开始倒计时。在关抽屉之后，在倒计时结束时开始执行所选洗涤程序。

### 取消预约




按住▶按钮。

如果抽屉里有水，DishDrawer™洗碗机自动排水，然后断电停机。

## 童锁


可以在清洁DishDrawer™洗碗机时锁住洗碗机，防止意外使用洗碗机。在锁住控制面板之后，按按钮不起作用。

### 锁住洗碗机

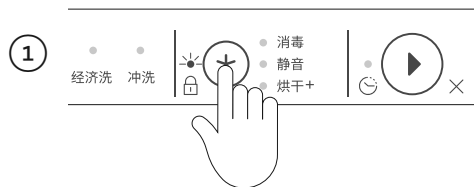


打开洗碗机，然后按住★按钮，直到洗碗机发出一声蜂鸣声，锁指示灯开始闪烁。


### 在执行洗涤程序时锁住

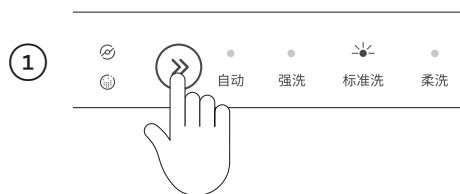

选择所需洗涤程序。

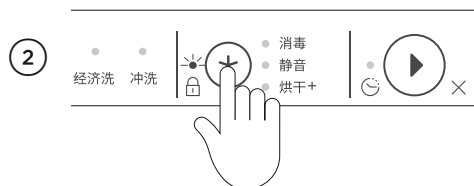

按住★按钮，直到洗碗机发出一声蜂鸣声，锁指示灯开始闪烁。

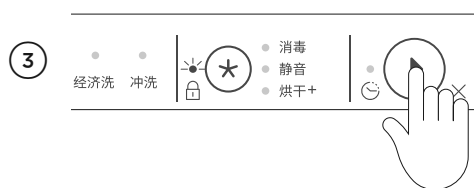


在10秒钟内按▶按钮，关上抽屉开始执行洗涤程序。

- 如果洗涤程序不在10秒钟内启动，说明控制面板锁住，洗涤程序不启动。

# 童锁

## 开门时解锁

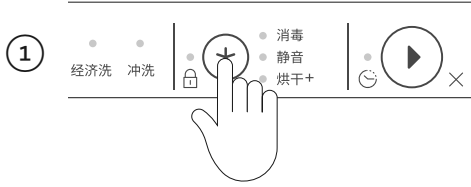

按住★按钮，直到锁指示灯变暗。

## 关门时解锁



敲三下洗碗机门，直到洗碗机发出一声蜂鸣声。

## 洗涤剂

**警告：**洗碗机洗涤剂有强碱性。如不慎吞食，可能会极度危险。避免皮肤和眼睛接触洗涤剂，打开洗碗机门时让儿童和体弱人士远离洗碗机。在每次洗涤程序结束之后，检查粉末洗涤剂单元格是否空了。

### 不合适的洗涤剂


下列洗涤剂不合适，可能会损坏DishDrawer™洗碗机，致使保修失效。

- 洗涤液
- 洗衣粉
- 洗手液
- 肥皂
- 消毒剂

### 使用粉末洗涤剂


切勿把洗碗锭或多效洗涤液放入洗涤剂单元格。参看下面的洗涤剂用量建议表和洗涤剂制造商的使用说明。冲洗程序不需要洗涤剂。

1

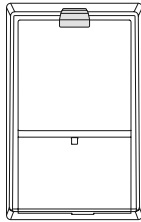

向下压卡扣打开洗涤剂单元格。检查洗涤剂单元格是否空了，是否干燥。

2

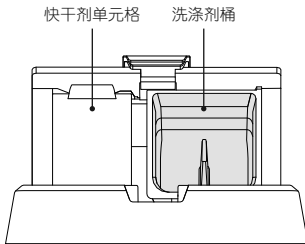

把粉末洗涤剂加入洗涤剂桶，然后轻轻合上洗涤剂单元格直至关严。


在洗涤程序执行过程中，洗涤剂自动加入抽屉内。

在用硬水清洗油污重的餐具时，可能需要加大洗涤剂用量。参看洗涤剂用量建议部分。

# 洗涤剂


## 使用洗碗锭或多效洗涤剂

在硬水地区使用洗碗锭可以提高洗涤效果。遵守制造商的说明。某些洗碗锭或多效洗涤剂可能并非适合所有洗涤程序。

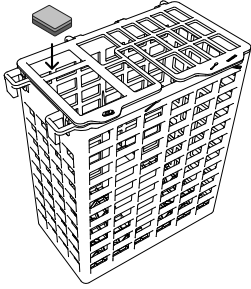

### 放进刀叉篮

把洗碗锭或多效洗涤剂放入刀叉篮，确保洗碗锭或多效洗涤剂不直接接触碟子或刀叉。

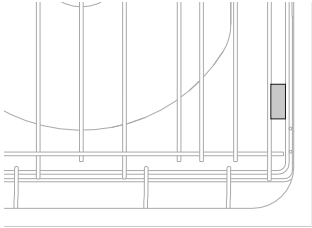

### 直接放进抽屉

把洗碗锭或多效洗涤剂放在碟架和侧壁之间，如图所示。

切勿放在抽屉底部，否则可能会影响喷淋臂旋转和洗涤效果。

## 洗涤剂用量建议

- 利用下表确定每个洗涤程序的最佳洗涤剂用量。
- 如果当地使用硬水，可能需要加大洗涤剂用量。参看水硬度部分了解详情。


洗涤程序	每个抽屉的洗涤剂用量
自动	加满
强洗	加满
标准洗	加满
柔洗	半满
60分钟	加满
玻璃器皿	加满
经济洗	加满
冲洗	不适用

\* 建议在选择柔洗程序时不要使用洗碗锭。

## 快干剂

快干剂使玻璃器皿和餐具表面不留下水渍，防止金属表面形成污点。建议定期使用液体快干剂达到最佳烘干效果。

在加入快干剂时，可能会发出脉动声。这是正常现象。

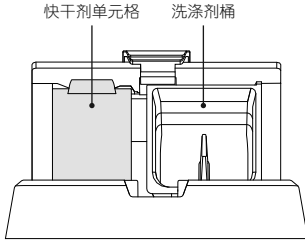


快干剂单元格位于抽屉内，在洗涤剂单元格旁边。快干剂单元格可加入约50毫升快干剂。

### 使用快干剂

可能需要根据水质调节每个洗涤程序的快干剂用量。参看首选项部分和水软化器部分了解使用指南。如果使用粉末洗涤剂，建议先把快干剂加入快干剂单元格，然后再加洗涤剂。


①

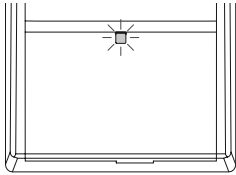

检查快干剂指示灯：


- 如果指示灯变成红色，添加快干剂。
- 如果指示灯变暗，不需要添加快干剂。

②

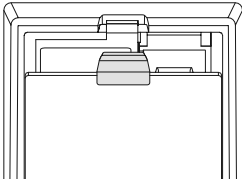

向下压卡扣打开单元格，然后打开快干剂盖子。

③

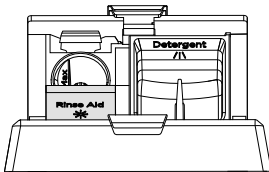


打开盖子，通过孔加入快干剂，注意不要让快干剂溅到抽屉或洗涤剂桶里。

关上单元格直到卡紧。

必须及时擦掉不小心溅到抽屉或洗涤剂桶里的快干剂。溅出来的快干剂可能会造成泡沫过多。可能会造成电器故障，致使保修失效。

## 水软化器

盐槽必须始终装满颗粒盐软化洗碗水。建议不要使用食盐、岩盐或盐球等食用盐，否则它们含有的杂质会损坏水软化器。切勿往盐槽里加入洗涤剂或快干剂，否则可能会损坏盐槽。

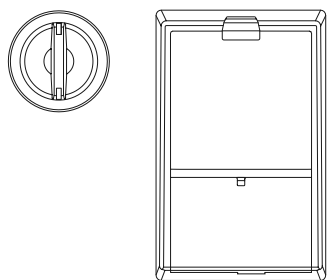


盐槽位于抽屉内，在洗涤剂单元格旁边。盐槽最多可装约400克盐（实际容量取决于所用盐的品牌和颗粒大小）。


**双抽屉型：**每个抽屉有一个独立盐槽。

### 使用盐槽

参看水硬度建议表确定最佳水硬度设置。当水软化器工作时，可能会发出响声，这是正常现象。

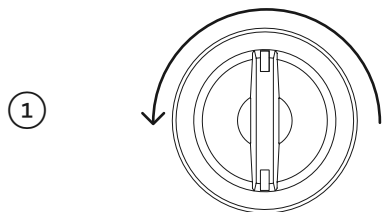

反时针旋转把它取下来。

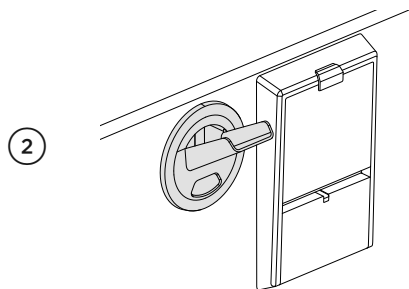

把盐漏斗插入DishDrawer™洗碗机上的加盐口，慢慢把盐倒进盐槽。

在往盐槽里加盐时，可能会听到流水声。这是正常现象。

取出漏斗，盖上盖子，顺时针拧紧。

### 在往盐槽里加盐时

如果盐指示灯变成红色，表示必须加盐了。如果盐槽指示灯变暗，表示盐槽里有足够多的盐。在首次往盐槽里加盐之后，每次洗碗应该加约250克盐，确保洗碗水的盐浓度保持很高，达到理想洗涤效果。



# 水软化器

## 水硬度建议

- 利用下表确定最佳水硬度设置。当地自来水公司应该可以协助你。
- 如果安装了家用软化器，或者洗碗机有内置软化器，无论当地水硬度如何，硬度低于100ppm/6gpg的水都使用建议的洗涤剂用量。参看水硬度部分了解详情。
- 如果水硬度超过625ppm/36gpg，DishDrawer™洗碗机的洗涤效果会逐渐下降。快干剂应该设置为5。

设置	水硬度					
	PPM*	GPG**	° DH	° FH	° E / ° CLARK	MMOL/L
0	0-100	0-6	0-5.6	0-10	0-7	0-0.1
1	100-250	6-14	5.6-14	10-25	7-17.5	0.1-2.5
2	250-350	14-20	14-19.6	25-35	17.5-24.5	2.5-3.5
3	350-450	20-26	19.6-25.2	35-45	24.5-31.5	3.5-4.5
4	450-550	26-32	25.2-30.8	45-55	31.5-38.5	4.5-5.5
5	550-625	32-36	30.8-35	55-62	38.5-43.8	5.5-6.2

\*ppm = 百万分之浓度 | \*\*gpg = 格令/加仑。

## 首选项

可以在开始执行洗涤程序之前调节下列选项的任何设置。

### 快干剂

控制快干剂用量。参看快干剂部分了解详情。

### 水软化器

控制盐用量。参看水软化器部分了解详情。

### 自动通电\*\*

设置DishDrawer™洗碗机在打开一个抽屉之后自动通电30秒钟。

### 声音

调节声音设置。如果设置为关，所有声音静音，故障警报除外。

### 自动锁

允许抽屉在关闭之后自动锁住30秒钟。

## 设置显示


选项	显示	设置
快干剂	消毒 ● 静音 ● 烘干+	关 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟 最大：5 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟
水软化器	消毒 ● 静音 ● 烘干+	关 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟 最大：5 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟
自动通电**	<input type="radio"/> 消毒 ● 静音 ● 烘干+	关 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟 开 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟
声音	消毒 ● 静音 ● 烘干+	关 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟 开 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟
自动锁	消毒 ● 静音 ● 烘干+	关 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟 开 <input type="radio"/> 自动 <input type="radio"/> 强洗 <input type="radio"/> 标准洗 <input type="radio"/> 柔洗 <input type="radio"/> 60分钟

\*\* 适合作为安息日选项。

# 首选项


## 更改设置

1

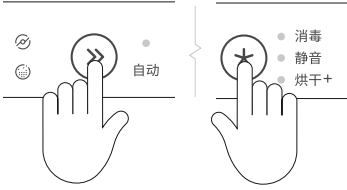


确保洗碗机不在洗碗，然后打开抽屉。同时按住»按钮和★按钮4秒钟。

2

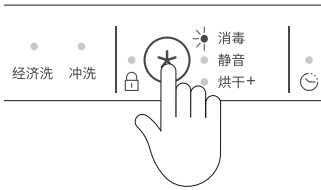


按★按钮滚动显示设置。洗涤选项指示灯说明选择了哪个设置，参看设置显示部分了解详情。

3

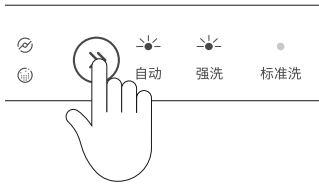

按»按钮更改选项设置。洗涤程序指示灯说明选择了哪个设置。参看设置显示部分了解详情。

4

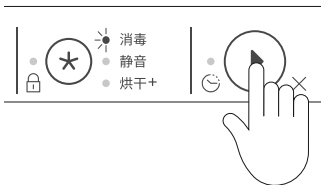


按▶按钮保存新设置并退出菜单。随时可以按住▶按钮取消设置并退出菜单。

### 双抽屉型

在选择一个抽屉更改首选项设置时，将设置两个洗碗机的首选项。

## 刀叉篮


为了降低人身伤害风险，建议你让刀具和锋利厨具的手柄朝上。汤匙和刀叉混放在各个部份，不要让餐具紧贴在一起，确保水流顺畅。不要让不锈钢餐具接触银器，避免形成污点。

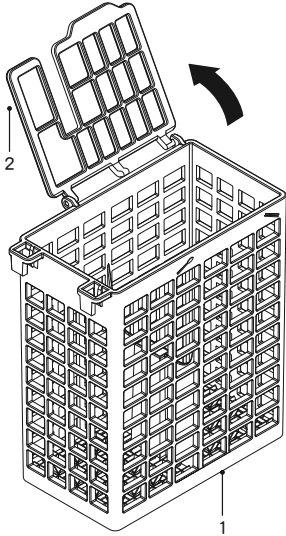

### 刀叉篮功能部件

- ① 刀叉篮
- ② 防叠网


## 刀叉篮配件

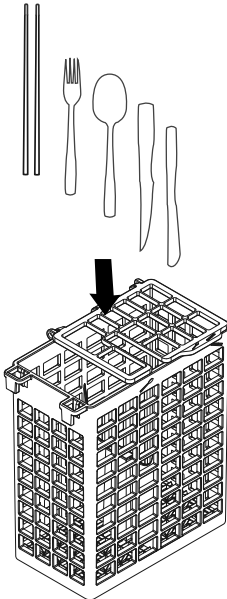

### 防叠网

用防叠网把刀叉分隔开，防止它们叠在一起。


## 碗杯架

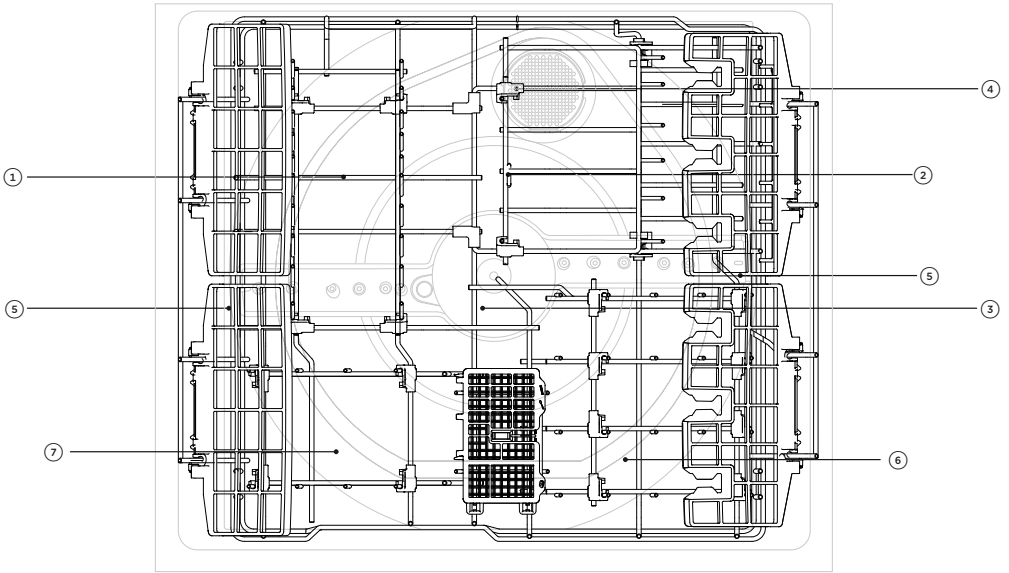

### 碗杯架

- ① 折叠式碟架
  - ② 汤碗支架
  - ③ 底架
  - ④ 活门
  - ⑤ 杯架(6)
  - ⑥ 饭碗支架
  - ⑦ 面条碗支架
- 未画出：玻璃杯支撑

### 底架

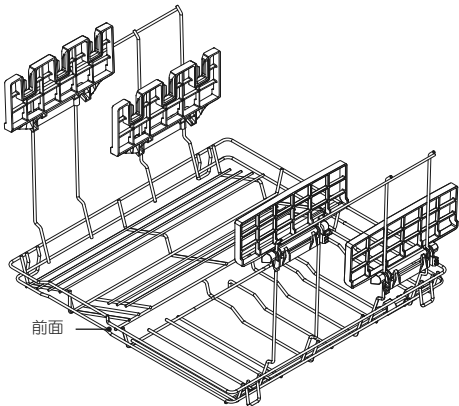

#### 拆卸



- ① 提起前杯架至最高位置，然后向下折叠杯架。
- ② 放下后杯架至最低位置，还可以向下折叠杯架。
- ③ 握住杯架支撑，向外拉杯架两边拉出杯架，小心提单元格前部。

#### 安装

- ① 确保杯架方向如上图所述。
- ② 握住杯架支撑，放下杯架两边，小心放下单元格前部。



### 汤碗支架

汤碗支架用于装大汤碗、水瓶和其他深容器。如果不使用汤碗支架并增大碗碟空间，或者要提起活门，可以向下折叠汤碗支架。

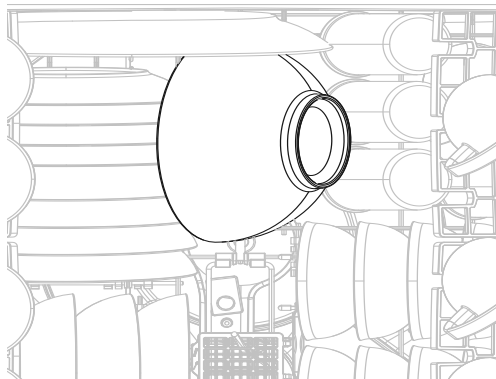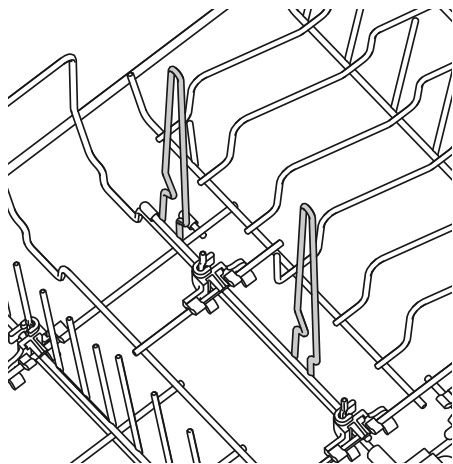

### 鱼盘支架


鱼盘支架用于装鱼盘等大浅盘和大盘子。切记让碟子面向抽屉内部。

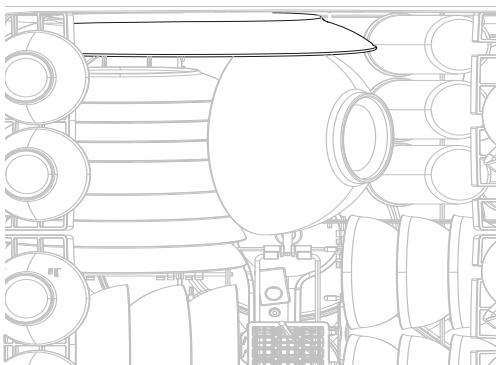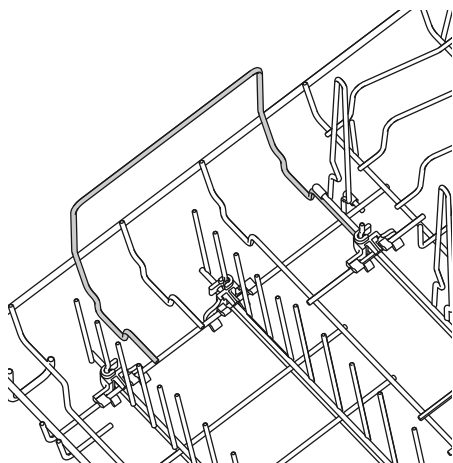

## 碗杯架


### 折叠式碟架

把折叠式碟架往下对折，腾出空间装汤锅或大餐具。

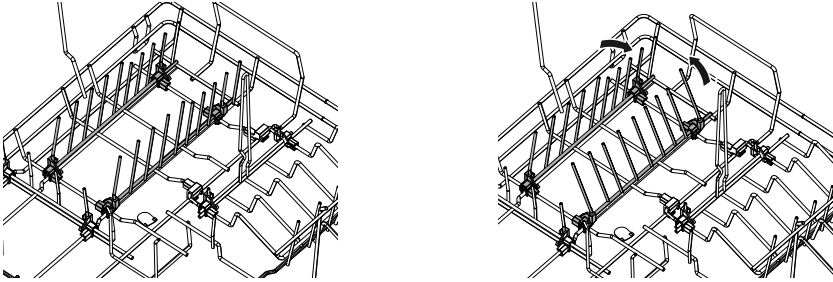

### 折叠式杯架

每个折叠式杯架可以单独折叠腾出抽屉空间，高度可以调节。

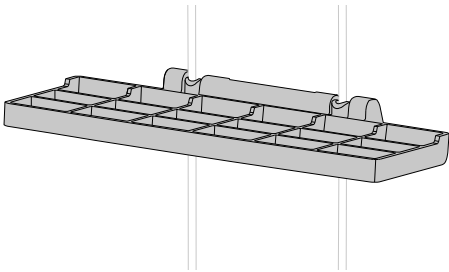


#### 调节高度

- ① 向上折杯架松开杯架。
- ② 上下滑动杯架调节到合适高度。
- ③ 向下折杯架锁定位置。

### 玻璃杯支撑

这些可拆卸支撑夹使高脚玻璃杯更稳定。

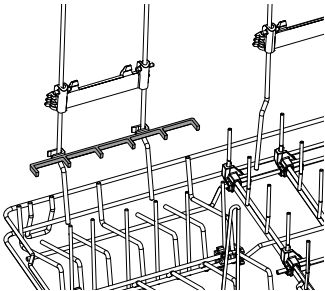


#### 使用玻璃杯支撑

- ① 确保玻璃杯支撑方向如图所示。
- ② 把支撑卡到位。

## 维护

在进行清洁或维护之前，先断开DishDrawer™洗碗机电源并让它冷却。

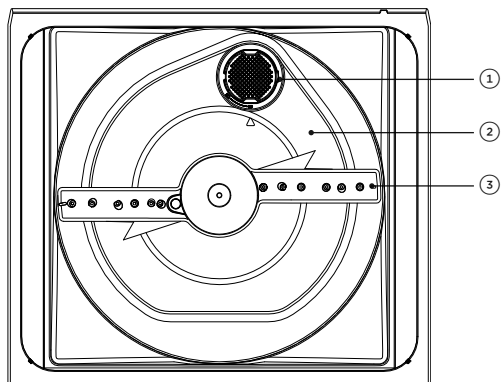

### 抽屉功能部件

- ① 过滤器
- ② 滤板
- ③ 喷淋臂

### 清洁表面

用干净湿抹布擦拭，然后用无绒布擦干。

建议你不要用下列清洁剂/清洁器，否则可能会损伤表面：

- 塑料擦洗片或钢丝球
- 有研磨作用的溶剂型家用清洁剂
- 酸性清洁剂或碱性清洁剂
- 洗手液或肥皂
- 不锈钢清洁剂或光亮剂
- 洗衣粉或消毒剂

### 清洁过滤器、喷淋臂和滤板

建议你每当过滤器清洁指示灯亮或发现有食物残渣时，拆卸并清洁每个抽屉里的过滤器。在正常使用过程中，滤板和喷淋臂清洁频率较低。抖掉滤板和喷淋臂上的异物，用热水擦洗滤板和喷淋臂，再用清水冲洗干净，然后用湿抹布擦干。

只有在正确安装好滤板、过滤器和喷淋臂之后方可使用DishDrawer™洗碗机。如果使用洗碗机清洁剂/除垢剂，必须在除垢之后立刻加洗涤剂运行一次洗涤程序，防止清洁剂/除垢剂损伤DishDrawer™洗碗机。

### 长期闲置不用

如果DishDrawer™洗碗机要闲置一段时间，建议你清洁抽屉，断开电源，关闭水阀，把抽屉稍稍拉出一条缝。


在DishDrawer™洗碗机长期闲置之后再次使用时，建议你在使用洗碗机之前先往抽屉里倒三杯水。这是为了润滑可能在闲置期间变干的零部件。



## 维护


为便于拆卸过滤器，向下折叠汤碗支架，然后提起活门。参看碗杯架部分了解详情。

①

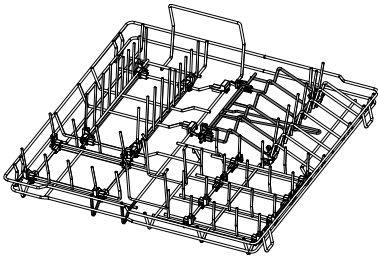

向下折叠汤碗支架。


②

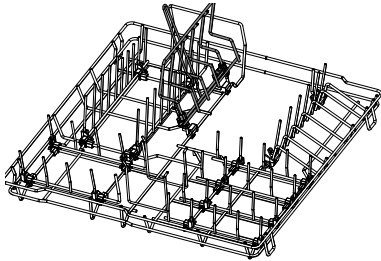

提起活门拆卸过滤器。


### 拆卸和清洁过滤器

①

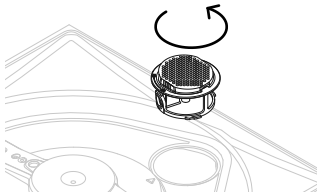

反时针转动过滤器，直到抽屉里的箭头与过滤器上的△对齐。提起过滤器拆下来。

②

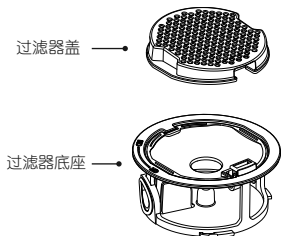

按脱扣按钮，提起过滤器盖使其与过滤器底座分离。

切勿尝试用力拆卸过滤器，否则可能会损坏过滤器。

用温热肥皂水擦洗过滤器，然后用清水冲洗干净。


## 重新安装过滤器

①




让过滤器盖对准过滤器底面上的凹槽。卡紧。

②

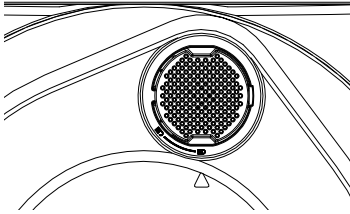


在重新安装过滤器时，让抽屉里的箭头与过滤器上的△对齐。顺时针转动过滤器，直到箭头与△对齐并卡紧。

## 拆卸和清洁喷淋臂

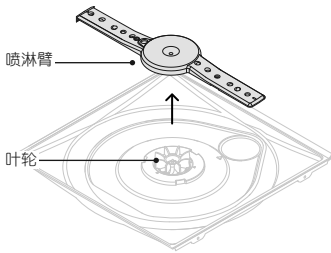


垂直向上提起喷淋臂使其脱离叶轮。抖掉喷淋臂上的疏松残渣，用自来水冲洗干净，然后用湿抹布擦干。确保磁铁干净，水可以流过所有喷水孔。

## 重新安装喷淋臂

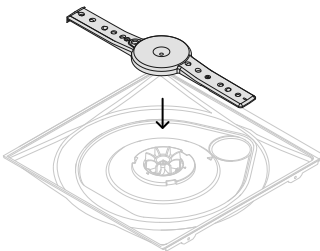


把喷淋臂重新安装在叶轮上。在重新安装喷淋臂时，确保喷淋臂旋转顺畅。

## 拆卸和清洁滤板

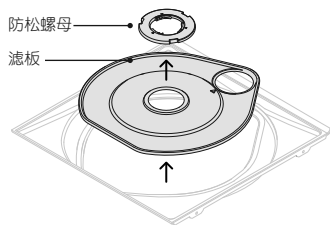

在拆卸过滤器和喷淋臂之后，反时针松开并拆卸防松螺母。慢慢提起滤板，用温热肥皂水擦洗滤板，然后用清水冲洗干净。

## 重新安装滤板

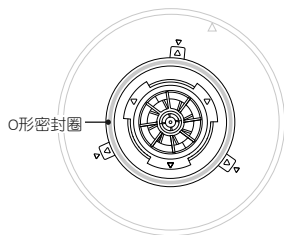


在重新安装滤板之前，切记把O形密封圈正确放在抽屉里如图所示的位置。

把滤板压进抽屉里的安装槽，确保安装槽里没有颗粒物。顺时针拧紧防松螺母固定滤板，让箭头对齐。

## 防冻（仅限于寒冷地区）

如果DishDrawer™洗碗机安装在零度以下的寒冷地区，建议你做好防冻工作。

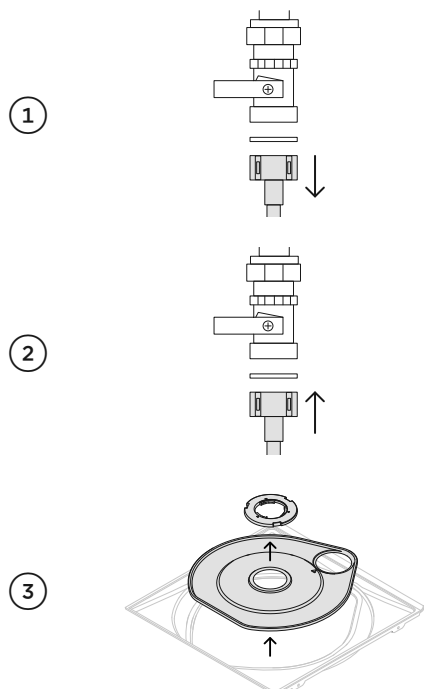

关闭水阀。


断开排水管和下水管，排空与水阀相连的进水管里的残留水。

让软管、进水管和水阀里的水排到水桶或水盆里。


断开进水管和水阀、软管和下水管。

拆卸抽屉底部的过滤器、喷淋臂、防松螺母和滤板。用海绵吸干下面的残留水，然后重新安装过滤器、喷淋臂、防松螺母和滤板。

### 喷淋臂阻塞

如果喷淋臂发生阻塞，指示灯闪烁，在清除警报之前不能使用DishDrawer™洗碗机。

#### 清除喷淋臂阻塞警报

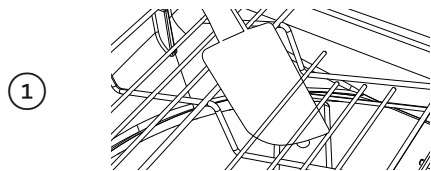


确保喷淋臂可以顺畅旋转，餐具不向下突出妨碍喷淋臂旋转。




按▶按钮清除警报，继续执行洗涤程序。

### 过滤器

如果过滤器发生阻塞，指示灯闪烁，直到清除警报。

#### 清除过滤器阻塞警报

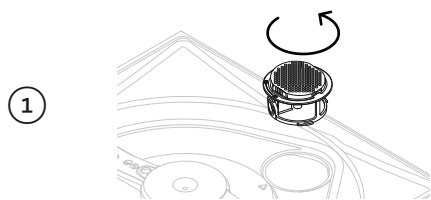

清洁过滤器。参看拆卸和清洁过滤器部分。



按住▶按钮两秒钟关闭阻塞指示灯。

## 故障排除

问题	可能的原因	解决办法
餐具不干净	给碗碟选择的洗涤程序不合适。	给碗碟选择合适的洗涤程序。参看洗涤程序部分。
	抽屉装法不当。	参看装餐具建议部分。
	滤板或过滤器安装错误。	参看拆卸和清洁过滤器部分。
	洗涤剂用量不合适。	参看洗涤剂部分，并遵守洗涤剂制造商的说明。
	餐具上食物残渣过多。	在装餐具之前，先除去餐具上的所有食物残渣。
	喷淋臂上的喷水孔阻塞。	清洁喷淋臂。
	硬水。	增大快干剂设置和洗涤剂用量。参看水硬度部分。
有泡沫	洗涤剂用量不合适。	参看洗涤剂部分。
	碟子上有鸡蛋残留物。	在装餐具之前，先冲洗餐具上的过多鸡蛋残留物。
	快干剂设置太大。	减小快干剂设置。
漏水	排水管与下水管断开。	把排水管重新接到下水管上。
	没有接好进水管。	确保牢固连接进水管。
	其他漏水情况。	断开DishDrawer™洗碗机电源，并关闭水阀。联系客户服务部或授权服务中心安排维修事宜。
敲门不暂停洗涤程序	敲门传感器安装或校准错误。	联系客户服务部安排维修事宜。
DishDrawer™洗碗机意外暂停	敲门传感器把轻拍声误认作敲门声。	敲门传感器安装或校准错误。联系客户服务部安排维修事宜。
抽屉打不开 (不发出蜂鸣声， 没有水声)	童锁激活了。	关闭童锁。参看童锁部分。
	激活了关抽屉时自动锁住。	敲一下门，在30秒钟内打开抽屉。
在洗涤过程中停电	家里或社区停电。	等到恢复供电时，从洗涤程序中断处继续洗碗。

## 故障排除

问题	可能的原因	解决办法
洗涤选项指示灯闪烁	发生故障。	参看故障代码部分。
断断续续发出蜂鸣声	DishDrawer™洗碗机暂停了。	打开抽屉，然后按▶按钮。
DishDrawer™洗碗机不启动	没有连接电源。	连接电源。
	抽屉没有关好。	确保关好抽屉。
	童锁激活了。	关闭童锁。参看童锁部分。
	不开始执行洗涤程序。	参看洗涤程序部分。
	从按▶按钮到关抽屉，暂停时间太长。	打开抽屉按▶按钮，然后在7秒钟内关抽屉。
	DishDrawer™洗碗机处于演示模式。	联系客户服务部安排维修事宜。
在洗涤程序结束之后，洗碗机发出风扇噪音	这是正常现象。风扇继续运转有助于烘干。	在设定时间结束之后，或者打开抽屉时，风扇自动停止运转。在关上抽屉之后，风扇可能继续运转。
在关上抽屉之后，即使不启动新洗涤程序，也发出风扇噪音	这是正常现象。在某些情况下，在洗涤程序结束之后关上抽屉，风扇继续运转。	在设定时间结束之后，风扇自动停止运转。
不添加粉末洗涤剂	洗涤剂单元格在加入洗涤剂之前受潮。	擦干洗涤剂单元格，确保它在加入洗涤剂之前是干燥的。参看洗涤剂部分了解详情。
洗涤程序似乎结束了，但抽屉打不开	洗涤程序尚未结束。洗涤程序进入静止阶段，这是为了确保达到最佳洗涤效果所必需的。	不需要采取措施。在静止阶段结束之后，洗涤程序过渡到发出洗涤响声的阶段。
在洗涤程序结束之后，抽屉内环积水	这是正常凝结水。	擦干即可。
过滤器下面积水	这是正常现象。	不需要采取措施。
抽屉里水太多	排水管弯曲。	拉直排水管。
	过滤器阻塞。	参看维护部分。

## 故障排除

问题	可能的原因	解决办法
餐具上有水渍	快干剂用完了。	往快干剂单元格里加入快干剂。
	快干剂设置太小。	增大快干剂设置。
	DishDrawer™洗碗机装得太满或装法不当。	参看装餐具建议部分。
抽屉内部有凹痕或印记	这是正常现象。日常使用可能会形成微小凹痕。	在往DishDrawer™洗碗机里装餐具时务必小心。
抽屉内部有污点	某些食物可能会沾污抽屉内部。	先冲洗餐具，再装入抽屉。在装餐具之后使用冲洗程序也可以减少污点。

## 故障代码

### 如何知道发生故障？

DishDrawer™洗碗机连续发出蜂鸣声，控制面板上的指示灯亮并闪烁。有两类故障代码：F和A。

- 如果洗涤选项指示灯和锁指示灯闪烁，说明这是F类故障。
- 如果只有洗涤选项指示灯闪烁，说明这是A类故障。
- 如果同时发生F类故障和A类故障，有一个或多个洗涤程序指示灯亮。

### 仅双抽屉型

- 可能只有一个抽屉发生故障，也可能两个抽屉都发生故障，但每个抽屉的故障代码可能不相同。
- 如果只有一个抽屉发生故障，仍然可以使用另一个抽屉。


### 排除故障

先尝试根据下列表格所述步骤排除故障并清除故障代码。如果仍然有问题：

- ① 记录故障代码。
- ② 联系客户服务部寻求技术支持或安排维修技术人员上门维修。参看**维修和保修小册子**了解联系资料。

### F类故障代码

可以根据下列步骤复位DishDrawer™洗碗机清除故障。如果闪烁指示灯熄灭，表示故障已复位，可以继续使用DishDrawer™洗碗机。







显示	可能的原因	解决办法
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	抽屉发生故障	<ol style="list-style-type: none"><li>① 按▶按钮停止蜂鸣声，再按一次断开DishDrawer™洗碗机电源。</li><li>② 等待几秒钟。再按一次▶按钮重新接通DishDrawer™洗碗机电源。</li></ol>



# 故障代码

## A类故障代码

尝试根据下列步骤解决问题。

显示	可能的原因	解决办法
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	A1: 供水故障。	<ol style="list-style-type: none"><li>① 确保打开水阀。</li><li>② 按▶按钮停止蜂鸣声，再按一次清除故障。</li><li>③ 按▶按钮继续执行洗涤程序。</li></ol>
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	A3: 抽屉无法排水。可能是排水管阻塞或扭曲，也可能是下水管接头阻塞。	<ol style="list-style-type: none"><li>① 确保排水管和下水管接头不阻塞。</li><li>② 按▶按钮停止蜂鸣声，再按一次清除故障。</li><li>③ 按▶按钮继续执行洗涤程序。</li></ol>
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	A6: 喷淋臂松脱，水压太小，水压太小和泡沫过多。	<ol style="list-style-type: none"><li>① 打开抽屉检查喷淋臂。</li><li>② 如果喷淋臂松脱，重新安装喷淋臂。检查喷淋臂安装是否牢固，旋转是否顺畅。参看<b>维护</b>部分。</li><li>③ 按▶按钮停止蜂鸣声，再按一次清除故障。</li><li>④ 按▶按钮继续执行洗涤程序。</li></ol>
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	A7: 自动恢复程序—DishDrawer™洗碗机检测到抽屉里泡沫过多。	<ol style="list-style-type: none"><li>① 让自动恢复程序运行完毕。当自动恢复程序运行完毕时，继续执行洗涤程序。</li><li>② 在运行另一个洗涤程序之前，检查所用的洗涤剂是否正确。</li><li>③ 如果在洗涤程序结束时抽屉里充满泡沫，请联系客户服务部安排维修事宜。</li></ol>
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	A09: 消毒程序达不到餐具消毒所需的温度。	<ol style="list-style-type: none"><li>① 检查水阀是否关闭了，洗涤程序是否中断了。</li><li>② 按▶按钮停止蜂鸣声，再按一次清除故障。</li><li>③ 再次运行消毒程序。</li></ol>
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	当前洗涤程序 + 消毒	



### 访问保修和服务指南

用智能手机扫描二维码访问保修及预订维修事宜，也可以登录<https://www.fisherpaykel.com/cn/help-and-support/warranty-information>

### 洗涤程序数据和标准测试

访问<https://www.fisherpaykel.com>网站并搜索电器型号，即可查看洗涤程序数据和标准测试。

填写并妥善保存供日后参考：

型号 \_\_\_\_\_

序列号 \_\_\_\_\_

购买日期 \_\_\_\_\_

购买人 \_\_\_\_\_

经销商 \_\_\_\_\_

县市 \_\_\_\_\_

乡镇 \_\_\_\_\_

国家 \_\_\_\_\_

## 洗涤程序数据

洗涤程序所用时间均为近似时间。参看洗涤程序部分了解用哪个程序清洗装入的餐具。

### DD60DTXI型和DD60DTX6HI型

程序	洗涤程序 (执行时间)							
	强洗 (-175分钟)	标准洗 (-155分钟)	柔洗 (-35分钟)	玻璃洗 (-140分钟)	60分钟 (-60分钟)	自动 (不适用)	经济洗* (-238分钟)	冲洗 (-15分钟)
预洗	50°C	48°C	不适用	45°C	不适用	不适用	不适用	不适用
主洗	65°C	58°C	48°C	55°C	56°C	48°C-65°C	50°C	不适用
后冲洗	是	是	是	是	是	是	是	不适用
最后冲洗	65°C	60°C	40°C	60°C	53°C	60°C	60°C	不适用
烘干阶段	是	是	不适用	是	不适用	是	是	不适用

### DD60STXI型和DD60STX6HI型

程序	洗涤程序 (执行时间)							
	强洗 (-208分钟)	标准洗 (-190分钟)	柔洗 (-35分钟)	玻璃洗 (-175分钟)	60分钟 (-60分钟)	自动 (不适用)	经济洗* (-273分钟)	冲洗 (-15分钟)
预洗	50°C	48°C	不适用	45°C	不适用	不适用	不适用	不适用
主洗	65°C	58°C	48°C	55°C	56°C	48°C-65°C	50°C	不适用
后冲洗	是	是	是	是	是	是	是	不适用
最后冲洗	65°C	60°C	40°C	60°C	53°C	60°C	60°C	不适用
烘干阶段	是	是	不适用	是	不适用	是	是	不适用

\* 能源标签上的参考洗涤程序符合GB38383-2019之规定。

洗碗时间取决于进水温度、环境条件、餐具数量、洗涤过程中是否打开抽屉等因素。电子显示器显示的洗碗时间是按15°C进水温度计算的近似值。

# 标准测试

DishDrawer™洗碗机针对GB38383-2019标准采用下列参数进行过清洗和烘干效果测试。

## 洗涤程序

经济洗

## 洗涤剂用量 (IEC B型)

主洗: 25克/抽屉 —  
加入粉末洗涤剂单元格

## 快干剂设置

3

## 水软化器设置

2

## 容量

每个抽屉8个餐具位

## 配件


底架、折叠式碟架、固定高度碟架、分隔式刀叉篮和折叠式杯架。

## 杯架高度设置


调节高度使其不接触其他餐具。

## 建议的装餐具方法

上下抽屉

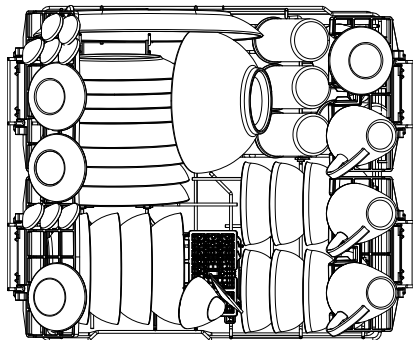

刀叉篮

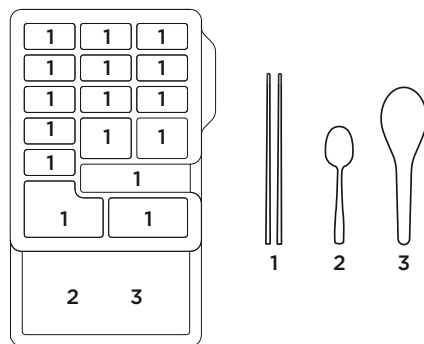







FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2022. 版权所有。

本指南所述的型号并非在所有市场上销售，随时会有变动。

本指南所述的产品规格适用于截止到发行之日所销售和描述的特定产品型号。本公司秉承不断改进产品之政策，上述规格可能随时会有变动。

如要详细了解本国销售的型号和规格，请访问公司网站，也可以联系当地的斐雪派克经销商。

**592431A 2022年5月**



**FISHER & PAYKEL**

**DISHDRAWER™ DISHWASHER**

---

**INTEGRATED**

DD60DTX6HI1, DD60STX6HI1

**USER GUIDE**

**CN**



## CONTENTS

---

Safety and warnings	5
First use	8
Loading suggestions	10
Wash programs	11
Wash modifiers	13
Delayed start	15
Keylock	16
Detergent	18
Rinse aid	20
Water softener	21
Preferences	23
Racking features	25
Maintenance	29
Maintenance alerts	33
Troubleshooting	34
Fault codes	37
Manufacturer's Warranty and Service Guide	39
Wash program data	40
Standards test	41

---

### Registration

To register your product visit our website: [fisherpaykel.com/register](http://fisherpaykel.com/register)



## SAFETY AND WARNINGS

---

### READ AND SAVE THIS GUIDE

When using your DishDrawer™ Dishwasher, follow basic precautions, including the following:

#### General

- The information in this guide must be followed to minimise the risk of fire or explosion or to prevent property damage, personal injury or loss of life.
- Use the DishDrawer™ Dishwasher only for its intended function as described in this guide.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential environments
  - bed and breakfast environments.
- NSF 184-Certified residential dishwashers are not intended for licensed food establishments.
- Use only detergents or rinse aid recommended for use in a domestic dishwasher and keep them out of reach of children. Check that the detergent dispenser is empty after the completion of each wash program.
- When loading items to be washed, locate sharp items so that they are not likely to damage the internal lid of the DishDrawer™ Dishwasher and load sharp knives with the handle up to reduce the risk of cut injuries.
- Do not touch the filter plate in the DishDrawer™ Dishwasher base during or immediately after use, as it may be hot.
- Do not operate your DishDrawer™ Dishwasher unless all enclosure panels are properly in place.
- Do not tamper with the controls.
- Do not abuse, sit on, stand in or on the drawer or dish rack of the DishDrawer™ Dishwasher.
- The drawer should not be left in the open position since this could present a tripping hazard.
- The foldaway cup racks are designed to support cups, glasses and kitchen utensils. When the foldaway cup racks are in the drawer do not lean on or use them to support your body weight.
- To reduce the risk of injury, do not allow children to play in or on the DishDrawer™ Dishwasher.
- Under certain conditions, hydrogen gas may be produced in a hot water heater system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using the DishDrawer™ Dishwasher, turn on all hot water taps and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Remove the door to the washing compartment when removing an old DishDrawer™ Dishwasher from service or discarding it.
- Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the DishDrawer™ Dishwasher when the door is open.
- Under no circumstances should you open the drawer whilst the DishDrawer™ Dishwasher is in operation.

## SAFETY AND WARNINGS

---

- Always knock on the front of the drawer to pause and wait until you hear four beeps before opening the drawer.
- The DishDrawer™ Dishwasher must be used with the motor assembly, filter plate, filter, wire rack and spray arm in place. To identify what these parts are refer to 'Maintenance'.
- Take care not to load dishware items so they prevent the internal lid from properly sealing with the drawer. Items should be placed so they do not protrude above the drawer.
- If the DishDrawer™ Dishwasher is not being used for long periods of time, turn the electricity and water supply off.
- Cleaning and maintenance shall not be done by children without supervision.
- Do not allow children to play inside, on or with this appliance or any discarded appliance.
- Household appliances are not intended to be used by children. Children of less than 8 years old must be kept away from the appliance unless continuously supervised. This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and they understand the hazards involved.
- If a dishwasher cleaner is used, we recommend running a wash program with detergent immediately afterward to prevent any damage.
- The DishDrawer™ Dishwasher is designed for washing normal household utensils. Items that are contaminated by petrol, paint, steel, iron debris, corrosive, acidic or alkaline chemicals are not to be washed in the DishDrawer™ Dishwasher.
- Do not wash plastic items unless they are marked dishwasher safe or equivalent. For plastic items not marked, check the manufacturer's recommendations.
- Avoid washing containers with glued on labels. Labels removed during a wash cycle may cause damage to the wash system.

### Installation

- This DishDrawer™ Dishwasher must be installed and located in accordance with the Installation instructions before it is used. If you did not receive Installation instructions with your DishDrawer™ Dishwasher, you can order them by calling your Authorised Repairer or download them from our local Fisher & Paykel website, listed on the back cover.
- Installation and service must be performed by a Fisher & Paykel trained and supported service technician.
- If the power supply cord is damaged, it must be replaced by a Fisher & Paykel trained and supported service technician or a qualified trades person in order to avoid a hazard.
- Ensure the DishDrawer™ Dishwasher is secured to adjacent cabinetry using the brackets provided. Failure to do so may result in an unstable product, which may cause damage or injury.
- Do not operate this appliance if it is damaged, malfunctioning, partially disassembled or has missing or broken parts, including a damaged power supply cord or plug.
- Do not store or use petrol, or other flammable vapours and liquids in the vicinity of the DishDrawer™ Dishwasher.
- Connect to a properly rated, protected and sized power supply circuit to avoid electrical overload.
- Ensure the power supply cord is located so that it will not be stepped on, tripped over or otherwise subject to damage or stress.

## **SAFETY AND WARNINGS**

---

- Do not install or store the DishDrawer™ Dishwasher where it will be exposed to temperatures below freezing or exposed to weather.
- Do not use an extension cord or a portable electrical outlet device (e.g. multi-socket outlet box) to connect the DishDrawer™ Dishwasher to the power supply.
- This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or Fisher & Paykel trained and supported service technician if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the plug provided with the appliance; if it will not fit the outlet, contact a Fisher & Paykel trained and supported service technician or qualified electrician.
- If the DishDrawer™ Dishwasher is installed as a permanently connected appliance, this appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.


### **Maintenance**

- Disconnect the appliance from the power supply before any cleaning or maintenance.
- When disconnecting the appliance pull the plug rather than the power supply cord or junction of cord to avoid damage.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this guide. We recommend contacting a Fisher & Paykel trained and supported service technician or Customer Care.
- Keep the floor around your appliance clean and dry to reduce the possibility of slipping.
- Keep the area around/underneath your appliance free from the accumulation of combustible materials, such as lint, paper, rags and chemicals.


## FIRST USE

- Ensure the installer has completed the 'Final checklist' in the Installation instructions.
- Read this guide, taking special note of the 'Safety and warnings' section.
- Remove all internal and external packaging and dispose of it responsibly. Recycle items that you can.

### DD60STXI models

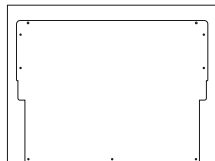

### DD60DTXI models

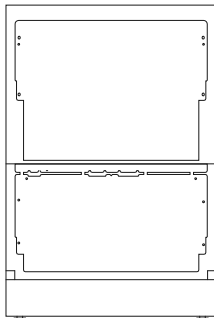

### Control panel overview



### Control panel features

- |                            |                               |
|----------------------------|-------------------------------|
| ① Wash program selector    | ⑦ Lock indicator              |
| ② Wash modifier selector   | ⑧ Spray arm blocked indicator |
| ③ Start                    | ⑨ Filter cleaning indicator   |
| ④ Wash program indicators  |                               |
| ⑤ Wash modifier indicators |                               |
| ⑥ Delay start indicator    |                               |



# FIRST USE

---

## Dishware

The combination of high temperatures and dishwasher detergent may cause damage to some items. Refer to the manufacturer's guidance or wash by hand if in doubt.

### Cutlery & silverware

All cutlery and silverware should be rinsed immediately after use to prevent tarnishing, **RINSE** is recommended. Silver should not come into contact with stainless steel, mixing these can cause staining. Remove silver cutlery from the DishDrawer™ Dishwasher and hand dry immediately.

### Aluminium

Aluminium can be dulled by detergent. The degree of change depends on the quality of the detergent or aluminium.

### Other metals

Iron and cast iron can rust and stain other items. Copper, pewter and brass tend to stain.

### Woodware

Woodware is generally sensitive to heat and water. Regular use in the DishDrawer™ Dishwasher may cause deterioration over time.

### Glassware

Most glassware is dishwasher safe. Crystal, very fine and antique glassware may etch and will develop a cloudy appearance.

### Plastics

Some plastics may change shape or colour with hot water. Refer to the manufacturer's guide. Dishwasher safe plastic should be weighed down so it does not flip and fill with water or fall through the base rack during the wash.

### Decorated items

Most modern china patterns are dishwasher safe. Antique items, those with a pattern painted over the glaze, gold rims or hand painted china may be more sensitive to machine washing.

### Glued items

Certain adhesives are softened or dissolved in machine washing.

---

## Water hardness

Hard water is water with a high concentration of minerals such as calcium and magnesium. It can be detrimental to the performance of your DishDrawer™ Dishwasher and parts can fail over time. Glassware washed in hard water will become cloudy and dishes will become spotted or covered in a white film. Water hardness varies by geographical location.

### If your home has hard water

- Refer to 'Detergent quantity recommendations'.
- Use rinse aid. We recommend you raise the rinse aid setting to 5 to help improve wash performance. Refer to 'Preferences' for details.

Use a dishwasher cleaner/descaler regularly, or whenever you notice a build-up of limescale deposits in your DishDrawer™ Dishwasher.


### If your home has soft or softened water

- Avoid using too much detergent.

## LOADING SUGGESTIONS


---

When loading your drawer ensure items are placed so water coming from the rotating spray arm below can reach all areas. Wash performance will be reduced if it can't.

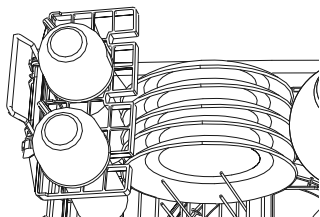

### Ensure

- Spray arms can rotate freely.
- Glass and other fragile items are stable.
- All dish openings are facing downwards.
- Plates are evenly spaced.
- All sharp objects are located securely to avoid injury or damage to the product.

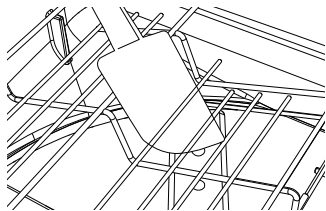

### Avoid


- Overcrowding.
- Any protrusions below the racks and basket that may prevent spray arm rotation.
- Any protrusions at the top of the drawer.
- Blocking water from any items on the foldaway cup racks.

## WASH PROGRAMS

Your DishDrawer™ Dishwasher has a number of wash programs designed to suit your needs. Selecting the most appropriate cycle for each load will help ensure the best wash results.

WASH PROGRAM	PROGRAM DESCRIPTION
AUTO	Suitable for any type of load. The dishwasher automatically selects the optimum wash program
HEAVY	Designed for heavily soiled pots, pans and dishes
MEDIUM	Best for dishes that are quite heavily soiled or to remove food soils that have been left to dry overnight
LIGHT	For very lightly soiled dishes with easy to remove soils; no drying
60MIN	Use for dishes that are quite heavily soiled or food soils that have been left to dry overnight; no drying
GLASSWARE	For lightly soiled and heat sensitive crockery and glassware such as wine glasses
ECO (default)	Best for normally soiled dishes for optimum water and energy use.
RINSE	Prevents odours and soils from drying on dishes

### Setting a wash program

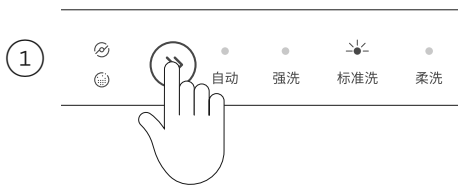

Ensure DishDrawer™ Dishwasher is turned on and detergent has been added.

Press » to scroll through the available wash programs, the selected wash program indicator will illuminate on the display.



Press ► to start the wash before closing the drawer.

## WASH PROGRAMS


---

### Pausing a wash program



Knock on the door 2 times

### Cancelling a wash program with the door open

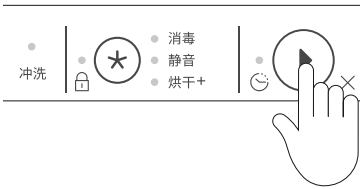


Press and hold ▶.

If there is any water in the drawer, it will automatically drain before the DishDrawer™ Dishwasher turns off.

- Holding ▶ for too long may activate **DELAYED START**. The delay start indicator will flash and a tone will sound to signal this. Refer to 'Cancelling Delayed Start' for details.

### Cancelling a wash program with the door closed

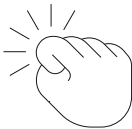

Knock twice to pause the current cycle. Open the drawer and press and hold ▶.

## WASH MODIFIERS

After setting a wash program, you can select one of the following additional options. Only one modifier can be set at a time.

### DRY+

Increases the final rinse temperature and the length of the drying phase.

### QUIET


Lowers the motor speed to reduce noise, ideal for open plan living and night use.

### SANITIZE

Raises the water temperature during the rinse phase to sanitize.

WASH PROGRAM	MODIFIER AVAILABLE
AUTO	DRY+
HEAVY	DRY+, SANITIZE
MEDIUM	DRY+, SANITIZE, QUIET
LIGHT	DRY+
60MIN	DRY+
GLASSWARE	DRY+
ECO (default)	
RINSE	

### Setting a wash modifier

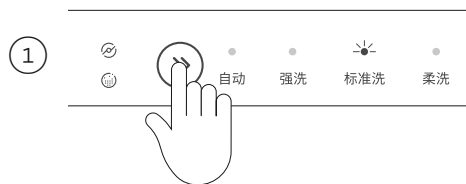

Ensure DishDrawer™ Dishwasher is turned on, detergent has been added and a wash program has been selected.



Press » to scroll through the available wash modifiers, the selected wash modifier indicator will illuminate on the display. Press ▶ to start the wash before closing the drawer.

## WASH MODIFIERS

### Using SANITIZE

The **SANITIZE** wash modifier adjusts the wash program to meet the conditions required by Section 6, NSF 184 for sanitization to occur. While **SANITIZE** is running, the wash program is monitored to ensure that these conditions are met.

Only programs utilising the **SANITIZE** wash modifier are certified to meet the conditions required by Section 6, NSF 184. Other wash programs may not reach the temperatures required for sanitization to occur. See table on previous page for wash programs that have sanitize available.

For sanitization to occur, the temperature of the water needs to reach 70°C. Ensure all items are dishwasher safe before running the sanitize modifier.

If the wash is interrupted or the water supply is turned off during the program, the heating conditions for sanitization may not be met. You may need to run the program again.



### If sanitization has been successful

The wash will finish as normal.



### If sanitization has not been successful

An alert will sound and when the drawer is opened the **SANITIZE** indicator will flash.

- ① Check if the water supply has been turned off or the wash program interrupted.
- ② Press and hold ► once to stop the beeping and then again to clear the alert code.
- ③ Reset **SANITIZE** and run the cycle again

For more information, refer to 'Fault codes'.

## DELAYED START

Set the DishDrawer™ Dishwasher to start later in the day, and run the selected wash program. **DELAYED START** can be set after a wash program has been selected and can be set for up to 12 hours.

### Setting Delayed Start



Press and hold ►, each tone indicates + 1 hour delay and can be set for up to 12 hours.

- If you scroll past 12 hours, the DishDrawer™ Dishwasher will exit **DELAYED START**.
- Countdown will begin when ► is released. The selected wash program will begin when countdown is complete, provided the drawer is closed.

### Cancelling Delayed Start




Press and hold ►.

If there is any water in the drawer, it will automatically drain before the DishDrawer™ Dishwasher turns off

# KEYLOCK


The DishDrawer™ Dishwasher can be locked for cleaning and to prevent unintended use. When the control panel is locked the controls will remain unresponsive.

## Lock Dishwasher

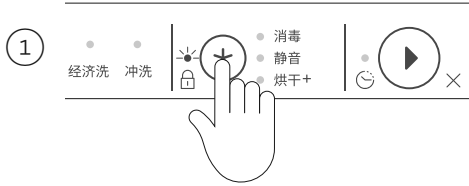


Open the Dishwasher and press and hold ★ until a tone sounds and the lock indicator begins flashing.


## Lock while washing

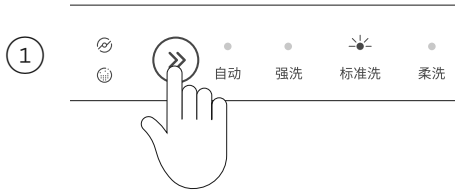

Select the desired wash program.

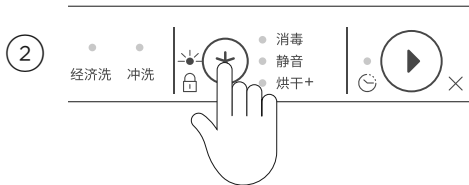

Press and hold ★ until a tone sounds and the lock indicator begins flashing.

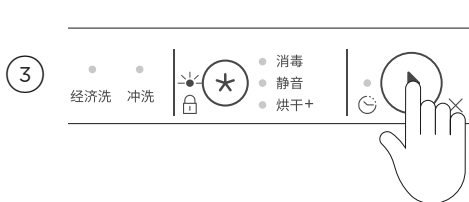


Press ▶ within 10 seconds and close the drawer to begin the wash.

- If a program is not started within 10 seconds, the control panel will lock and the wash program will not begin.



# KEYLOCK

## Unlock with door open

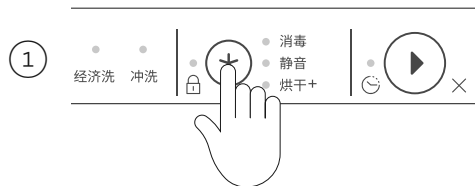

Press and hold ★ until the lock indicator dims.

## Unlock with door closed



Knock on the door 3 times until a tone sounds

# DETERGENT

**WARNING:** Dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children and infirm persons away from the dishwasher when it is open. Check the powdered detergent dispenser is empty after each wash.

## Unsuitable detergents


These types of detergent are not suitable and may damage your DishDrawer™ Dishwasher and lead to a service call that is not covered by warranty:

- Liquid detergents
- Soaps
- Laundry detergents
- Disinfectants
- Hand washing liquids

## Using powdered detergent


Do not place tablets or pouches in the dispenser. Refer to the following 'Detergent quantity recommendations' table and the detergent manufacturer's guidance. No detergent is needed for RINSE.

1

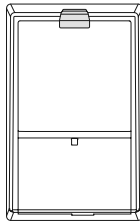

Press the latch down to open the dispenser. Check that the dispenser is empty and dry.

2

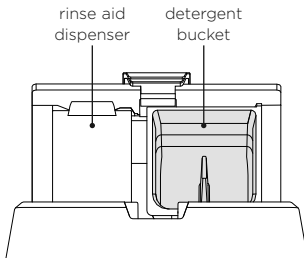

Add powdered detergent to the detergent bucket and close the dispenser gently until it clicks shut.


The detergent will automatically be released into the drawer during the wash program.

When washing heavily soiled dishware in hard water, more detergent may be required. Refer to 'Detergent quantity recommendations'.

# DETERGENT


## Using solid tablets or pouches

Using tablets could improve wash performance in hard water areas. Follow manufacturer guidance. Some tablets or pouches may not be suitable for all wash programs.

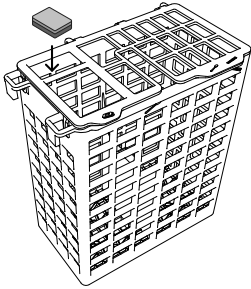

### Place in cutlery basket

Place tablet or pouch in cutlery basket, ensuring it doesn't come in direct contact with dishes or cutlery.

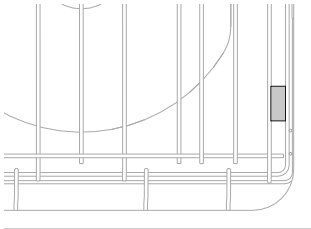

### Place directly in tub

Place the tablet or pouch between the racking at the side as shown.

Do not place on the base of the drawer as it may interfere with the spray arm rotation and affect wash performance.

## Detergent quantity recommendations


- Use the table below to determine the optimal detergent quantity for each wash program.
- If you have high water hardness in your area, more detergent may be required. Refer to 'Water hardness' for more details

WASH PROGRAM	DETERGENT QUANTITY PER DRAWER
AUTO	Full
HEAVY	Full
MEDIUM	Full
LIGHT*	Half full
60MIN	Full
GLASSWARE	Full
ECO	Full
RINSE	n/a

\*tablets are not recommended for the **LIGHT** cycle.

## RINSE AID

Rinse aid provides a streak-free finish to glass and dishware as well as preventing metal from tarnishing. We recommend using a liquid rinse aid regularly for optimal drying results. During dispensing, several pulsing sounds may be heard. This is normal.

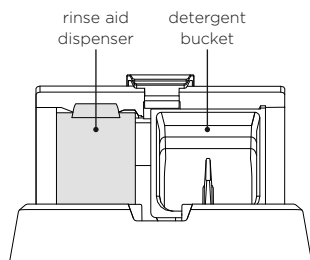


The rinse aid dispenser is located on the inside of the drawer next to the detergent dispenser. It holds approximately 80ml of rinse aid.

### Using rinse aid

The amount of rinse aid dispensed in each wash may need adjusted to suit your water conditions. Refer to 'Preferences' and 'Water softener' for guidance. If using powdered detergent, we recommend filling the rinse aid dispenser before adding detergent.


①

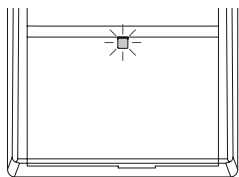

Check the rinse aid indicator:


- If indicator is bright red, refill rinse aid.
- If indicator is dim, a refill is not required.

②

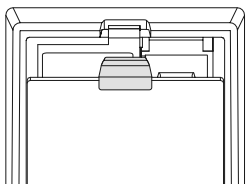

Press the latch down to open the dispenser before lifting the rinse aid cover.

③

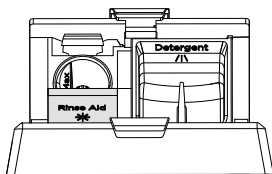



Lift the cover open and pour rinse aid into the opening taking care not to spill any into the drawer or detergent bucket.

Close the dispenser until it clicks shut.

**Any accidental spillages into the tub or detergent bucket must be cleaned up immediately. Spilt rinse aid may result in excessive foaming. A service call relating to these errors will not be covered by warranty.**
 
## WATER SOFTENER

The salt reservoir must always be filled with granular salt designed for dishwasher water softening. We do not recommend the use of cooking salt like table salt, rock salt or pellets as they may contain impurities that will damage the water softener. Do not add detergent or rinse aid to the salt reservoir. This will cause damage.

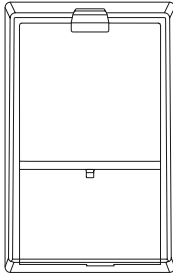


The salt reservoir is located on the inside of the drawer next to the detergent dispenser. It holds up to approximately 400g of salt (actual capacity will vary depending on brand and grain size of salt used).

**Double models:** each drawer has a separate reservoir.

### Using the salt reservoir


Refer to the 'Water hardness recommendations' table to determine the best water hardness setting. You may hear some noises when the water softener is operating, this is normal.

1

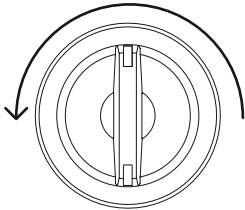

Turn the cap anticlockwise to remove.

2

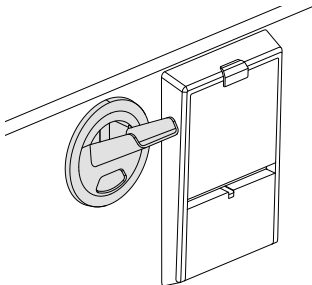

Attach the salt funnel to the DishDrawer™ Dishwasher and carefully pour salt into the reservoir.

**When filling the salt reservoir you may notice water being displaced. This is normal.**

Remove the salt funnel and refit the cap, turning clockwise until secure

### When to refill the salt reservoir

If the salt indicator is red, the salt reservoir must be filled. If the salt indicator is black, there is enough salt in the reservoir. After initially filling the reservoir, approximately 250g of salt should be added each time a refill is required. This will ensure a high salt concentration is maintained to achieve optimal performance.

## WATER SOFTENER

### Water hardness recommendations

- Use the table below to determine the optimal water hardness setting. Your local water company will be able to help.
- If you have a household water softener installed or have a model with built-in water softener, use the quantities recommended for water with a hardness under 100 ppm/6 gpg, irrespective of the water hardness in your area. Refer to 'Water hardness' for more details.
- If your water hardness is above 625 ppm/36 gpg, the wash performance of your DishDrawer™ Dishwasher will decline over time. The rinse aid setting should be at 5.

SETTING	WATER HARDNESS SCALES					
	PPM*	GPG**	°DH	°FH	°E / °CLARK	MMOL/L
0	0-100	0-6	0-5.6	0-10	0-7	0-0.1
1	100-250	6-14	5.6-14	10-25	7-17.5	0.1-2.5
2	250-350	14-20	14-19.6	25-35	17.5-24.5	2.5-3.5
3	350-450	20-26	19.6-25.2	35-45	24.5-31.5	3.5-4.5
4	450-550	26-32	25.2-30.8	45-55	31.5-38.5	4.5-5.5
5	550-625	32-36	30.8-35	55-62	38.5-43.8	5.5-6.2

\*ppm = parts per million | \*\*gpg = grains per gallon.

## PREFERENCES

You can adjust any of the settings of the below options prior to starting a wash cycle.

### Rinse aid

Controls the amount of rinse aid dispensed. Refer to 'Rinse aid' for details.

### Water softener

Controls the amount of salt dispensed. Refer to 'Water softener' for details.

### Auto power-on\*\*

Set your DishDrawer™ Dishwasher to automatically power on for 30 seconds after a drawer is opened.


### Tones

Adjusts tone settings. When set to **OFF** all tones will be silenced except fault alerts.

### Auto lock

Allows the drawer to automatically lock 30 seconds after it's closed.

### Settings displays


OPTION	DISPLAY	SETTINGS																				
Rinse aid	 消毒 ● 静音 ● 烘干+	Off <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table> Max: 5 <table style="display: inline-table; vertical-align: middle;"> <tr> <td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟						自动	强洗	标准洗	柔洗	60分钟
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		
自动	强洗	标准洗	柔洗	60分钟																		
Water softener	 消毒 ● 静音 ● 烘干+	Off <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table> Max: 5 <table style="display: inline-table; vertical-align: middle;"> <tr> <td></td><td></td><td></td><td></td><td></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟						自动	强洗	标准洗	柔洗	60分钟
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		
自动	强洗	标准洗	柔洗	60分钟																		
Auto power-on**	<input type="radio"/> 消毒 <input type="radio"/> 静音 <input checked="" type="radio"/> 烘干+	Off <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table> On <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		
Tones	 消毒 ● 静音 ● 烘干+	Off <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table> On <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		
Auto lock	 消毒 ● 静音 ● 烘干+	Off <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table> On <table style="display: inline-table; vertical-align: middle;"> <tr> <td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td> </tr> <tr> <td>自动</td><td>强洗</td><td>标准洗</td><td>柔洗</td><td>60分钟</td> </tr> </table>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	自动	强洗	标准洗	柔洗	60分钟
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>																		
自动	强洗	标准洗	柔洗	60分钟																		

\*\*Suitable as a Sabbath option.

# PREFERENCES


## Changing the settings

1

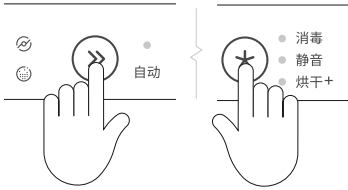


Ensure there is no wash in progress, then open the drawer. Press and hold » and ★ together for four seconds.

2

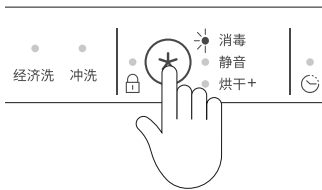


Press ★ to scroll through the settings. The wash modifier indicators will display which setting is selected. Refer to 'Settings display' for details.

3

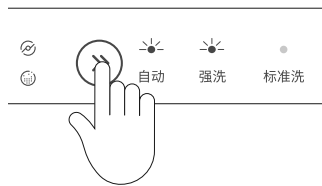

Press » to change the setting within an option. The wash program indicators will display which setting is selected. Refer to 'Settings display' for details.

4

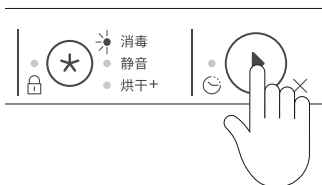

Press ► to save the new setting and leave the menu. If at any time, you want to exit the menu, press and hold ► to cancel.

### Double models


Changing the settings in one tub will set your preferences for both drawers.



## RACKING FEATURES

### Cutlery basket

To reduce the risk of injury, we recommend loading knives and sharp utensils with handles facing up. Mix spoons, knives and forks within each section to stop cutlery nesting together and to ensure the water circulates freely. Keep stainless steel from touching silver cutlery to avoid staining.

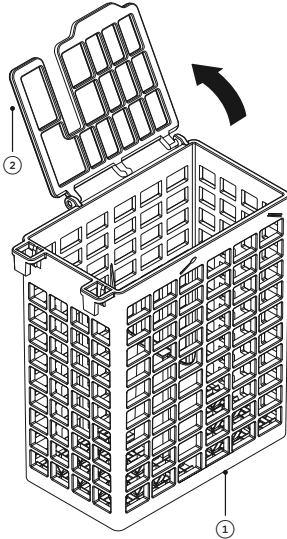


---

### Cutlery basket features

---

- ① Cutlery basket
- ② Anti-nesting grid


### Cutlery basket accessories

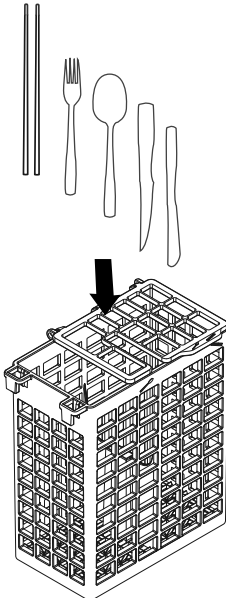

### Anti-nesting grid

Use the anti-nesting grid to separate cutlery items and stop them from nesting together.


# RACKING FEATURES

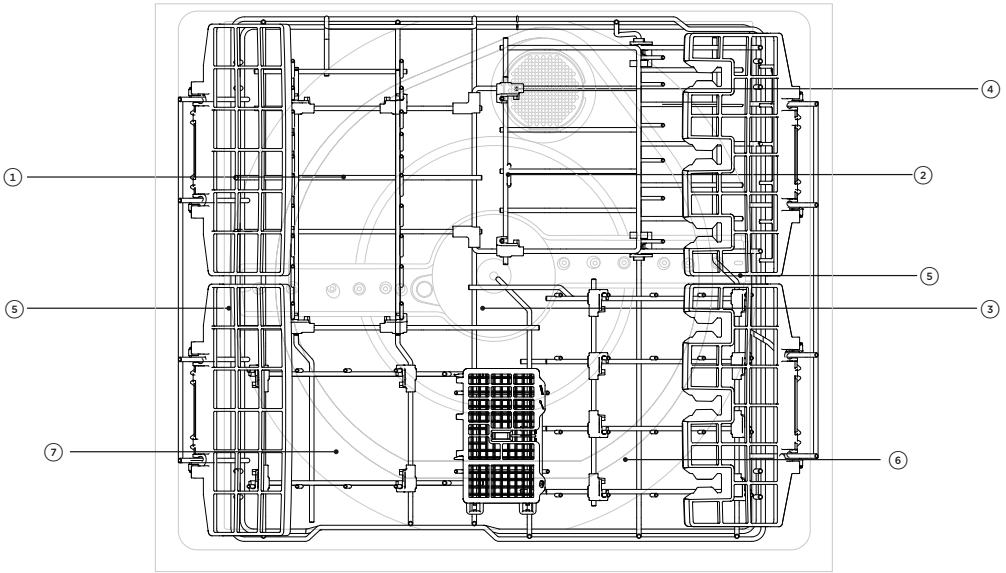

## Racking features

- ① Folding tine rack
  - ② Soup bowl rack
  - ③ Base rack
  - ④ Trap door
  - ⑤ Cup racks (6)
  - ⑥ Rice bowl rack
  - ⑦ Noodle bowl rack
- Not illustrated: glass supports

## Base rack

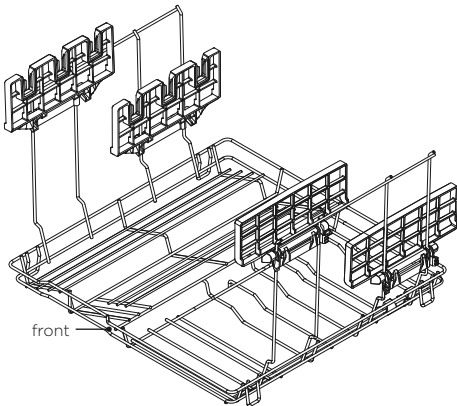

### To remove

- ① Lift the front cup racks to their highest position and fold down.
- ② Lower the rear cup racks to the lowest position and, optionally, fold down.
- ③ Hold the cup rack supports and lift the rack out from each side by pulling towards you, taking care to lift the front around the dispenser.



### To replace

- ① Ensure cup racks are oriented as above.
- ② Hold the cup rack supports and lower the rack down from each side taking care to lower the front around the dispenser.

## RACKING FEATURES



### Soup bowl rack

This rack is designed to fit large soup bowls, drink bottles, and other deep items. Fold the tines down if you are not using and need the extra space, or before lifting the trap door.

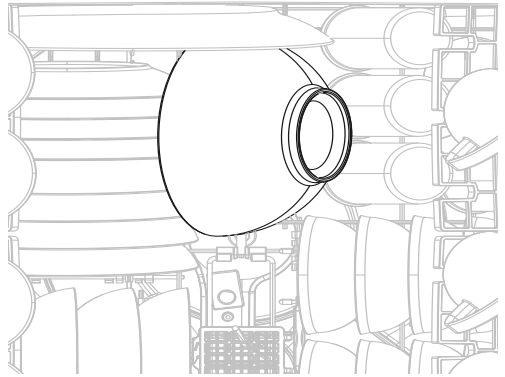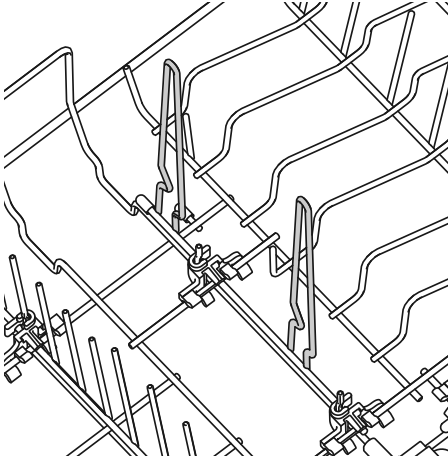

### Fish plate rack



This rack is designed to fit large platters and serving dishes, such as fish plates. Ensure the dish is placed facing forward into the drawer.

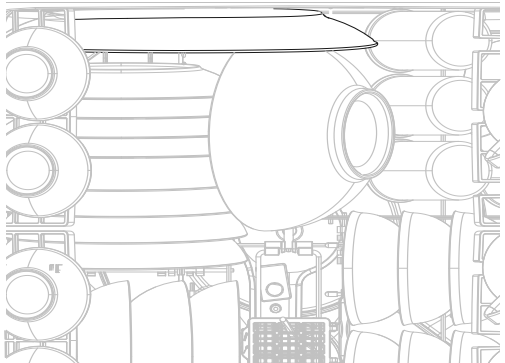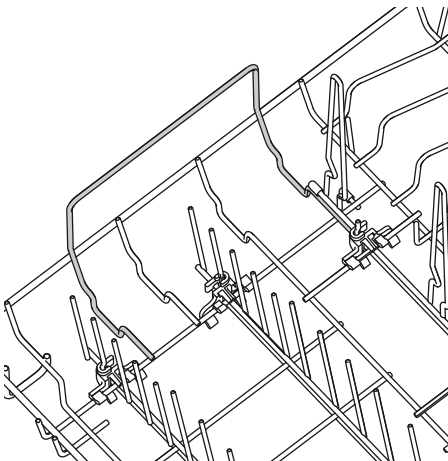

## RACKING FEATURES


### Folding tine rack

Fold tines down towards each other to make space for pots or other large items.

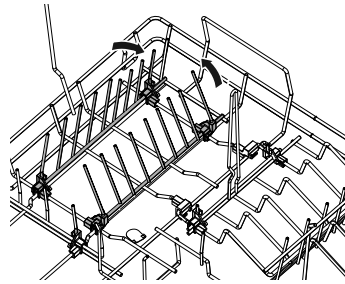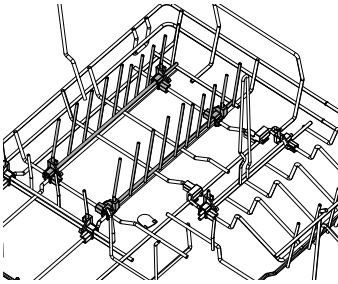

### Foldaway cup racks

Each cup rack can be folded away independently to create more space within the drawer and are height adjustable.

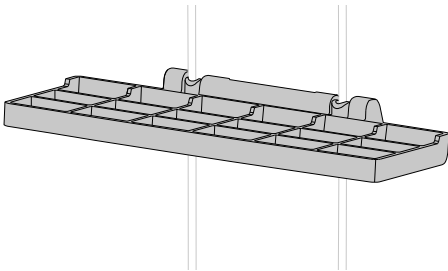


#### To adjust height

- ① Fold up to unlock the rack.
- ② Adjust the height to suit by sliding up or down.
- ③ Fold back down to lock in the position.

### Glass supports

These removable clips provide extra stability when needed.

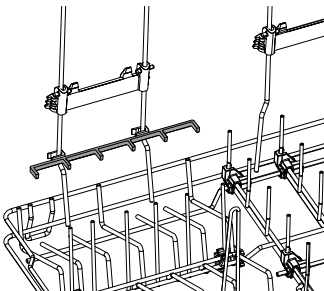


#### Using the glass supports

- ① Ensure supports are oriented as shown.
- ② Clip supports into position.

## MAINTENANCE

Disconnect the DishDrawer™ Dishwasher from the power supply and allow it to cool before undertaking any cleaning or maintenance.

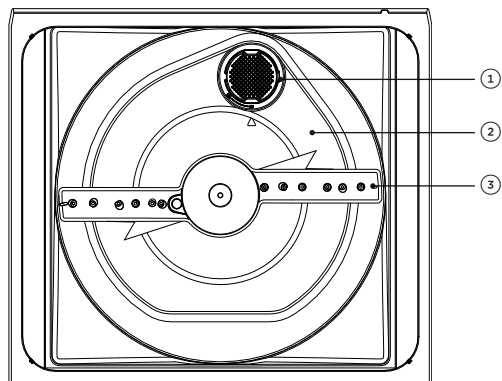

---

### Tube features

---

- ① Filter
- ② Filter plate
- ③ Spray arm

### Cleaning surfaces

Wipe with a damp cloth and dry using a lint-free cloth.

We do not recommend using the following cleaning aids as they may damage the surfaces:

- |  |   |
|--|---|
| <ul style="list-style-type: none"><li>• Plastic or stainless steel scouring pads</li><li>• Abrasive, solvent, household cleaners</li><li>• Acid or alkaline cleaners</li></ul> | <ul style="list-style-type: none"><li>• Hand washing liquids or soap</li><li>• Stainless steel cleaners or polishes</li><li>• Laundry detergents or disinfectants</li></ul> |
|--|---|

### Cleaning the filter, spray arm and filter plate

We recommend that the filter in each drawer is removed and cleaned whenever the cleaning indicator illuminates or whenever there is evidence of food particles. The filter plate and spray arm should require cleaning less frequently during normal use. These parts can be shaken to remove any foreign material, cleaned in hot water, rinsed in clean water, then dried with a damp cloth.

The DishDrawer™ Dishwasher must be used with the filter plate, filter and spray arm correctly in place. If a dishwasher cleaner/descaler is used, you must run a wash program with detergent immediately afterward to prevent any damage to your DishDrawer™ Dishwasher.

### Extended periods of disuse


If the DishDrawer™ Dishwasher is not going to be used for some time we recommend turning off the power and water supply, leaving it clean and empty with the drawers ajar.

When using your DishDrawer™ Dishwasher for the first time after a long period away, we recommend pouring 3 cups of water into the drawer before use. This helps lubricate components that may have dried out during dis-use.

## MAINTENANCE


For ease of access to the filter, fold down the soup bowl rack then lift the trap door. Refer to 'Racking features' for details.

1

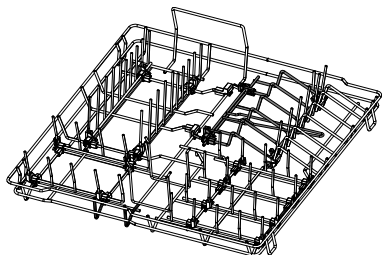

Fold down the soup bowl rack.


2

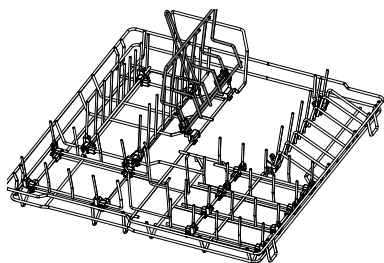


Lift the trap door to access the filter.


### Removing and cleaning the filter

1

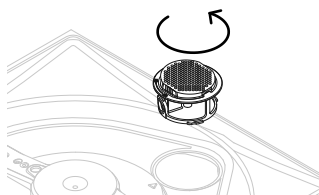

Twist the filter counter-clockwise until the arrow in the tub points to  on the filter. Lift to remove.

2

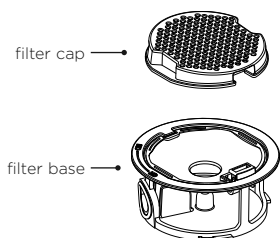

Separate the filter cap from the filter base by pressing the release button and lifting.


**Do not attempt to remove the filter by force as this may cause damage.**

Clean under hot soapy water and rinse thoroughly.

# MAINTENANCE


## Replacing the filter

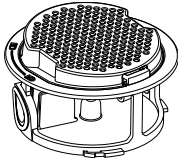

1




Align the filter cap with the notch on the filter base. Click together to secure.

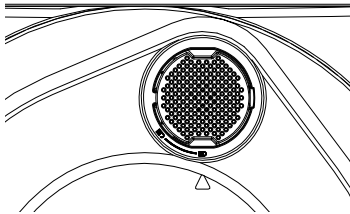2




Place the filter back into the tub by aligning the arrow to the  on the filter. Rotate clockwise until the arrow aligns with  and clicks into position.

## Removing and cleaning the spray arm

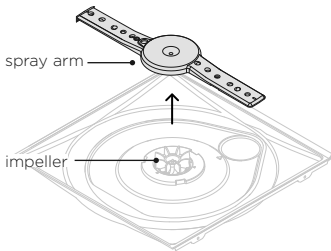

Lift the spray arm off the impeller, pulling up from the centre. Shake to dislodge any loose particles, rinse under running water and wipe with a damp cloth. Ensure the magnet is clean and clear and that water can flow through all holes.


## Refitting the spray arm

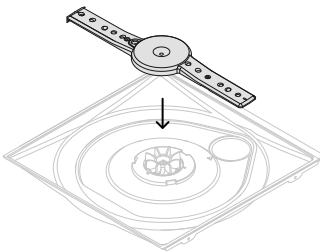

Place the spray arm onto the impeller. Ensure that the arm rotates freely when refitted.


## MAINTENANCE

### Removing and cleaning the filter plate

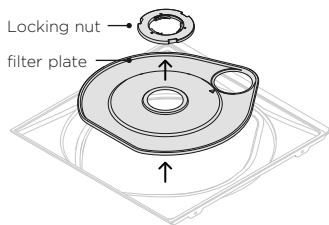

With the filter and spray arm removed, twist the locking nut anti-clockwise and lift out. Carefully lift the filter plate out and clean under hot soapy water before rinsing thoroughly.

### Refitting the filter plate

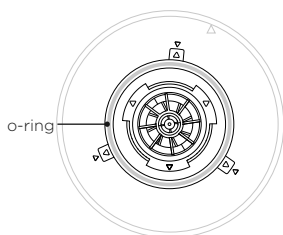


Before refitting the filter plate, ensure the O-ring is correctly positioned in the tub as shown.

Push the filter plate back into the tub ensuring there are no particles in the recess. Secure in place by lowering the locking nut into position and aligning the arrows by rotating clockwise.

### Winterizing (cold climates)

If the DishDrawer™ Dishwasher is installed in a cold climate where temperatures fall below zero, we recommend winterizing.

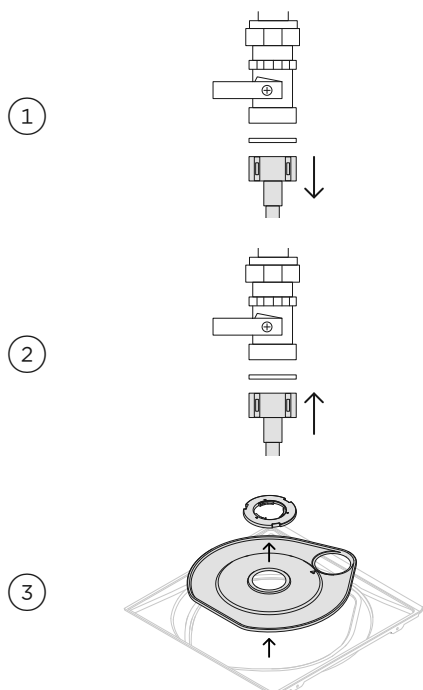

Turn off the water supply.

Disconnect the drain hoses from the sink drain pipe and the water inlet pipe from the water valve.

Drain the water from the hoses, inlet pipe and water valve, using a bucket or pan to collect the water.


Reconnect the water inlet pipe to the water valve and hoses to the sink drain pipe.

Remove the filter, spray arm, locking nut and the filter plate from the bottom of the drawer. Use a sponge to remove any remaining water from underneath before replacing.




## MAINTENANCE ALERTS

### Blocked spray arm

If the spray arm is obstructed,  will flash and the DishDrawer™ Dishwasher will not be able to be used until the warning has been cleared.


#### Resolving blocked spray arm alert


1

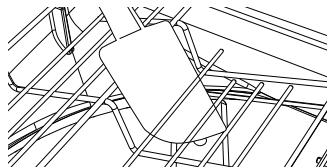

Ensure the spray arm can rotate freely and there are no protrusions below the rack.

2

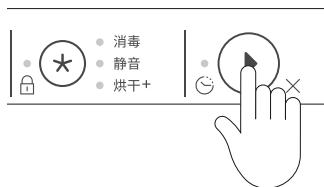


Press  to clear the warning and resume the wash program.

### Filter

If the filter becomes blocked,  will flash until the warning has been cleared.


#### Resolving blocked filter alert


1

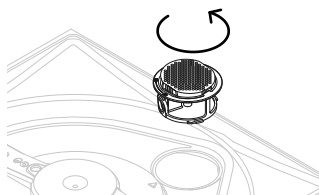

Clean the filter. Refer to 'Removing and cleaning the filter' for guidance.

2

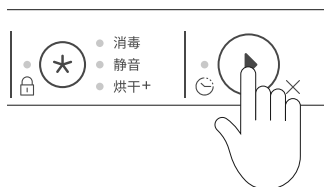

Press and hold  for two seconds to clear the indicator.

## TROUBLESHOOTING

<b>PROBLEM</b>	<b>POSSIBLE CAUSES</b>	<b>WHAT TO DO</b>
<b>Unclean dishes</b>	Unsuitable wash program for load selected.	Select the appropriate wash program for the load. Refer to 'Wash programs'.
	Drawer incorrectly loaded.	Refer to 'Loading suggestions'.
	Filter plate or filter incorrectly installed.	Refer to 'Removing and cleaning the filter'.
	Incorrect detergent use.	Refer to 'Detergent' and follow the detergent manufacturer's instructions.
	Excess food on dishware.	Remove all food scraps prior to loading.
	Spray arm holes blocked.	Clean the spray arm.
	Hard water.	Increase the rinse aid setting and the amount of detergent used. Refer to 'Water hardness'.
<b>Foaming</b>	Incorrect detergent use.	Refer to 'Detergent'.
	Egg left on plates.	Rinse excess egg prior to loading.
	Rinse aid setting too high.	Decrease the rinse aid setting.
<b>Water leaking</b>	Drain hose disconnected from waste pipe.	Reconnect the drain hose to the waste pipe.
	Water inlet hose not connected correctly.	Ensure the inlet hose is connected securely.
	Other leaks.	Turn water and power supplies to the DishDrawer™ Dishwasher off. Call Customer Care or your Authorised Service Centre.
<b>Knocking on the door doesn't pause the wash cycle</b>	Knock to Pause sensor is incorrectly installed or calibrated.	Contact Customer Care.
<b>DishDrawer™ Dishwasher is pausing inadvertently</b>	Knock to Pause sensor is recognising taps as bumps as knocks.	Knock to Pause sensor is incorrectly installed or calibrated. Contact Customer Care.
<b>Drawer will not open</b> (no tones or wash in progress)	<b>KEYLOCK</b> is on.	Turn <b>KEYLOCK</b> off. Refer to 'Keylock'.
	Closed drawer auto lock is on.	Knock once on the door and open drawer within 30 seconds.
<b>Power failure during wash program</b>	Power outage in your home or area.	Wait until power resumes, program will restart in same part of wash program.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Flashing wash modifier indicators	A fault has occurred.	Refer to 'Fault codes'.
Intermittent beeping	DishDrawer™ Dishwasher is paused.	Open the drawer and press ►
DishDrawer™ Dishwasher will not start	Power supply is not connected.	Connect the power supply.
	The drawer is not closed correctly.	Ensure the drawer is firmly closed.
	KEYLOCK is on.	Turn KEYLOCK off. Refer to 'Keylock'.
	Cycle not started	Refer to 'Wash Programs'
	Too much time passed between pressing ► and closing the drawer.	Open the drawer and press ►, close the drawer within 7 seconds.
	DishDrawer™ Dishwasher is in Demo mode.	Contact Customer Care.
Fan noise after a wash program has finished	This is normal. The fan continues to run to assist with drying.	The fan will automatically stop after a set time, or when the drawer is opened. The fan may resume when drawer is closed again.
Fan noise starts when I close the drawer, even though I didn't start a new wash	This is normal. In some cases, the fan will run when the drawer is closed for a set time after a program has finished.	The fan will automatically stop after the set time is over.
No powdered detergent dispensed	Detergent dispenser was wet when loaded.	Clean the dispenser and ensure it is dry before adding detergent. Refer to 'Detergent' for more information.
The wash seems to have finished, but the drawer will not open	The wash is still in progress. It is in a quiet phase that is needed for optimal performance.	No action required. The program will transition into a more audible phase after the quiet phase is over.
Water pooling on inner rim of drawer after a wash	This is normal condensation.	Wipe dry.
Water under the filter	This is normal.	No action required.
Excess water in the drawer	Drain hose(s) bent.	Straighten the drain hose(s).
	Blocked filters.	Refer to 'Maintenance.'

## TROUBLESHOOTING

<b>PROBLEM</b>	<b>POSSIBLE CAUSES</b>	<b>WHAT TO DO</b>
<b>Water marks on the dishes</b>	Rinse aid depleted.	Refill the rinse aid dispenser.
	Rinse aid setting too low.	Increase/turn on the rinse aid setting.
	DishDrawer™ Dishwasher overloaded/incorrectly loaded.	Refer to 'Loading suggestions'.
<b>Dents or marks on the drawer interior</b>	This is normal. Daily use may cause minor cosmetic dents.	Take care when loading the DishDrawer™ Dishwasher.
<b>Drawer interior is stained</b>	Some foods may stain the inside of the drawer.	Pre-rinse dishes before placing in the drawer. Alternatively, use Rinse after adding the dishes may minimise staining.

## FAULT CODES

### How do I know if there is a fault?

Your DishDrawer™ Dishwasher will beep continuously and the indicators on the control panel will light up and flash. There are two types of fault codes – 'F' and 'A'.

- If the wash modifier and lock indicators are flashing, it is an 'F' fault.
- If only the wash modifier indicators are flashing, it is an 'A' fault.
- With both F and A faults, one or more wash program indicators are also lit.

### Double models only

- There may be a fault in one or both of the drawers and the fault codes may be different in each.
- If a fault occurs in one drawer only you are still able to use the other drawer.


### To fix a fault

First try to fix the issue and clear the code according to the steps in the following tables. If the problem persists:

- ① Note down the fault code.
- ② Contact Customer Care for support or to organise a visit by a service technician. Refer to the Service and Warranty document for contact details.

### 'F' fault codes




You may be able to clear the fault by resetting the DishDrawer™ Dishwasher, follow the steps below. When the flashing indicators have disappeared the fault has been reset and you can continue to use your DishDrawer™ Dishwasher.

DISPLAY	POSSIBLE CAUSE	WHAT TO DO
 <p>60分钟 玻璃器皿 经济洗 冲洗 消毒 静音 烘干+</p>	Fault on drawer	<ol style="list-style-type: none"><li>① Press ► to stop the beeping, then again to turn the DishDrawer™ Dishwasher off.</li><li>② Wait a few seconds. Press ► again to turn the DishDrawer™ Dishwasher back on.</li></ol>

## FAULT CODES

### 'A' fault codes

Follow the steps below to try and fix the issue.

DISPLAY	POSSIBLE CAUSE	WHAT TO DO
 <p>60分钟 玻璃器皿 经济洗 冲洗</p>	<p><b>A1:</b> Water Supply fault.</p>	<ol style="list-style-type: none"> <li>① Ensure the water supply is turned on.</li> <li>② Press ► once to stop the beeping, then again to clear the fault.</li> <li>③ Press ► to resume the wash program.</li> </ol>
<p>RINSE + all modifiers</p>	<p><b>A3:</b> Drawer cannot drain. The drainage hose may be blocked or kinked, or the connection to drainage pipe may be blocked.</p>	<ol style="list-style-type: none"> <li>① Ensure the drainage hose and connection to pipes are not blocked.</li> <li>② Press ► once to stop the beeping, then again to clear the fault.</li> <li>③ Press ► to resume the wash program.</li> </ol>
 <p>60分钟 玻璃器皿 经济洗 冲洗</p>	<p><b>A6:</b> The spray arm has loosened or come off its mounting, or water pressure is too low, or a combination of low water pressure and excessive foaming.</p>	<ol style="list-style-type: none"> <li>① Open the drawer and check the spray arm.</li> <li>② If the spray arm has loosened or come off its mounting, re-fit it. Check that it is firmly seated and turns freely. Refer to 'Maintenance'.</li> <li>③ Press ► once to stop the beeping, then again to clear the fault.</li> <li>④ Press ► to resume the wash program.</li> </ol>
<p>ECO, RINSE + all modifiers</p>	<p><b>A7:</b> Auto recovery program - DishDrawer™ Dishwasher has detected excess foam in the drawer.</p>	<ol style="list-style-type: none"> <li>① Let the auto recovery program run until it is complete. The wash program will resume when the auto recovery program has completed.</li> <li>② Check that you are using the right detergent before running another wash program.</li> <li>③ If the drawer is still filled with foam at the end of the wash program, contact Customer Care.</li> </ol>
 <p>60分钟 玻璃器皿 经济洗 冲洗</p>	<p><b>A09:</b> Sanitize cycle hasn't met temperature needed to sanitize dishes.</p>	<ol style="list-style-type: none"> <li>① Check if the water supply has been turned off or the wash program interrupted.</li> <li>② Press ► once to stop the beeping, then again to clear the fault.</li> <li>③ Run the sanitize cycle again.</li> </ol>
<p>GLASSWARE, ECO + RINSE + all modifiers</p>	<p>Current wash program + <b>SANITIZE</b></p>	

# MANUFACTURER'S WARRANTY AND SERVICE GUIDE

---



## To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, or view online at <https://www.fisherpaykel.com/cn/help-and-support/warranty-information>

## Wash program data and standards test

Wash program data and standards test information can be viewed online by going to <https://www.fisherpaykel.com> and searching your model code.

### Complete and keep for safe reference:

Model \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date \_\_\_\_\_

Purchaser \_\_\_\_\_

Dealer \_\_\_\_\_

Suburb \_\_\_\_\_

Town \_\_\_\_\_

Country \_\_\_\_\_

## WASH PROGRAM DATA

Wash program times indicated are approximate. For information on which program to use for your load, refer to 'wash programs'.

### DD60DTXI, DD60DTX6HI models

CYCLE	WASH PROGRAM (CYCLE TIME)							
	HEAVY (-175min)	MEDIUM (-155min)	LIGHT (-35min)	GLASSWARE (-140min)	60 MIN (-60min)	AUTO (n/a)	ECO* (-238min)	RINSE (-15min)
Pre wash	50°C	48°C	n/a	45°C	n/a	n/a	n/a	n/a
Main wash	65°C	58°C	48°C	55°C	56°C	48°C - 65°C	50°C	n/a
Post rinse	Yes	Yes	Yes	Yes	Yes	Yes	Yes	n/a
Final rinse	65°C	60°C	40°C	60°C	53°C	60°C	60°C	n/a
Drying phase	Yes	Yes	n/a	Yes	n/a	Yes	Yes	n/a

### DD60STXI, DD60STX6HI models

CYCLE	WASH PROGRAM (CYCLE TIME)							
	HEAVY (-208min)	MEDIUM (-190min)	LIGHT (-35min)	GLASSWARE (-175min)	60 MIN (-60min)	AUTO (n/a)	ECO* (-273min)	RINSE (-15min)
Pre wash	50°C	48°C	n/a	45°C	n/a	n/a	n/a	n/a
Main wash	65°C	58°C	48°C	55°C	56°C	48°C - 65°C	50°C	n/a
Post rinse	Yes	Yes	Yes	Yes	Yes	Yes	Yes	n/a
Final rinse	65°C	60°C	40°C	60°C	53°C	60°C	60°C	n/a
Drying phase	Yes	Yes	n/a	Yes	n/a	Yes	Yes	n/a

\*Reference program for energy label in compliance with GB38383 - 2019.

Wash times can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 15°C incoming water.



# STANDARDS TEST

The DishDrawer™ Dishwashers are tested to GB38383 - 2019 standards for both wash and dry performance using the parameters detailed below.

## Wash program

Eco

## Detergent quantity (IEC type B)

MAIN WASH: 25g per drawer - added to the powdered detergent dispenser

## Rinse aid setting

3

## Water softener setting

2

## Capacity

8 place settings per drawer

## Accessories


Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid, fold away cup racks.

## Height setting of cup racks


Adjust the height to a position clear of other load items.

## Recommended loading pattern

Top and bottom drawer

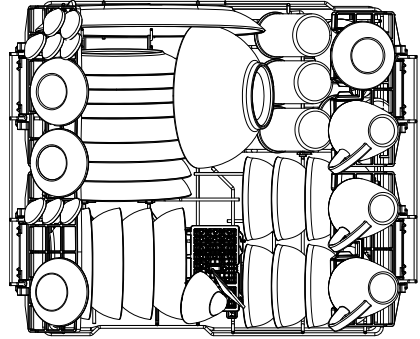

## Cutlery basket

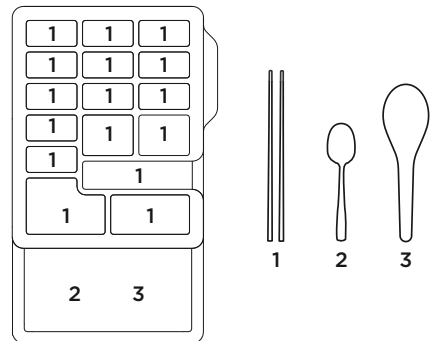





**FISHERPAYKEL.COM**

© Fisher & Paykel Appliances 2022. All rights reserved.

The models shown in this guide may not be available in all markets  
and are subject to change at any time.

The product specifications in this guide apply to the specific products and  
models described at the date of issue. Under our policy of continuous product  
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,  
please go to our website or contact your local Fisher & Paykel dealer.

**592431A 05.22**