

FISHER & PAYKEL

WATER FILTER REPLACEMENT INSTRUCTIONS

All ice and water refrigeration products using water filters 847200 & 847201

INSTALLATION GUIDE
NZ AU GB IE HK SG IN US CA

① SAFETY AND WARNINGS

Water filter

IMPORTANT!

- **The water connection to your ice & water refrigerator must be installed by an qualified plumber or Fisher & Paykel trained and supported service technician and comply with all state and local laws.**
- **Installation and use MUST comply with all state and local plumbing codes. Check with your local public works department for plumbing codes. You must follow their guidelines as you install the water filtration system.**
- **To avoid serious illness or death, only connect your water filter to safe drinking water.**
- **The water filter cartridge needs to be changed when the replacement indicator icon illuminates. This will happen every 6 months.**
- **If the water filtration system has been allowed to freeze, replace filter cartridge. Failure to replace the disposable filter at recommended intervals may lead to reduced filter performance and failure of the filter, causing property damage from water leakage or flooding.**
- **In cases of excessively reduced filter life—we recommend that you consult a local plumber or your water supplier for advice on suitable filtration requirements for the water supplied to your home.**
- **Filter replacement is the consumer’s responsibility and will not be covered by the warranty except in the case of faulty parts or materials within the filter cartridge.**
- **If the water has not created ice for some time or ice has an unpleasant taste or odor dispose of ice and refer to the flushing instructions in this book. If unpleasant taste or odor persists, you may wish to fit a new filter cartridge.**
- **Your water filtration system can withstand up to 120psi (827kPa) of water pressure. Ensure the supplied pressure reducing valve is installed before installing the water filtration system. DO NOT install if water pressure exceeds 120psi (827kPa).**

To reduce the risk associated with property damage due to water leakage or flooding:

- **DO NOT install systems in areas where ambient temperatures may go above 100°F (38°C) or drop below 33°F (0.6°C).**
- **DO NOT install on hot water supply lines. The maximum operating water temperature of this filter system is 100°F (38°C).**
- **DO NOT install where water hammer conditions may occur. If water hammer conditions exist, you must install a water hammer arrester.**

847200 – Certified by: IAPMO R&T against NSF/ANSI Standards 43, 53, 401 and CSA B4831.1 for the reduction of claims specified on the performance data sheet and at iapmort.org. 847200 compounds certified under NSF/ANSI 401 have been deemed as incidental contaminants/emerging compounds. Incidental contaminants are those compounds that have been detected in drinking water supplies at trace levels. While occurring at only trace levels, these compounds can affect the public acceptance of drinking quality water.

847201 – Certified by: IAPMO R&T against NSF/ANSI Standards 43 and CSA B4831.1 for the reduction of claims specified on the performance data sheet and at iapmort.org.

Rated capacity

847200 – 102 gallons (386 litres)

847201 – 170 gallons (643 litres)

Flow rate

0.5 gpm (1.89 Lpm)

Replacement filter cartridges can be purchased online at fisherpaykel.com or by calling Fisher & Paykel Customer Care. Details of the replacement filter cartridge are labelled on the cartridge.

Office address

Fisher & Paykel Appliances Ltd
PO Box 58550
Botany
Auckland 2163
New Zealand



Customer Care

Phone: +64 9 273 0660

② FOR FREESTANDING REFRIGERATORS


Removing the old filter

Note: It is not necessary to turn the water supply off when removing the water filter. It is easier to remove the water filter with the water turned on.

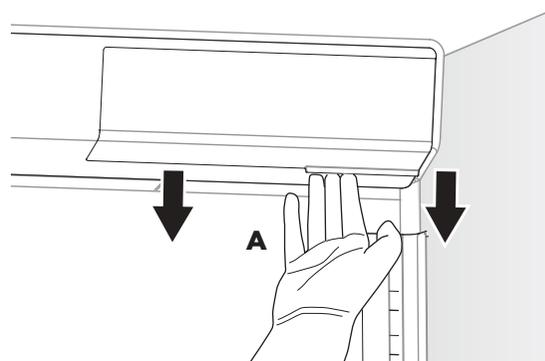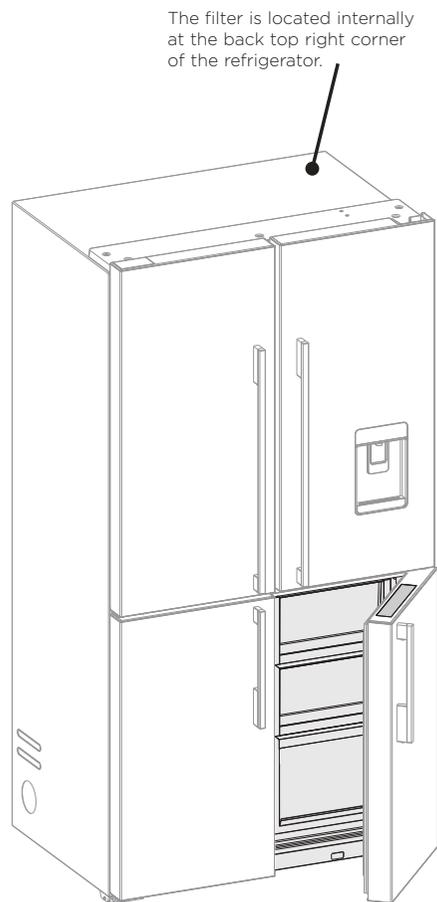


- ① Find the filter cover on the back wall, top right of your refrigerator.
- ② Pull the tab (A) at the bottom of the cover towards you to release. The cover will slide down upon release.


Note: Remove the top shelf if you need more space while removing the filter.

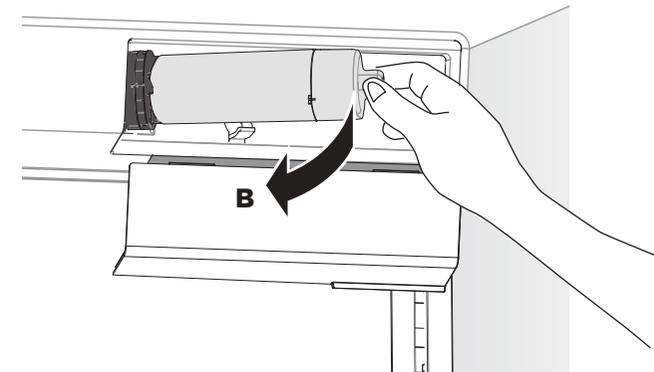

- ③ Hold the base of the filter firmly and pull towards you (B).

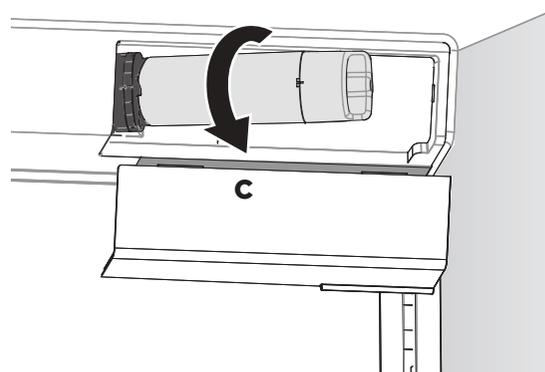

- ④ Rotate the filter counterclockwise 90°. The filter should release from the filter head (C), if it does not, pull the filter toward you.

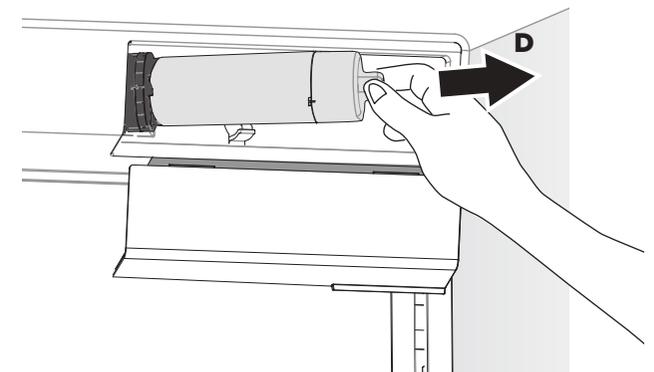


- ⑤ Pull out the filter (D) to remove it from the filter head. Discard the old filter.
 - If the filter is difficult to remove, run water through the filter by dispensing water.
 - A small amount of water will drip after you remove the filter. This is normal.


② FOR FREESTANDING REFRIGERATORS

Installing the new filter


Note: It is not necessary to turn the water supply off when installing the water filter.

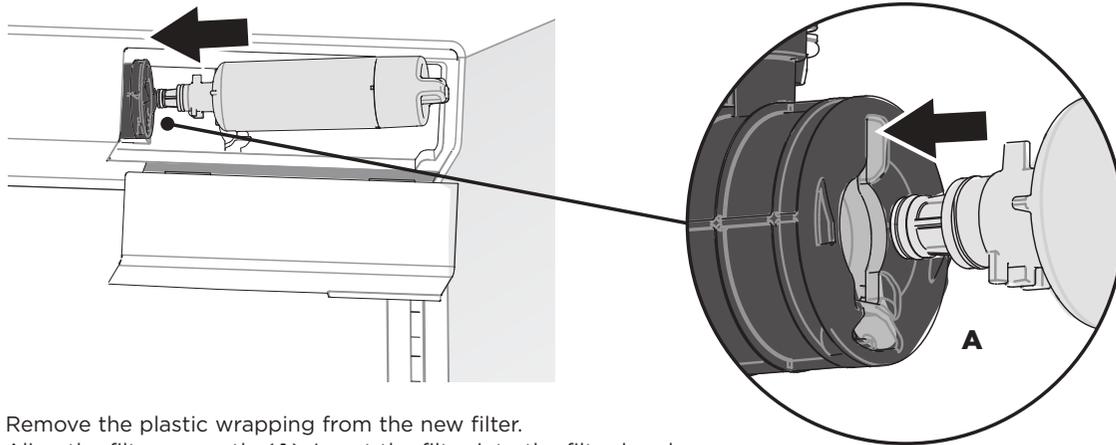


- ① Remove the plastic wrapping from the new filter.
- ② Align the filter correctly (**A**). Insert the filter into the filter head.

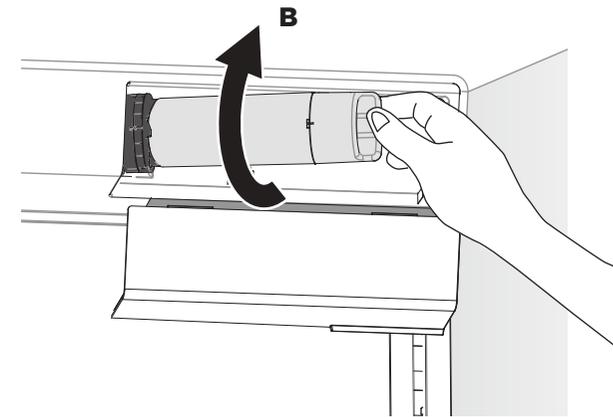

- ③ Push the filter firmly all the way into the filter head then rotate the filter clockwise 90° until it locks into place (**B**).
 - If the filter will not turn, ensure the filter is correctly aligned (**A**), to allow the filter to be pushed firmly into the filter head.
 - Ensure the filter is fully rotated 90° to allow the water to flow.

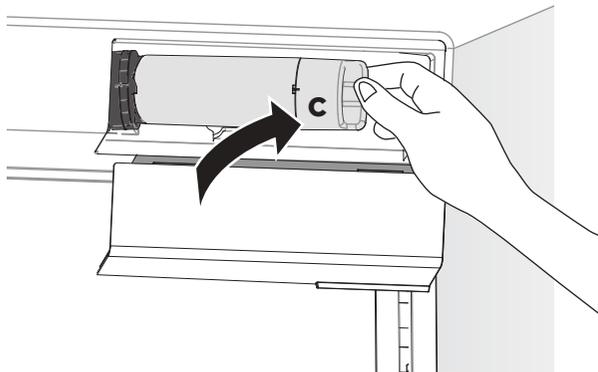

- ④ Push the entire filter back into the bracket (**C**).

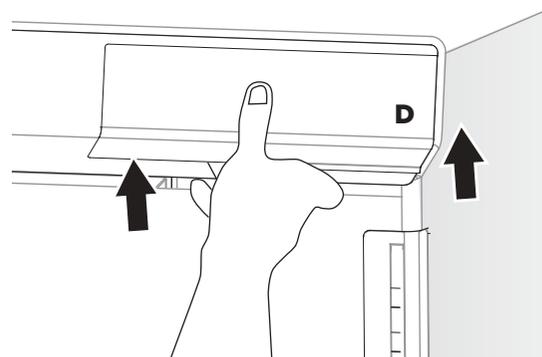

- ⑤ Push the cover up and into the slots at the top of the filter housing until it clicks and the base locks firmly into place (**D**).


IMPORTANT!

After installation, the water filter MUST be flushed. Refer to 'Flushing the water filter' for details.


③ FOR REFRIGERATORS WITH EXTERNAL FILTER

Removing the old filter


Note: It is not necessary to turn the water supply off when removing the water filter. It is easier to remove the water filter with the water turned on.

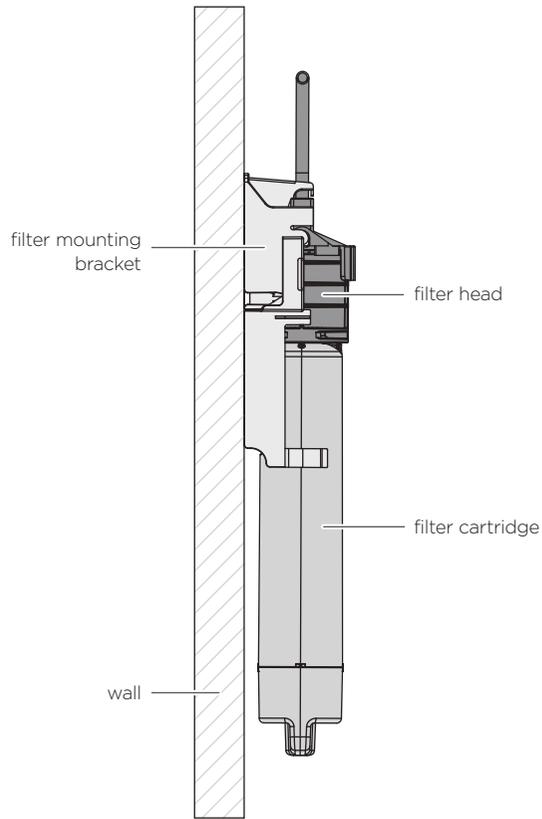


External water filter attached to wall

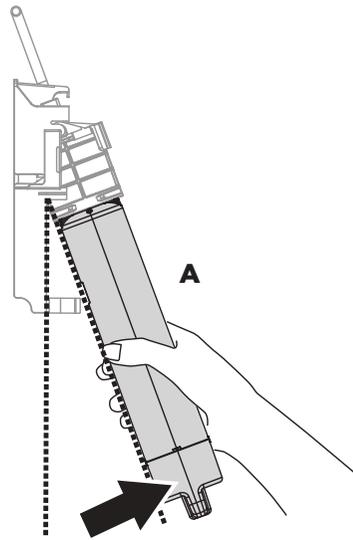

- ① Hold the base of the filter firmly and pull towards you. The filter will tilt towards you from the bracket (A).

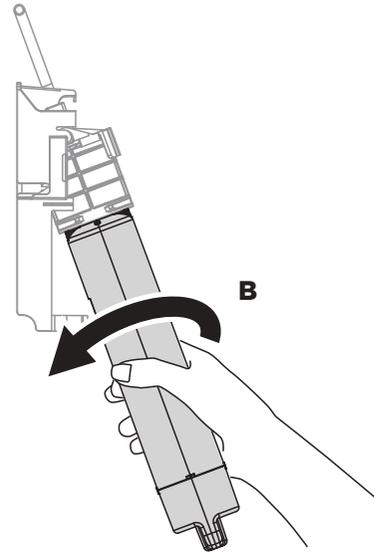

- ② Rotate the filter counterclockwise until it releases from the filter head (B).
- If the filter is difficult to remove, run water through the filter by dispensing water.

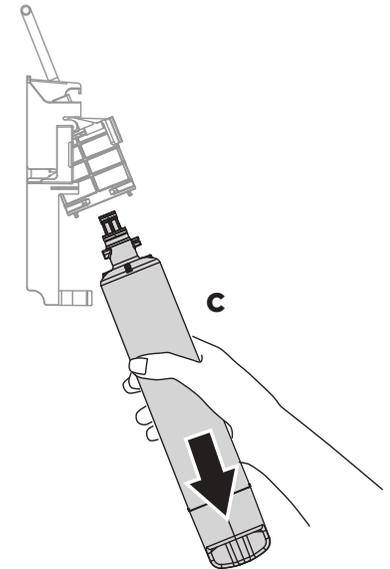


- ③ Pull down vertically to remove the filter from the bracket (C). Discard the old filter.
- A small amount of water will drip after you remove the filter. This is normal.

③ FOR REFRIGERATORS WITH EXTERNAL FILTER

Installing the new filter

Note: It is not necessary to turn the water supply off when installing the water filter.

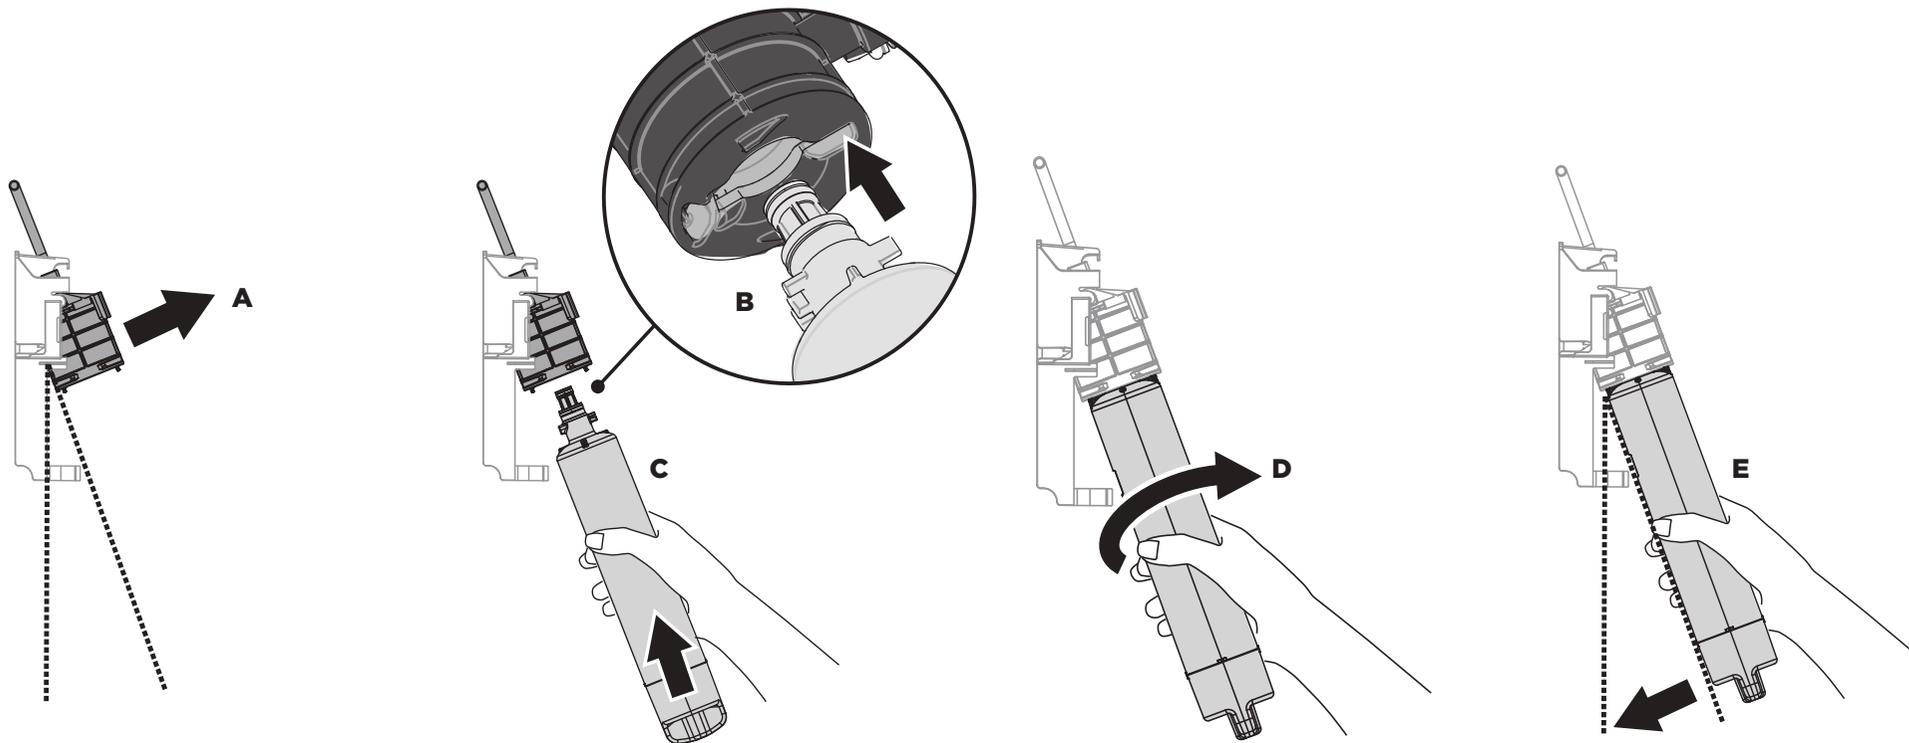

- ① Remove the plastic wrapping from the new filter.
- ② Pull the filter head towards you (A).

- ③ Align the filter correctly (B). Insert the filter into the filter head (C).

- ④ Push the filter firmly all the way into the filter head then rotate the filter clockwise 90° until it locks into place (D).
 - If the filter will not turn, ensure the filter is correctly aligned (B), to allow the filter to be pushed firmly into the filter head.
 - Ensure the filter is fully rotated 90° to allow the water to flow.


- ⑤ Push the entire filter back into the bracket (E).

IMPORTANT!
After installation, the water filter **MUST** be flushed.
Refer to 'Flushing the water filter' for details.


④ FOR INTEGRATED COLUMNS REFRIGERATORS

Removing the old filter


Note: It is not necessary to turn the water supply off when removing the water filter. It is easier to remove the water filter with the water turned on.

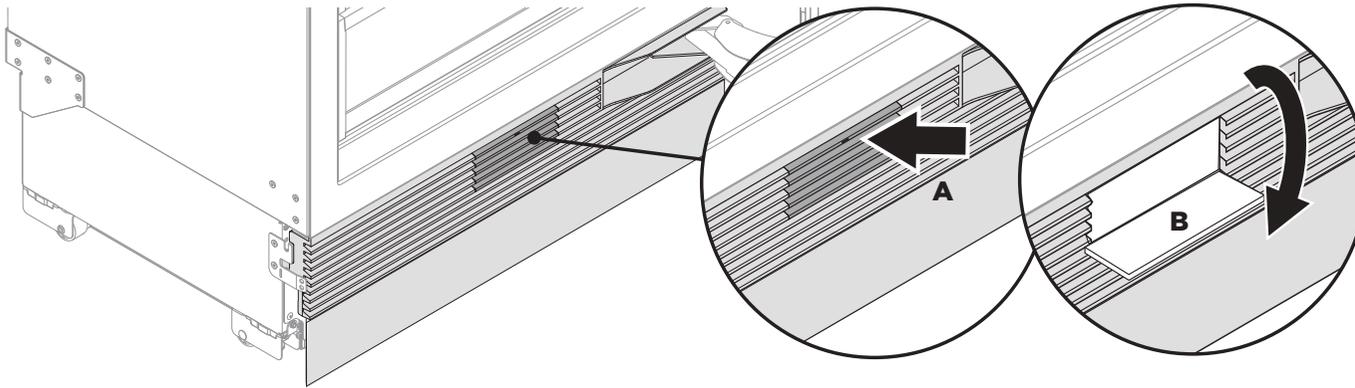


- ① Open the water filter hatch to access the filter (A), press the hatch in then pull the hatch down (B).

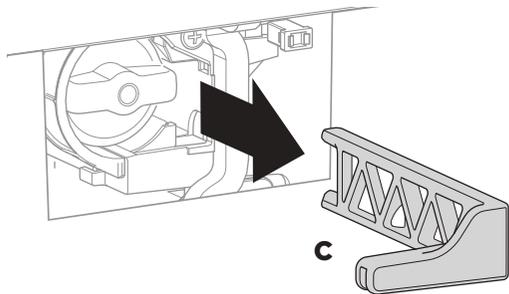

- ② Pull the filter tool gently to dislodge from the front of the appliance (C).

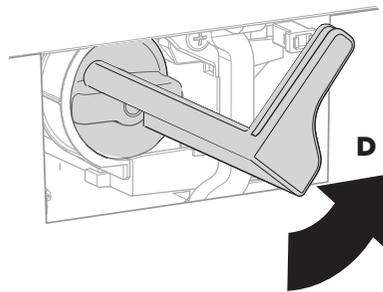

- ③ Using the filter tool, rotate the filter head 90° counterclockwise to release (D).

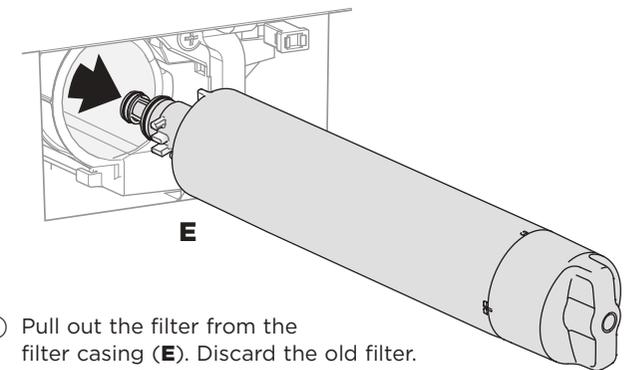


- ④ Pull out the filter from the filter casing (E). Discard the old filter.
- If the filter is difficult to remove, run water through the filter by using the automatic ice maker. Refer to the user guide for your appliance for further details.


④ FOR INTEGRATED COLUMNS REFRIGERATORS

Installing the new filter


Note: It is not necessary to turn the water supply off when installing the water filter.

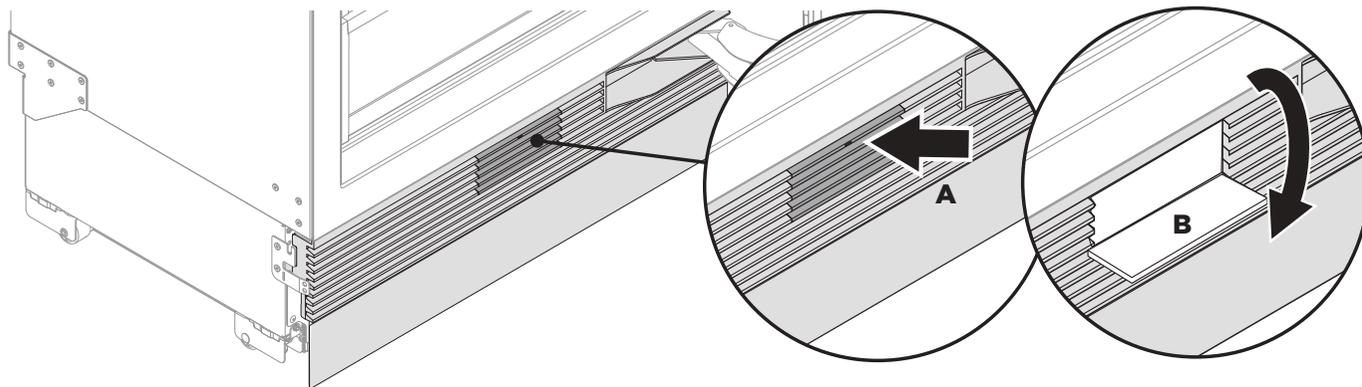


- ① Remove the plastic wrapping from the new filter.
- ② Open the water filter hatch to access the filter (A), press the hatch in then pull the hatch down (B).

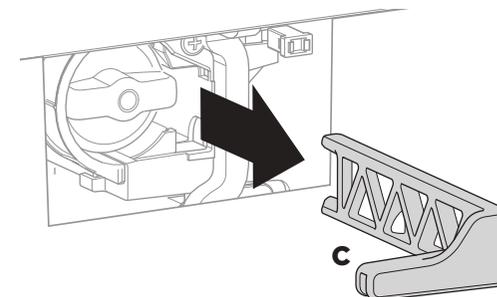


- ③ Pull the filter tool gently to dislodge from the front of the appliance (C).

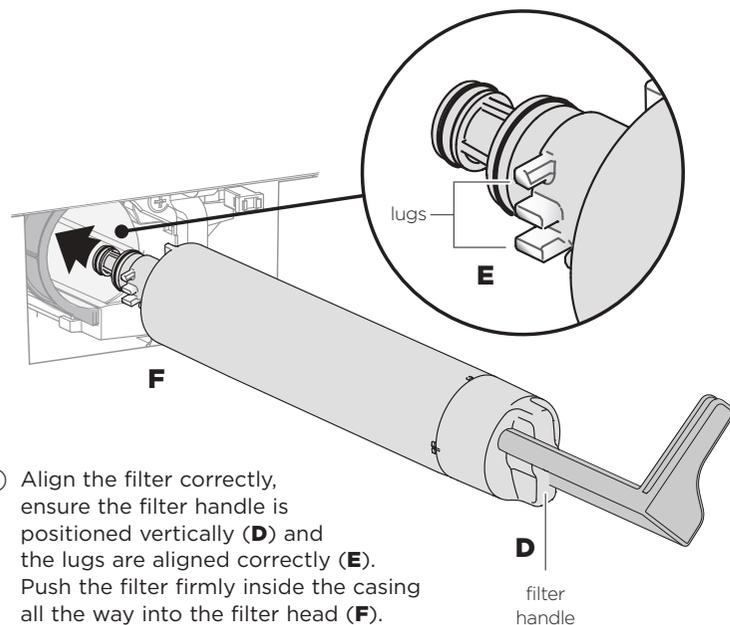

- ④ Align the filter correctly, ensure the filter handle is positioned vertically (D) and the lugs are aligned correctly (E). Push the filter firmly inside the casing all the way into the filter head (F).

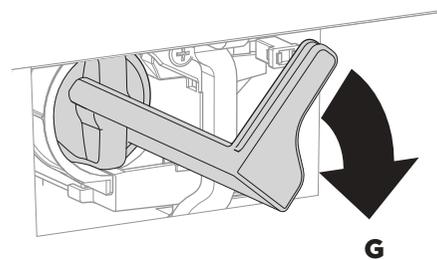

- ⑤ Using the filter tool, rotate the filter head clockwise 90° to lock in place (G).
 - If the filter will not turn, ensure the filter is correctly aligned (D & E), to allow the filter to be pushed firmly into the filter head.
 - Ensure the filter is fully rotated 90° to allow the water to flow.

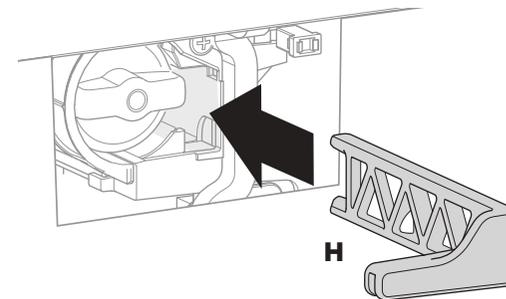

- ⑥ Return the filter tool to its storage position (H).

IMPORTANT!
After installation, the water filter **MUST** be flushed.
Refer to 'Flushing the water filter' for details.


4 FOR ACTIVESMART™ INTEGRATED REFRIGERATORS

Removing the old filter

Note: It is not necessary to turn the water supply off when removing the water filter. It is easier to remove the water filter with the water turned on.

The filter is located behind the toe kick grille.

- 1 Remove toe kick grille by inserting fingers into the left and right square openings on the grille. Pull grille towards you.
- 2 Pull the freezer drawer out slightly, the filter is located on the left-hand side.

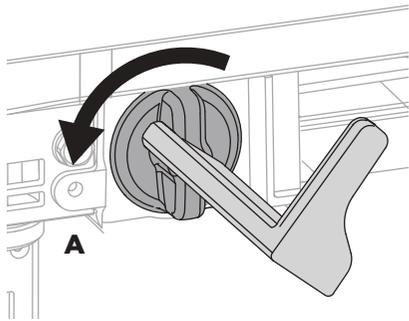


- 3 Using the filter removal tool, align the tool to the cartridge handle and turn 90° counterclockwise to loosen (A).
- 4 Remove the tool, grasp firmly onto the cartridge handle and pull towards you to remove. Discard the old filter.
 - If the filter is difficult to remove, run water through the filter by dispensing water or using the automatic ice maker.
 - A small amount of water will drip after you remove the filter. This is normal.


Installing the new filter

Note: It is not necessary to turn the water supply off when installing the water filter.

- 1 Remove the plastic wrapping from the new filter.
- 2 Remove toe kick grille by inserting fingers into the left and right square openings on the grille. Pull grille towards you.

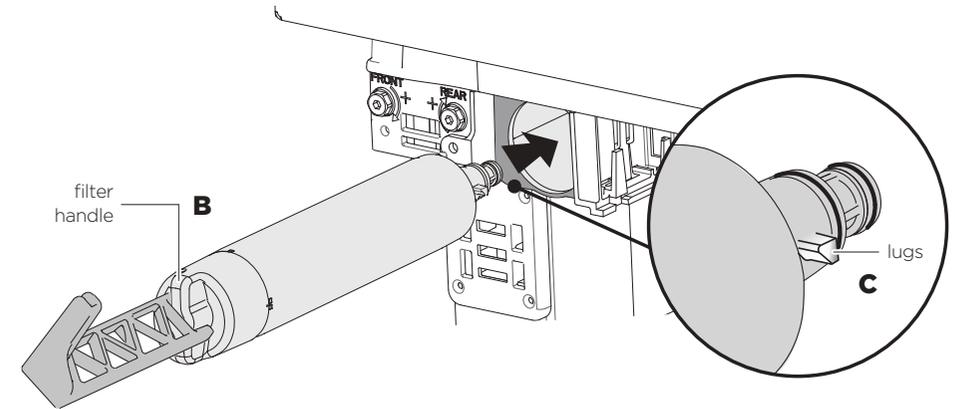

- 3 Pull the freezer drawer out slightly to access the filter casing. Align the filter correctly, ensure the filter handle is positioned vertically (B) and the lugs are aligned correctly (C).
- 4 Push the filter firmly inside the casing all the way into the filter head.

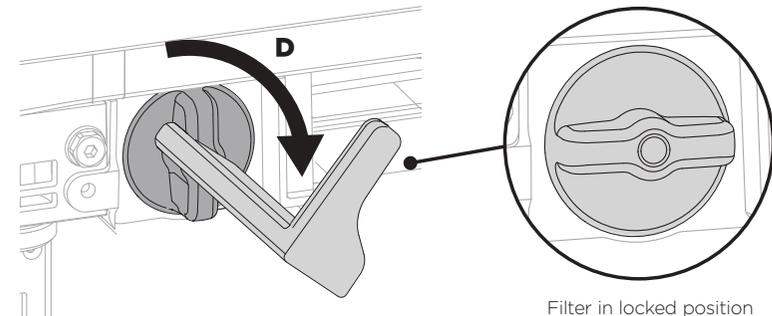

- 5 Using the filter tool, rotate the filter head clockwise 90° to lock in place (D).
 - If the filter will not turn, ensure the filter is correctly aligned (B & C), to allow the filter to be pushed firmly into the filter head.
- 6 Remove filter removal tool and close the freezer drawer.

IMPORTANT!

After installation, the water filter **MUST** be flushed. Refer to 'Flushing the water filter' for details.

⑤ WATER FILTER FLUSHING INSTRUCTIONS (ALL MODELS)

Flushing the water filter

- Check your refrigerator is switched on.
- Allow at least 2 hours for your appliance to cool before use.
- Complete all the flushing steps detailed in this document to ensure optimum performance of your water filter.

For Ice & Water only models:

Flushing must be completed through both the water dispenser and ice maker.

For Automatic Ice only models:

Flushing must be completed through the ice maker.

Flushing through water dispenser

- ① Press the water dispenser pad to dispense 1 gal (4L) of water.
 - A harmless carbon residue may be dispensed with water during the flushing process.
- ② Wait for 4 minutes before dispensing again.
- ③ Dispense 1 gal (4L) of water then wait another four minutes.
- ④ Dispense another 1 gal (4L) of water. Your water dispenser is ready for use.
- ⑤ Water will continue to drip from the dispenser for a few more days after installation to clear remaining trapped air in the dispenser. Check the drip tray regularly and empty when required.

Flushing through ice maker

- ① Turn the ice maker on, refer to the user guide supplied with your appliance for details.
- ② Press the ,  and  together for 4 seconds then close the doors. The ice tray will flip twice and empty the water into the bin below.
 - The ice tray will flip only after the doors are closed.
- ③ Repeat step ② to remove dust in the ice tray collected during manufacture and transport.
- ④ Empty the water from the ice bin and return it correctly.
- ⑤ Once your ice maker is turned on, the first bin of ice may be discolored, this is not harmful and normal during the flushing process. Discard the first full bin of ice made. Your ice maker is ready for use. The performance of your water filter will improve with continued use.

For Ice & Water only models:

The water filter will reach optimum performance after two to three full bins of ice.

For Ice only models:

The water filter will reach optimum performance after four to five full bins of ice.

Resetting the filter indicator

Use the water filter as soon as possible after installation. A replacement indicator  on the control panel and/or external display illuminates when you need to replace the filter. Reset the indicator only after replacing the filter.

To reset indicator

- Press  and  together for 4 seconds.
- The  on the control panel will turn off when reset.
- The filter change indicator icon  on the control panel and/or external display will turn off when reset.

IMPORTANT!

- **We recommend the water filter to be used from the time of installation.**
- **Do not reset indicator before filter is changed or filter monitoring will be inaccurate.**

FISHERPAYKEL.COM

© Fisher & Paykel Refrigerators 2018. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

849725A 10.18