
## POWER OUTLET LOCATION DATUM: FRONT OF CHASSIS PLAN VIEW

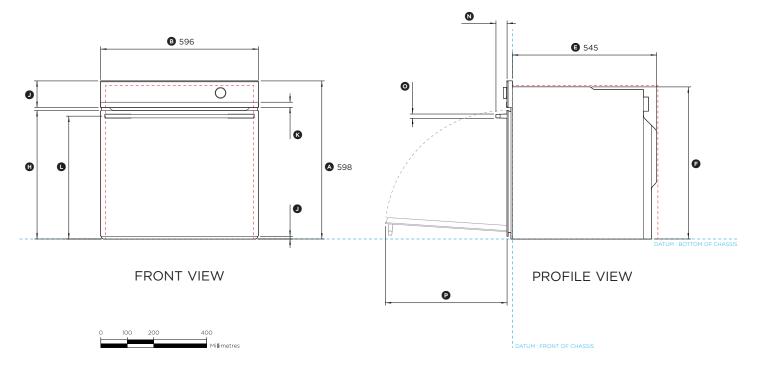

## FISHER & PAYKEL

## DATA SHEET 60cm Oven

Model no:

## OB60SDPTDB1

Product Dimensions	mm
Overall height of oven	598
® Overall width of oven	596
© Depth of front frame (excludes dial, handle and front metal trim)	20
<ul> <li>Depth of oven chassis and front frame (excludes dial, handle and front metal trim)</li> </ul>	565
© Depth of chassis	545
F Height of chassis	575
© Width of chassis	556
Height from bottom datum to top of oven door	485
① Height from bottom datum to bottom of door	10
① Height of control panel	100
Height of metal cap on control panel	20
© Height from bottom datum to centerline of handle	464
<ul><li>→ Width of handle</li></ul>	565
® Depth of handle (measured from front of door)	42
Thickness of handle	16
Depth of door (open) (measured from front of door)	460

Minimum inside height of cavity	580
Minimum inside width of cavity	560
Minimum inside depth of cavity	550

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.

INDICATES PRODUCT DATUM -----INDICATES CABINETRY CLEARANCES ------

DATE: 11.12.2019

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm. Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com