
POWER OUTLET LOCATION DATUM: FRONT OF CHASSIS PLAN VIEW

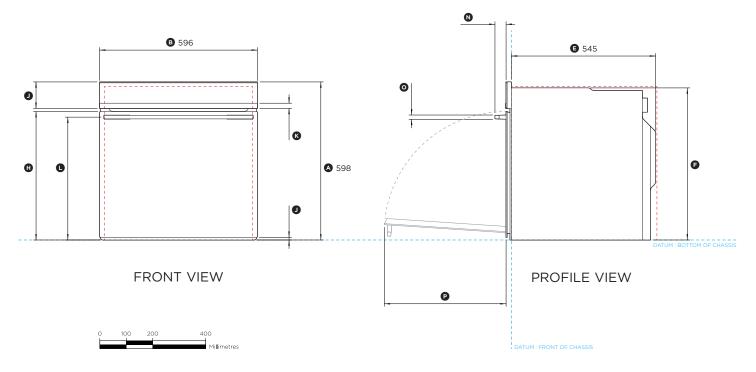

FISHER & PAYKEL

DATA SHEET 60cm Oven

Model no:

OB60SDPTB1

Product Dimensions	mm
Overall height of oven	598
Overall width of oven	596
© Depth of front frame (excludes handle and front metal trim)	20
Depth of oven chassis and front frame (excludes handle and front metal trim)	565
© Depth of chassis	545
Height of chassis	575
Width of chassis	556
Height from bottom datum to top of oven door	485
① Height from bottom datum to bottom of door	10
Height of control panel	100
Height of metal cap on control panel	20
© Height from bottom datum to centerline of handle	464
Width of handle ■ Width of hand	565
Depth of handle (measured from front of door)	42
Thickness of handle	16
Depth of door (open) (measured from front of door)	460

mm
580
560
550

IMPORTANT NOTE: For full installation and clearance details please refer to our installation manual.

INDICATES PRODUCT DATUM -----INDICATES CABINETRY CLEARANCES ------

DATE: 11.12.2019

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm. Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com