FISHER & PAYKEL

Recessed Handle Accessory Door Panels

········ SAFETY & WARNINGS ······

A WARNING!

S

Electric Shock Hazard

Failure to follow this advice may result in electrical shock or death.

• Read and follow the safety and warnings before operating this appliance.

A WARNING!



Cut Hazard

Failure to use caution could result in injury.

- Take care: some edges may be sharp.
- Ensure all packaging is removed and disposed of responsibly.
- Ensure the Knock-To-Pause module is oriented correctly before attaching.
- Repeat each step on both drawers.

······ COMPONENTS REQUIRED ······



Pliers

DOOR PANEL INSTALLATION

 
(6)

(7)

(8)

9

(10)



Remove all tape and packaging.

Upper panel only:

Ensure exit duct tape is removed.



Open the drawer and press both locking tabs back 50mm to allow the accessory door to be fitted.



Remove both side pins with pliers and carefully pull the panel bracket down and out slightly.



Reconnect the Knock-to-Pause module to the UI 1 slot on the wash controller as



Unplug knock-to-pause module from the controller and remove the earth wire from the bracket.



 
Reconnect the earth wire to the panel bracket.

Warning: Failure to reconnect the Earth wire may result in electrical shock or death.



Remove the Knock-to-Pause module from the back of the bracket and refit to the door panel.

Ensure the module is correctly oriented and is not in contact with the brackets before securing.



Align the panel flat against the front of the tub before sliding it up into place. Ensure the pin holes on the tub and the

Ensure the pin holes on the tub and the door brackets align and that the upper door seal is located correctly.



Unclip the highlighted tabs to remove the exit duct from the top drawer of the product.



Re-insert both side pins to secure panel in place.

Pull both locking tabs forward.