

FISHER & PAYKEL

FRONT LOADER WASHING MACHINE

WH1260YZB5

USER GUIDE

NZ AU

CONTENTS

Safety and warnings	4
Get to know your washer	7
Control panel	8
Menu	9
First use	10
Detergent cartridges	11
Set detergent types	12
Sort your items	13
Understanding fibre types	14
Load the washer	15
Set a cycle	16
More options	20
Set Delayed start	22
Save favourite cycles	23
Adjust settings	25
Wi-Fi connection and remote mode	27
Cycle selections	30
Wash temperatures and spin treatments	35
Stain care treatments	36
Proofing treatment	37
Choose a detergent	38
Clean and maintain your appliance	39
Clean the dispenser	40
Run the Drum Clean cycle	41
Unlock the door	42
Clean the pump filter	43
Troubleshooting	45
Faults	49
Compliance information	50
Manufacturer's Warranty and Service Guide	51

Registration

To register your product visit our website: fisherpaykel.com/register

SAFETY AND WARNINGS

⚠ WARNING!



Electric Shock Hazard

Failure to follow this advice may result in electric shock or death.

- If you are using an extension cord or a portable electrical outlet device (e.g. multi-socket outlet box), ensure that it is positioned so that it does not come into contact with water or moisture.

⚠ WARNING!



Keep detergents out of reach of children

- Detergents can be hazardous. Keep cartridges out of reach of children.
- Store detergents and softeners as per manufacturers' recommendations.

READ AND SAVE THIS GUIDE

WARNING!

Read Safety Guide. Failure to follow all guides and rules could cause personal injury or property damage. Use this appliance only for the intended purpose as described in the user guide and installation guide of this appliance. When using this appliance, always exercise basic safety precautions including the following:

General

- This product has been designed for personal, family or household use. This product is not designed for any commercial use.
- Do not touch or operate the appliance with wet hands or with bare feet.
- A damaged power cord must be replaced by a Fisher & Paykel trained and supported service technician or similarly qualified person in order to avoid a hazard. Do not use the machine until it has been repaired to avoid a risk of electric shock.
- Do not operate this appliance if it has been damaged during transport. Contact your Fisher & Paykel dealer or Fisher & Paykel trained and supported service technician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instructions on how to use the appliance by someone responsible for their safety.
- Never place dripping wet clothes on top of the washer as this could create an electrical hazard.
- Keep children away from the washing machine while it is in operation.
- Supervise children to ensure they do not play with the appliance or climb inside the drum.

SAFETY AND WARNINGS

- Do not swing on or put weight on the door.
- Check and remove all objects from pockets, e.g. lighters and matches.
- The washing machine should only be used for washing and rinsing of textiles where this is indicated on the care label.
- Do not add petrol, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapours that could ignite or explode.
- The door will be locked from the start of the cycle until the cycle is complete for safety reasons. It is possible to open the door during the cycle under certain conditions. Never force the door open.
- Do not touch the door during a cycle as the door can become hot.
- When Sanitise and Allergy cycles are selected, the door glass will become hot. Do not touch the glass part of the door. Keep children away from the washing machine.
- Do not open the detergent dispenser during the cycle as hot water may come out of it.
- Read and follow the detergent manufacturer's instructions carefully. Instructions on how to use the detergent will be clearly indicated on the pack. Remember to store your detergents and cartridges out of the reach of children.
- Do not wash an electric blanket in your washing machine unless the care label specifically states it is safe to do so.
- Do not wash curtains in this washing machine, as sunlight makes them brittle and they may disintegrate during washing.
- Do not put dripping wet clothes on top of the washer as this could create an electrical hazard.
- The only user-removable parts of the washing machine are the inlet hose(s), dispenser drawer, pump filters and cartridges. No other parts are designed to be removed by anyone other than a Fisher & Paykel trained and supported service technician.
- Do not overload your washing machine beyond its rated capacity.

MODEL CODE	MAXIMUM CAPACITY* (KG)
------------	------------------------

WH1260YZB5

12kg

*Capacity refers to the maximum dry weight of items the washing machine can wash at any one time

Installation

- Install the appliance on a solid and level floor surface. Ensure it has at least 12mm clearance on each side and at the top, and at least 30mm clearance at the rear.
- The appliance must not be installed on any textured floor coverings (e.g. carpet, rugs).
- This appliance can be installed on a compatible Fisher & Paykel plinth. To ensure stability, the plinth must be fitted correctly with the appliance. For installation instructions and compatible plinth models, refer to fisherpaykel.com.
- Do not install or operate this appliance on any other plinth or structure.
- Ensure the installation provides accessibility to the plug or incorporate a switch in the fixed wiring in accordance with the wiring rules to allow disconnection of the appliance from the supply after installation.
- Do not attempt to lift washer on your own as this could cause harm or injury. Always lift appliance with at least two people.
- Do not operate this machine if it has been damaged during transport. Contact your Fisher & Paykel dealer or Fisher & Paykel trained and supported service technician.
- Ensure any transit bolts have been removed before operating appliance.

SAFETY AND WARNINGS

Water supply requirements:

- Inlet water pressure: Max. 1MPa (145psi), Min. 50kPa (7.3psi)
- Inlet water flow rate: Min. 6 litres/minute
- A pressure-reducing valve must be installed if pressure is higher than 1MPa.
- For optimum wash performance check the supply pressure is within the recommended range.
- New hose sets provided should be used to connect the appliance to the water mains. Old hose sets should not be re-used.
- We recommend the inlet hose(s) are changed every 5 years. **WARNING:** Failure to do so may result in a flood and damage to property.
- The hot water temperature should not exceed 65°C and the cold water temperature should not exceed 35°C. Temperatures above these may cause the appliance to fault or cause damage to it.

Disposal

- When disposing of this appliance, the door should be removed to avoid children getting trapped inside, and that the electrical cable is cut off close to the cabinet.

GET TO KNOW YOUR WASHER



Download the app for a smarter experience


- Access extra features and information
- Get the latest software updates
- Track and run cycles from your phone
- Customise your favourite cycles
- Register your products for streamlined support






FEATURES AND ACCESSORIES


- | | |
|--|----------------------------|
| 1 Touchscreen display | 5 Pump drain hose |
| 2 Power button | 6 Pump filter |
| 3 Detergent/Softener dispenser drawer | 7 Drum light (inside drum) |
| 4 Manual door-release tab (for use during power failure) | Dispenser cartridges (6) |

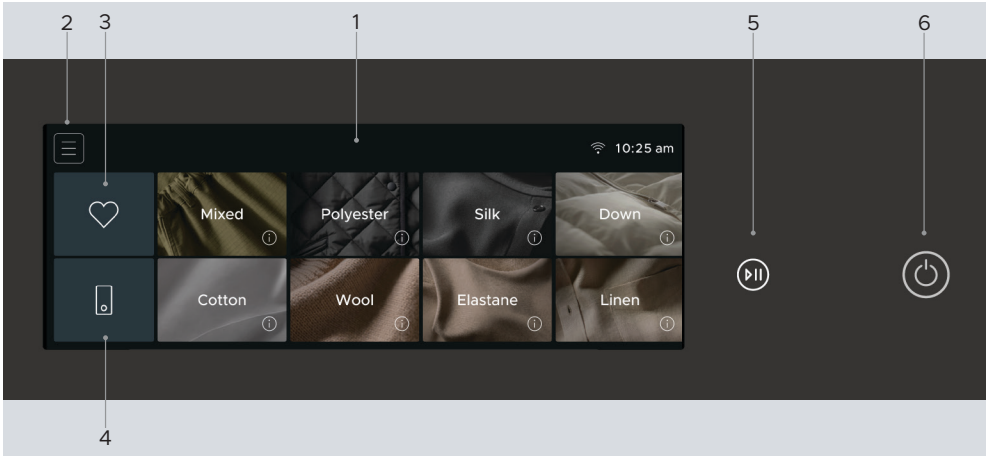CONTROL PANEL

 

1	Touchscreen display	Use to navigate and select cycles, features and settings.
2	Menu	Press MENU  to access additional features and settings.
3	Favourites	Press FAVOURITES  to access saved favourite and preset cycles (MIXED 15 and MIXED 30). You can save before, during or at the end of a cycle.
4	Remote	Press REMOTE  to connect appliance to your mobile device and operate it via the app.
5	Start/Pause	Press to start or pause a cycle or enable Remote mode.
6	Power	Press and hold to turn the appliance ON/OFF.

MENU

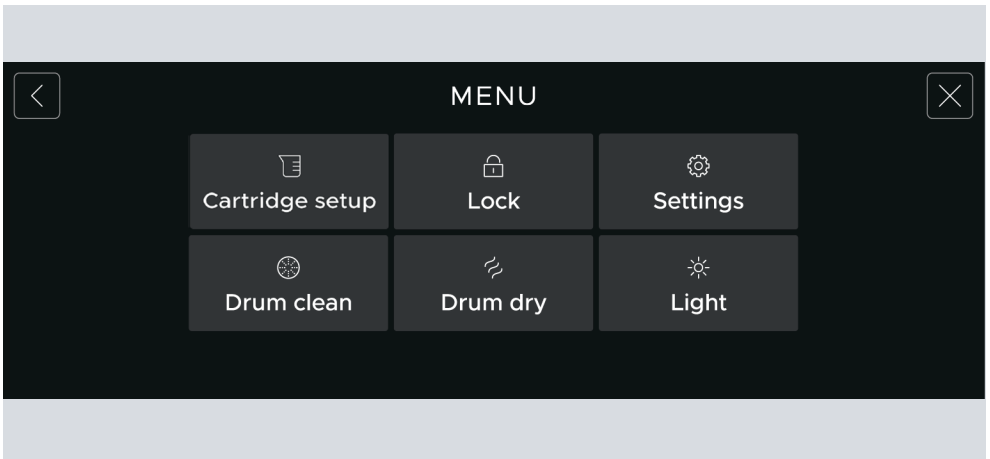

CARTRIDGE SETUP

Set or adjust detergent and softener cartridges and dosage. See 'Set detergent types'.



LOCK

Lock the controls at any time to prevent accidental use.



LIGHT

Set the drum light to turn on automatically when you touch the display or set it to stay off.



DRUM CLEAN

Run DRUM CLEAN to clean the washer.



DRUM DRY

Run DRUM DRY or set it to run after a wash cycle by default.



SETTINGS

Set and adjust clock, display, volume and other settings to suit your preferences. See 'Adjust settings'.



BACK

Go back one level.



EXIT

Return to the home screen.


FIRST USE


Before you wash your first load, we recommend running a QUICK 15 cycle to prime the detergent dispenser. During the cycle, check that the hoses are connected properly and the washer is sitting level.




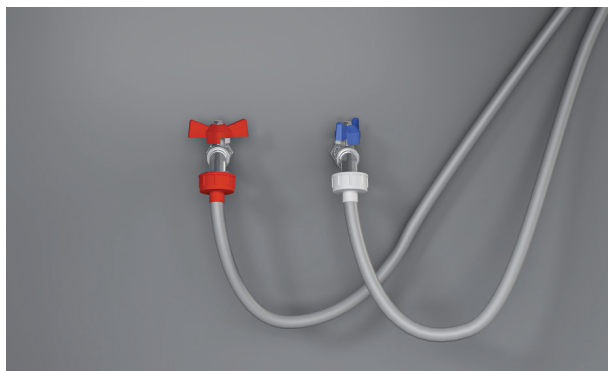
1. Push the dispenser drawer to open it. Fill cartridge 1 with everyday detergent, then close the drawer.

You can also fill and insert the softener cartridge if you intend to use softener.

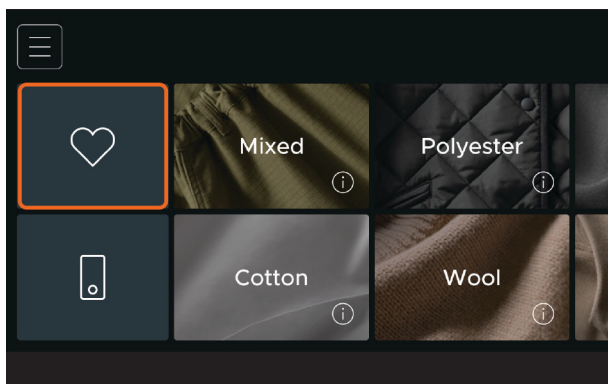

2. Press FAVOURITE  and select QUICK 15.

FAVOURITE  is preset with QUICK 15 and QUICK 30 cycles. See 'Save Favourite cycle' for information about adding new favourite cycles.



What to look for

- If the washer is leaking, check the hose connections.
- If the washer is moving around, adjust the feet to level it.

See the 'Installation guide' for instructions.

DETERGENT CARTRIDGES



Your washer's modular dispenser cartridges make it quick and easy to switch between everyday and specialist detergents for optimal wash performance across every cycle and item.

The washer comes with six cartridges:

- One large and three small auto dose cartridges you can set to dispense everyday or specialist detergents.
- One auto dose liquid softener cartridge.
- One manual dose cartridge for liquid or powder detergent.

Extra cartridges are available to order via the app and fisherpaykel.com.

Liquid detergent options for unassigned cartridges

Everyday	Sensitive	Down	Darks
Delicates	Wool	Silk	Whites

The washer will detect cartridges in the dispenser and prompt you to set up any that are not set. When setting up your cycle, the washer will also prompt you to insert a cartridge with the recommended detergent for that cycle if one is not already inserted.

You can set or change detergent types and dose levels in **Cartridge Setup** or temporarily adjust dose level for a specific wash cycle.

See 'Set detergent types' for how to set detergent types to cartridges and adjust dosages.

Filling the cartridge

Fill auto dose cartridges to the underside of the lid. Each fill lasts for multiple cycles, and a reminder will display when the cartridges need to be refilled. When not in the dispenser drawer, store full cartridges level and out of reach of children.

See 'Choose a detergent' for information about different detergent types.

Manual dispensing

MANUAL dispenses all the detergent in the Manual cartridge. Only add as much detergent to the Manual cartridge as you need for that load.


If using a detergent pod, set the dispenser to MANUAL. Add the pod directly to the washer drum and put your items on top of the pod.

 
See 'Set a cycle' for how to select manual dispensing.


SET DETERGENT TYPES

Use **Cartridge setup** to assign detergent types to cartridges so you can easily switch between everyday and specialised detergents. The washer will detect which cartridges are in the dispenser drawer. Update cartridge settings if you want to reassign the detergent type.

The **DEFAULT** dose setting automatically dispenses the appropriate dose of detergent and softener during each cycle, but you can adjust dosage levels to suit your needs.

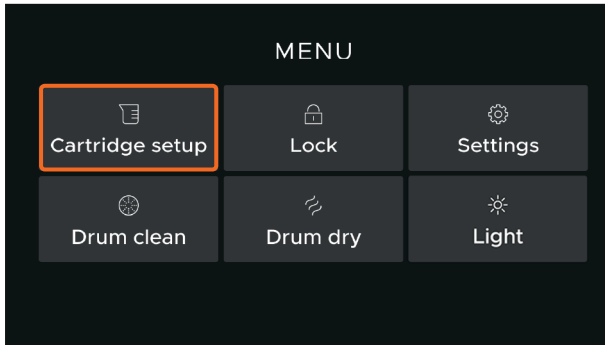


1. Go to MENU  and select **CARTRIDGE SETUP**, then follow the onscreen prompts.

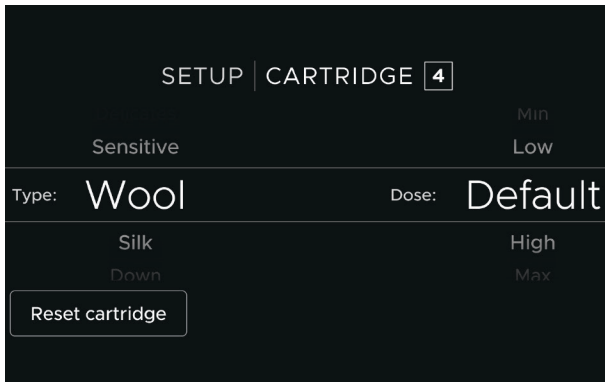

2. Scroll to select a detergent type and dose, then press **CONFIRM**.

Press **UPDATE** to change the detergent type and dose for a cartridge.

Press **RESET CARTRIDGE** to clear all settings.

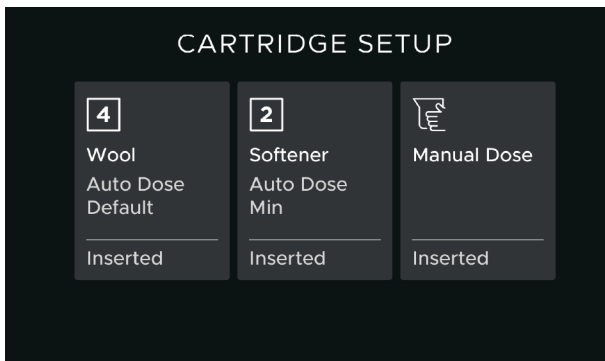

3. The list of inserted cartridges will show on the screen.

Press **ALL CARTRIDGES** to see the list of cartridges you have set up.

SORT YOUR ITEMS

Sorting your items well is essential for taking care of your clothes and getting the best results from your appliance. Follow these steps every time you use the washer.



1. Check each care label to see the fibre composition and how each garment should be washed. See 'Understanding fibre types.'



2. Sort items into loads of similar fibre, item type and item colour.



3. Check pockets, close fasteners and zippers, and untangle items before loading.

Use a small washbag for delicate items, and be careful not to overfill it.

UNDERSTANDING FIBRE TYPES

Every cycle starts with fibre type

Each fibre type responds differently to washing and drying. This appliance uses a fibre-led system and precision sensing to wash your items, so selecting the right fibre type for each load is key to setting the best cycle each time.

Treat for the most delicate fibre


Items may be a blend of multiple fibres — some more delicate than others. The care label on an item will tell you what fibre or fibres the item is made of and how to care for it.

Select the fibre type on your washer that applies to the most sensitive or delicate fibre in the blend, even if it is only a small percentage.

Identify delicate fibres

This table helps identify the most delicate or sensitive fibres commonly found on care labels. It also offers alternative cycle suggestions for specialist fibres. Recommendations may not suit all items — always check your care label first.

For best results, use a detergent designed for the most delicate fibre. See ‘Choose a detergent’ for more information.

SENSITIVITY	COMMON FIBRES	FIBRE TYPE
	Cashmere, Angora, Mohair	Cashmere
	Down	Down
	Silk	Silk
	Wool, Merino, Lambswool	Wool
	Elastane, Spandex, Lycra	Elastane
	Viscose, Bamboo, Rayon, Modal	Viscose
	Lyocell, Tencel™	Lyocell
	Acrylic	Acrylic
	Linen	Linen
	Hemp	Hemp
	Ramie	Ramie
	Nylon, Polyamide	Nylon
	Polyester	Polyester, Mixed
Low	Cotton	Cotton, Mixed

LOAD THE WASHER

Maximum load size

The maximum load size changes based on the type of items in a load. Follow the guide below to avoid overfilling the washer and maintain good wash performance.




Mixed, Cotton, Polyester	Ultra delicate	Extra small
	Delicate, Denim or Sports	Small
	Moderate, Durable, Sheets, Towels or Bulky	Large
Wool	Ultra delicate or Delicate	Small
Elastane	Ultra delicate	Extra small
	Delicate	Small
	Moderate	Medium
Down, Viscose, Acrylic, Hemp, Lyocell, Ramie	Ultra delicate	Extra small
	Delicate	Small
Silk	Ultra delicate	Extra small
Linen	Ultra delicate	Extra small
	Delicate	Small
	Moderate, Sheets or Towels	Large
Nylon	Ultra delicate	Extra small
	Delicate or Outdoor	Small
Cashmere	Ultra delicate	Extra small
Other Treatments	Favourite - Quick 15	Small
	Favourite - Quick 30	Medium
	Refresh	1 or 2 Items
	UV Sanitise, Hot Sanitise	As per fibre/item type
	Proofing	1 or 2 items
	Stain care	Small

SET A CYCLE

Your washer has specialised cycles for specific fibre types. Start by selecting a fibre type, then select an item type based on durability or specific items, such as sheets or towels, and the required treatment. You can adjust settings for soil level, colour and dispensing. The available cycle options may vary depending on the fibre type you select.


Automatic cycle settings

Cycle settings like temperature and spin speed no longer need to be set manually. These settings will all adjust automatically based on your cycle selections. Press **INFORMATION** ⓘ or see 'Cycle selections' for details about which fibre to choose.

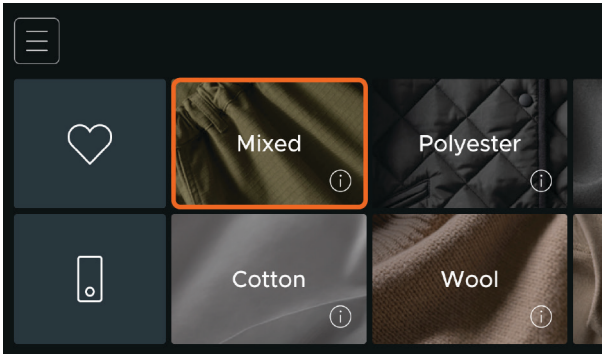

1. Press and hold **POWER** ⏻ to turn the washer on, then select a fibre type.


Press **INFORMATION** ⓘ for a description of each fibre.

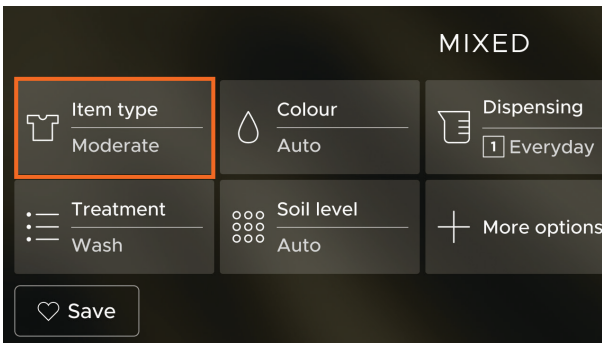


2. Press **ITEM TYPE** to access the options and see a description and examples for each type.

Scroll to select an item type.


SET A CYCLE

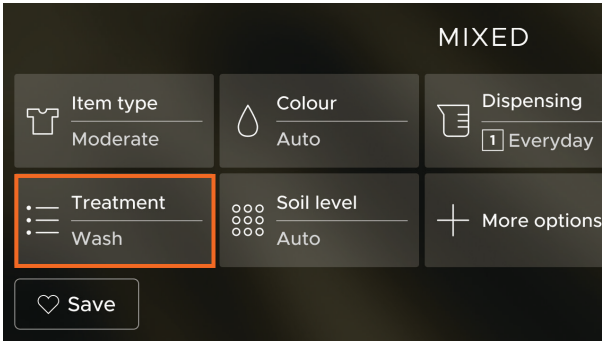

3. Press **TREATMENT** to access the options and descriptions. Scroll to select a treatment.

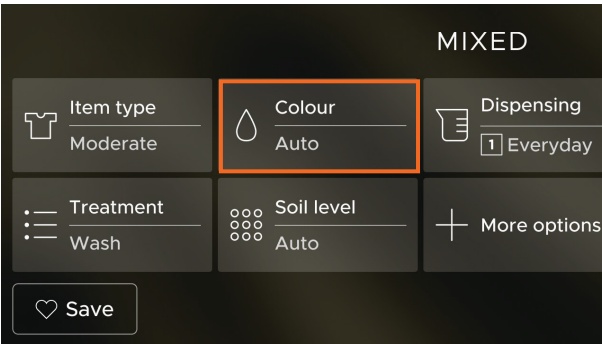


4. Press **COLOUR** to access the options. Press to select a colour option, or use **AUTO**. **AUTO** senses the colours in the load and adjusts the wash temperature to suit.

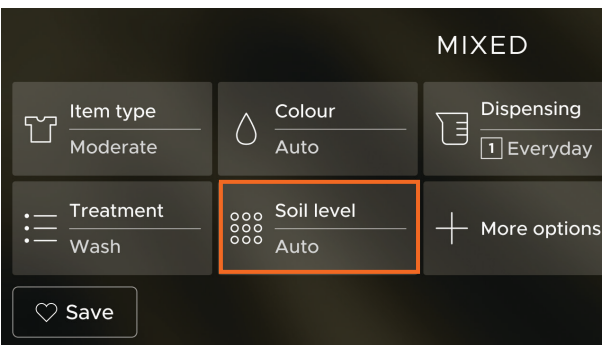


5. Press **SOIL LEVEL** to select a soil level option, or use **AUTO**. **AUTO** senses the soil level and adjusts the wash time and detergent dose to suit.

SET A CYCLE

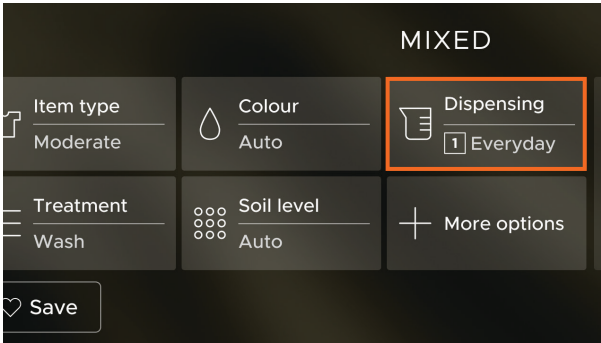

6. Select a dispensing option for detergents and softener as needed.


See 'Detergent cartridges' and 'Set detergent types' for details.

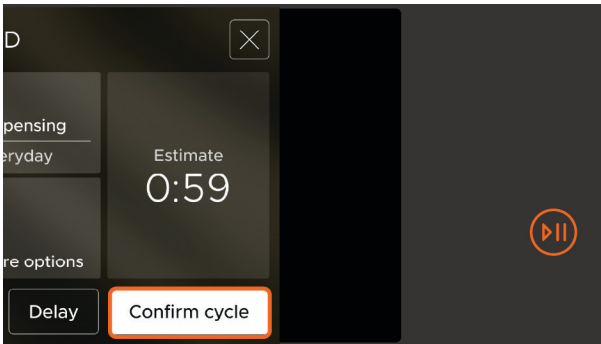

7. Press CONFIRM CYCLE then press the START/PAUSE button to begin the cycle. The cycle progress will show on the display.

See 'More options' for details about more wash options.


See 'Set Delayed start' for how to schedule your wash to start at a later time.

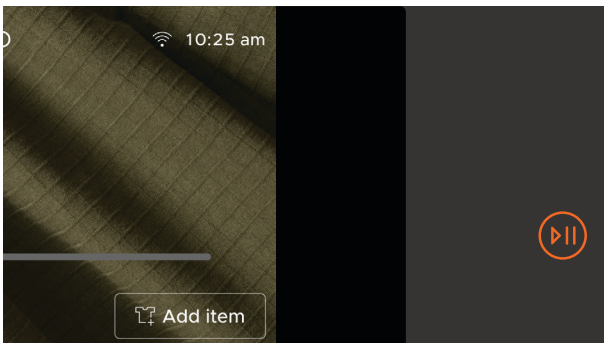

Pausing the cycle

Press the START/PAUSE button to pause the cycle.

SET A CYCLE

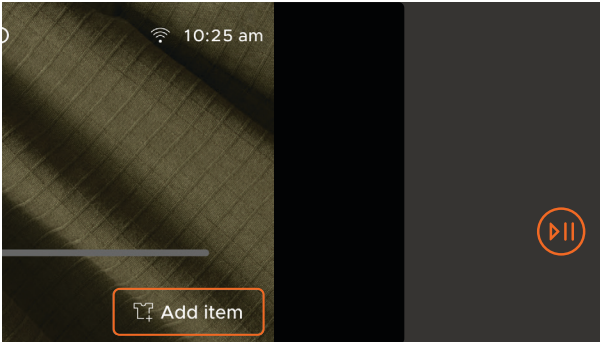

Add Item

Press **ADD ITEM** to pause the wash and add an item. For best results, add within 10 minutes of starting the cycle. The washer may drain slightly so door can open safely.

Not available on all cycles.

Press **RESUME**, then press the **START/PAUSE** button to resume the cycle.



Cancelling the cycle

Press **CANCEL** and follow the prompts to cancel the cycle.

The door will remain locked until the water level has drained below the door.

MORE OPTIONS

Optimise	Optimise the cycle as required to save energy, reduce wash time or reduce noise. Select from Balanced, Energy, Time and Sound. Some optimise options are not available on certain cycles to ensure optimal wash results.
Pre wash	Add a pre wash to remove excess soil and ensure optimal wash results. To prevent fading, we recommend using a cold pre wash for dark and coloured items. Not available with Manual dispensing.
Cold wash	Use cold wash to minimise energy usage. If you live in a colder climate, you can change the temperature to a controlled 20°C so wash performance is not affected. See 'Adjust settings.'
Soak	Add extra time for items to soak halfway through the wash cycle. Ideal for helping to lift stubborn stains.
Extra rinse	Add an extra rinse to the cycle. Ideal for people with sensitive skin, or for heavily soiled items.
Sanitise	Select your preferred method when treatment is set to Sanitise. <ul style="list-style-type: none">• UV uses ultraviolet light to eliminate bacteria without high temperatures. UV sanitise is not recommended for light sensitive fibre types such as silk, wool and cashmere.• HOT WATER is an extra hot treatment ideal for items that can handle high temperatures, like tea towels, dishcloths, towels and sheets.
Crease free	After the cycle is complete, the load will continue to tumble periodically to help reduce creases. Crease free will remain active for up to 12 hours or until cancelled. To cancel, touch the screen or open the door.
Drum dry	Runs the fan and periodically rotates the drum to reduce dampness once laundry is removed after a cycle. To activate, remove laundry, close the door and press START.




1. Press MORE OPTIONS to access extra wash options.


MORE OPTIONS



2. Select a wash option and follow the onscreen instructions to set it. Press DONE to confirm.

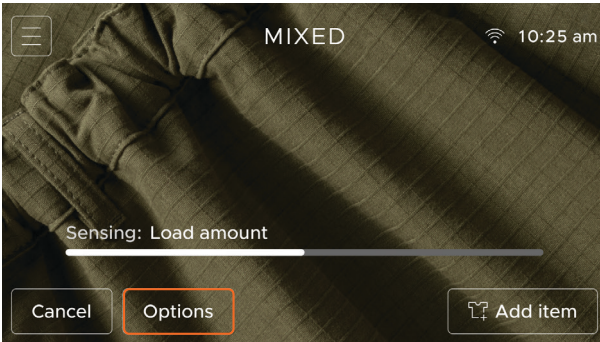


3. Press OPTIONS from the cycle screen to review your settings.

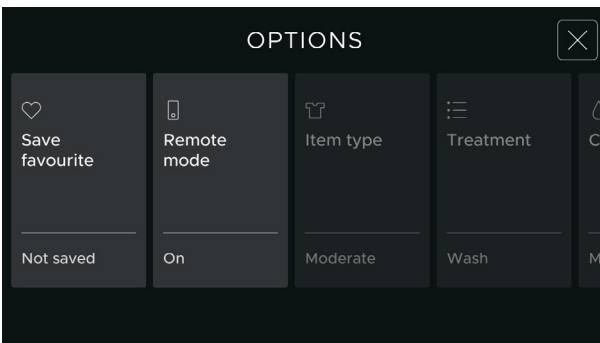


4. From the OPTIONS menu, you can also save your settings as a favourite and access remote mode.

SET DELAYED START


DELAY allows you to schedule a cycle to begin at a later time. You can set a time on the washer or start a cycle remotely through the app.

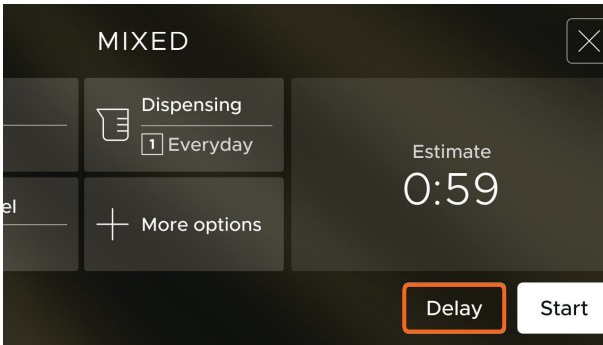

1. After setting the cycle, press DELAY to open the Delay screen.

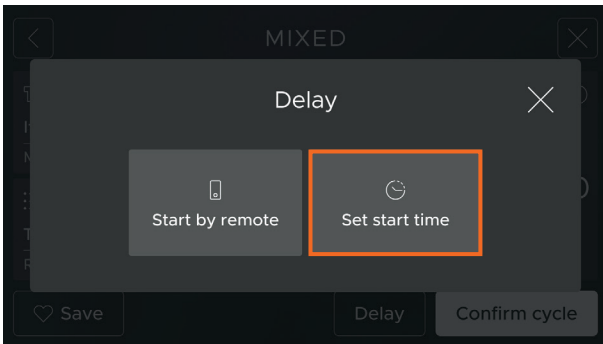

2. Press SET START TIME and follow the onscreen instructions to set a delayed start time.

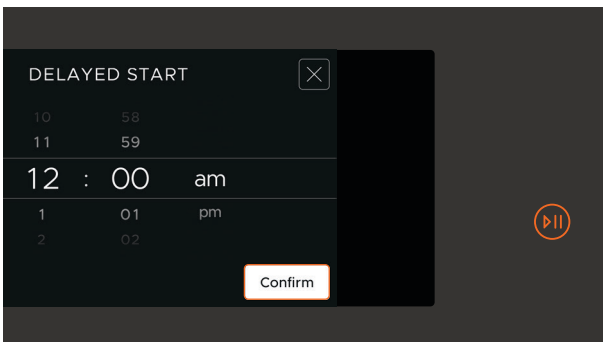


3. Press CONFIRM to save the new start time, then press the START/PAUSE button.

SAVE FAVOURITE CYCLES


Save your favourite cycles for a quick start to your wash. Favourites comes with preset QUICK 15 and QUICK 30 cycles, and you can save up to 14 more on the appliance and manage them in the app.




1. Press **SAVE**  from the cycle settings screen, from the Options menu or at the end of a cycle to add the cycle to Favourite.



2. Create a custom name for your cycle, or skip that step and save it with a default name.

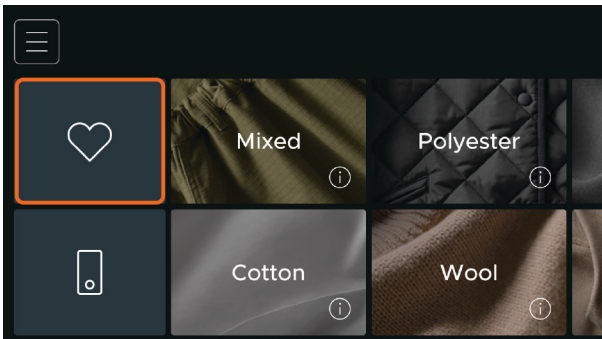


3. Press **FAVOURITE**  on the home screen to access your saved favourite cycles.

SAVE FAVOURITE CYCLES





4. Select a favourite cycle from the Favourites menu.

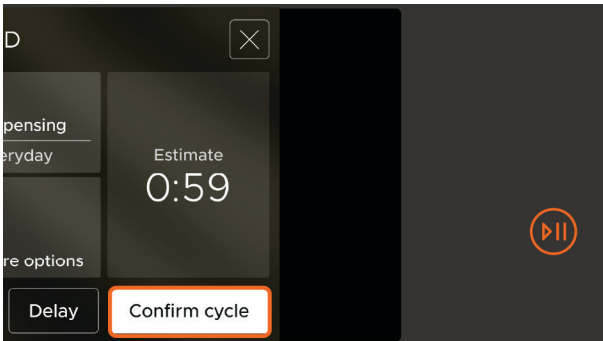


5. Press CONFIRM CYCLE, then press the START/PAUSE ▶|| button to start the wash cycle.


ADJUST SETTINGS

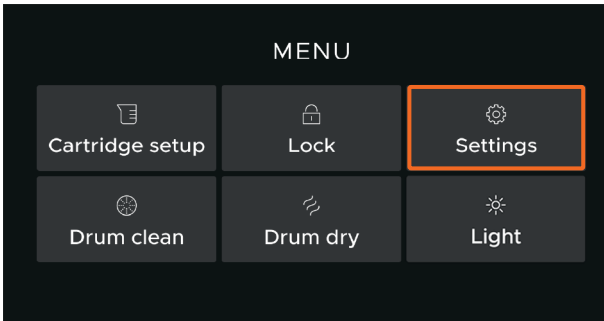


Go to MENU  and select SETTINGS.

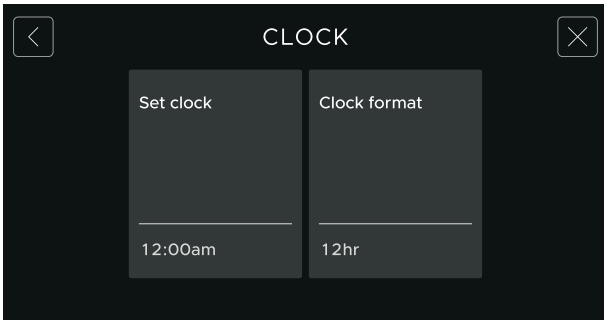

Clock
Set time, format and time zone.
Time updates automatically when connected to Wi-Fi.

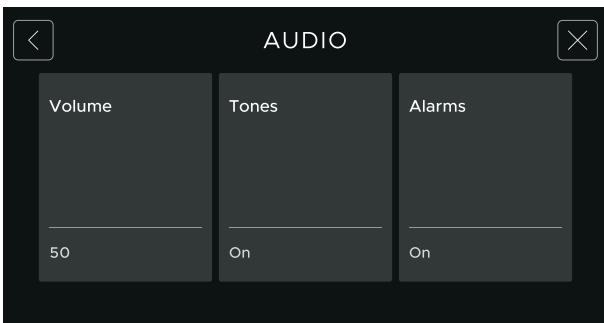


Audio
Set volume or turn sounds on or off.

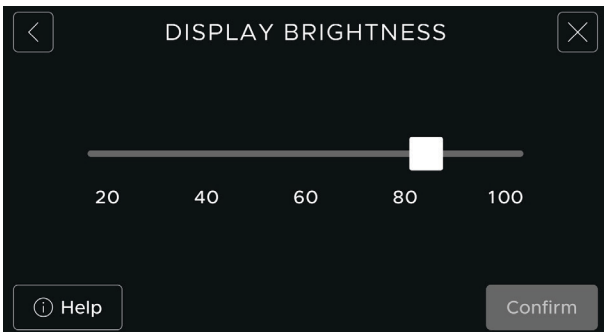


Display
Adjust the brightness of the display screen. Set a lower brightness to improve energy efficiency.

ADJUST SETTINGS

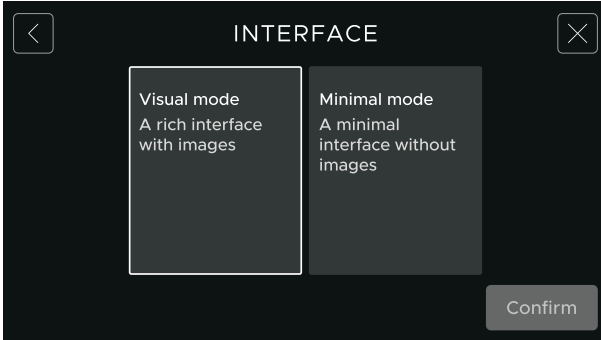

Interface

Set visual or minimal modes on the display.

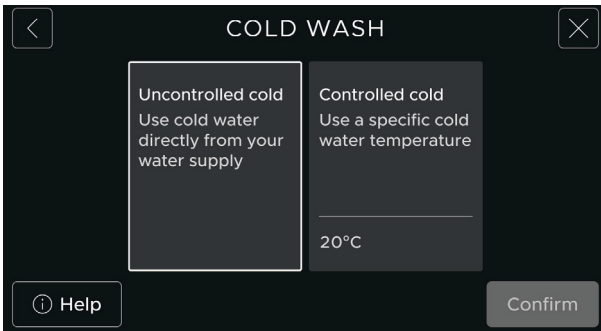

Cold wash

Set the temperature for Cold wash. Use Controlled 20°C for colder climates if you notice changes in performance.



Factory default reset

Restore all settings to factory defaults.
This action cannot be undone.


WI-FI CONNECTION AND REMOTE MODE

Connect your appliance to your home wireless network to access extra features, receive updates and operate the appliance remotely using the app.




Connect to Wi-Fi

1. Go to the menu and select **SETTINGS**, **WI-FI**, then **WI-FI SETUP**.

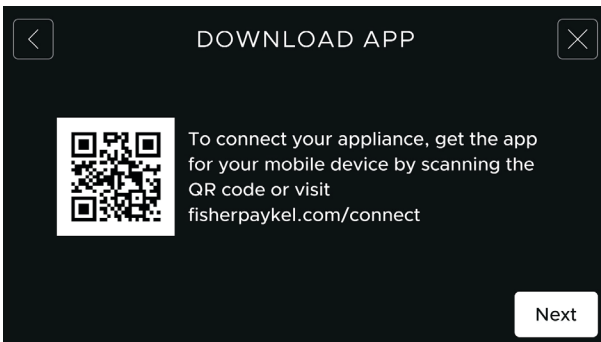


2. Download the app, and follow the app instructions.

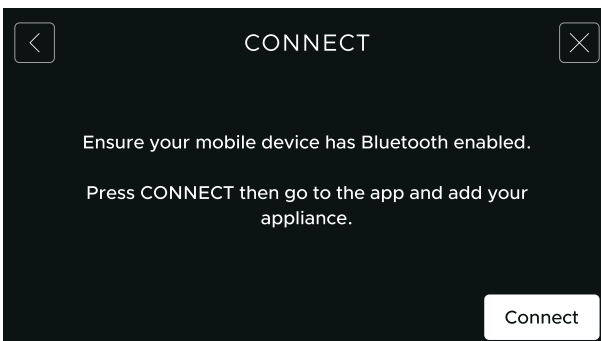

3. Enable Bluetooth on your mobile device, then press **CONNECT**.

Go to the app to complete the connection.

WI-FI CONNECTION AND REMOTE MODE

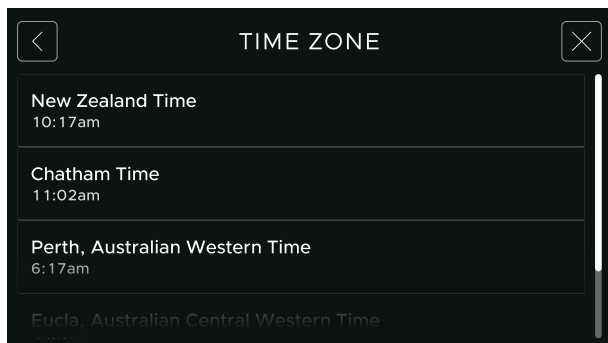


4. On your appliance, select the relevant time zone.





Disconnect Wi-Fi

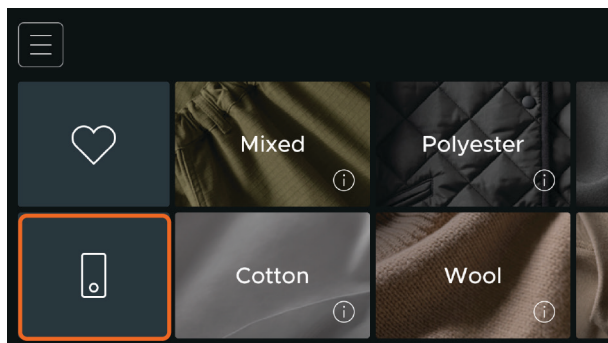
Go to **SETTINGS** and select **WI-FI**, then **RESET** to disconnect.



Enable Remote mode from the home screen


Press **REMOTE** , then **ENABLE**. Press the **START/PAUSE**  button to enable Remote mode and manage cycles in the app.

WI-FI CONNECTION AND REMOTE MODE

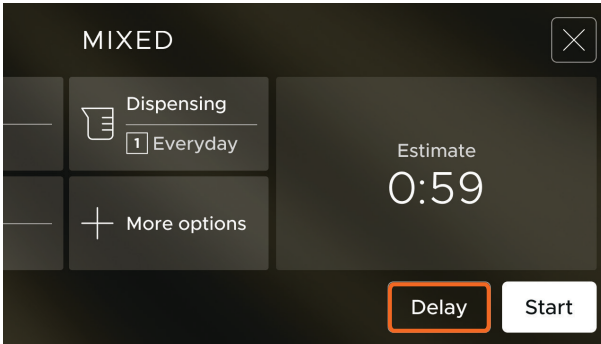


Enable Remote mode during cycle setup

1. Press DELAY in the cycle setting screen.

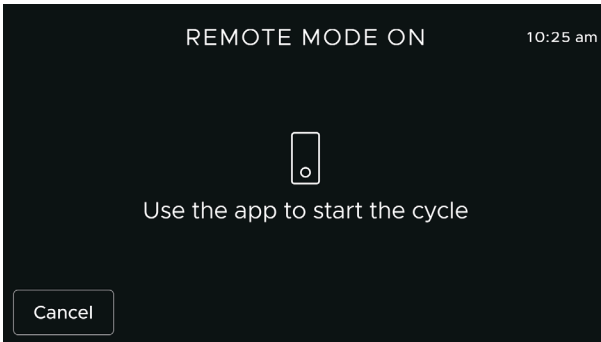

2. Press START BY REMOTE, then press the START/PAUSE button to enable Remote mode and manage cycles in the app.

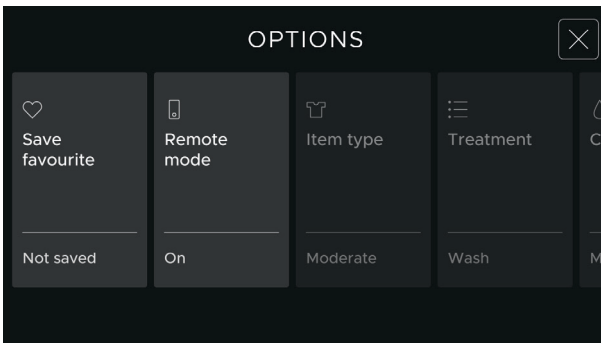

Turn Remote mode off

While a cycle is running, press OPTIONS, then REMOTE MODE to turn off, or open the washer door.

CYCLE SELECTIONS

FIBRE TYPE

Select the specific fibre type that matches the load or choose the fibre type that applies to the most delicate fibre. The wash cycle will adjust to suit.

Mixed

For everyday mixed loads with a variety of fibres, and for cotton-polyester blends.

Cotton

For 100% cotton items, cotton blends and compatible fibre types.

Polyester

For 100% polyester items and compatible fibre types. Polyester is a synthetic fibre that is durable, wrinkle resistant and quick drying. It is widely used in everyday clothing for easy care and long-lasting wear.

Elastane

For items containing 10-50% elastane fibre, also known as spandex. A stretchy and resilient fibre, elastane provides ease of movement in close-fitting items and is often found in activewear and leggings.

Down

For items containing down fill. Down is soft and insulating and is harvested from the undercoat of ducks or geese. Down is commonly used in jackets and bedding for its warmth and lightness.

Silk

For 100% silk items and silk blends. Silk is a natural fibre produced by silkworms. It is soft, smooth and luxurious, and requires specialised care. Silk is often found in dresses, skirts and blouses for its luxury feel or in undergarments, sleepwear and bedding for its breathability and comfort.

Linen

For items containing linen fibre. Linen is a natural fibre made from the flax plant and is strong, breathable and moisture wicking. Linen is often found in summer clothing and in bedding.

Nylon

For items that contain majority nylon fibre. Nylon is a synthetic fibre that is strong and quick drying. Nylon is commonly found in activewear and outerwear due to its strength and durability.

Viscose

For items containing viscose fibre, also known as rayon. Viscose is a soft and breathable fibre made from wood pulp, and is often found in dresses and blouses due to its draping properties and silky feel.

CYCLE SELECTIONS

Acrylic

For items made from acrylic fibre. Acrylic is a synthetic fibre that is lightweight and warm, and often used in knitwear.

Hemp

For items containing hemp fibre. Hemp is a natural fibre made from the hemp plant and is strong, breathable and absorbent. Hemp is often found in casual and sustainable clothing lines.

Lyocell

For items containing Lyocell fibre. Lyocell is a soft, breathable and absorbent eco-friendly fibre made from wood pulp.

Ramie

For items containing ramie fibre. A strong and absorbent natural fibre made from the nettle plant, ramie is often found in summer garments.

Cashmere

For items containing cashmere wool fibre. Cashmere is found in items like sweaters and scarves, and offers luxurious softness and warmth.

Wool

Woolmark Wool Care Black (available with Delicate Item type)

For 100% woollen items and wool blends. This cycle meets the Woolmark requirements for washing items labelled “machine wash”.

Woolmark Wool Care Green (available with Ultra delicate item type)

For 100% woollen items and wool blends. This cycle meets the Woolmark requirements for washing items labelled “hand wash only”.

Washing underlays and sheepskins is not recommended because they could produce excessive amounts of lint that may cause pump blockages.

ITEM TYPE

Item type relates to the durability of items in a load. Wash similar durability items together.

Durable

Strong and resilient items like workwear and outerwear.

Moderate

Everyday items like t-shirts, shorts and pants.

CYCLE SELECTIONS

Delicate

Light and easily damaged items like dress shirts, blouses, dresses and other items.

Ultra delicate

For very fragile items needing extra gentle care. Ideal for lace, lingerie and fine knitwear.

Sports

Durable sportswear items made from synthetic fibre blends.

Denim

Denim or stretch denim items like jeans, jackets and skirts.

Sheets

Items such as bed sheets, pillow cases and duvet covers.

Towels

High absorbency towelling fabric items like bath, beach and hand towels.

Bulky

For items that are thick and insulating, such as blankets, quilts, comforters, and duvet or doona inners.

Outdoors

For outdoor items made from weather-resistant materials, such as rain jackets, windbreakers and pants.

Soft toys

For plush items filled with soft stuffing such as soft toys. This cycle is suitable for up to four items at a time.

Shoes

For sneakers and sports shoes with textile or canvas uppers. For best results, add some old towels to help with extra cleaning. Can wash up to two pairs at a time.

TREATMENT

Treatment lets you select from a range of specialised wash treatments to suit your needs.

Wash

A tailored wash, rinse and spin based on fibre and item type selection to remove soils. Detergent dose, water temperature, wash times, tumble patterns and spin speeds are optimised based on fibre type, item type and load size to ensure perfect results.

CYCLE SELECTIONS

Steam refresh

Designed to refresh dry items using steam and tumbling to reduce creases and odours. For best results use this cycle for one or two items at a time. Ideal for items like dress shirts to refresh before ironing.

Sanitise

Designed to eliminate bacteria and sanitise items using either ultraviolet light or high temperatures. Hot Sanitise is ideal for sanitising items, like tea towels, dishcloths, towels and sheets, that can handle high temperatures. We recommend UV Sanitise for delicate items.

Stain care

Use to help remove stubborn stains. The wash will be adjusted to optimise stain removal depending on the stain type selected. See 'Stain Care treatments' for details.

Rinse

A tailored rinse and spin based on fibre and item selection. Removes detergent and prepares items for drying.

Spin

A tailored spin based on fibre and item selection. Items are spun at an optimised speed to remove excess moisture. Ideal for preparing clothes for drying.

Allergy care

Uses higher wash temperatures and additional rinse cycles to reduce detergent residue and allergens like dust mites and pollen. Ideal for helping to manage allergies or sensitive skin.

Proofing

Prepares waterproof items for manual waterproofing or for applying in-wash waterproofing agents. See 'Proofing treatments' for details.

COLOUR

Different colours require different care. Colour selection adjusts wash temperature to suit items in the load. Always separate dark colours from white and light colours.

Auto (default)

Use Auto to sense the colours in a load. The wash temperature will automatically adjust for optimal fabric care. Ideal for extra small to medium loads.

CYCLE SELECTIONS

Dark

Designed to care for dark-coloured items with a cooler wash to help preserve vibrancy and prevent fading.

Mixed

Designed to care for loads with a mixture of darker colours. Ideal for everyday laundry loads, providing a balanced wash temperature to preserve vibrancy and help prevent colour transfer.

Light

Designed to care for light-coloured items with an optimised wash temperature to help maintain brightness.

White

Designed to care for white items with an optimised wash temperature to help maintain whiteness.

SOIL LEVEL

Soil level adjusts the wash cycle based on soil level of items. Leave on Auto or select a level to suit the load. Wash time and detergent dose will adjust automatically.

Auto (default)

Senses the dirt levels in a load. The wash time and detergent dose will adjust automatically for optimal cleaning efficiency.

Heavy

For items with high levels of soiling, using higher detergent dosage and longer wash times.

Moderate

Ideal for everyday laundry loads, providing a balanced wash cycle with optimal detergent dosage and wash time.

Light


For items with low levels of soiling, reducing detergent dosage and wash time.

WASH TEMPERATURES AND SPIN TREATMENTS


Wash temperatures and spin speeds are set automatically based on your fibre, item type and colour selections. This ensures the best wash results for your items.

See below for a general guide to how colour selection affects wash temperature and how item type affects spin speed. Not applicable to all fibre types.

WASH TEMPERATURE

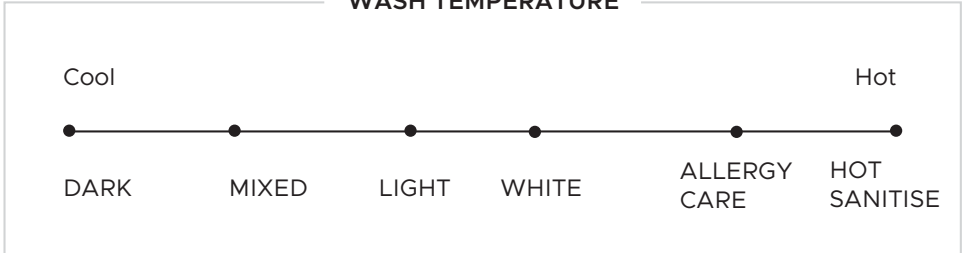

SPIN SPEED

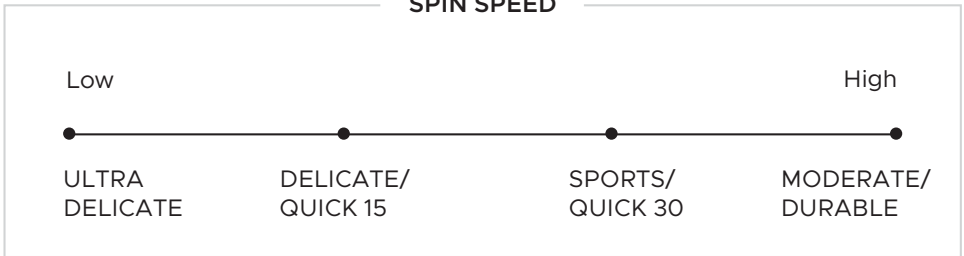

STAIN CARE TREATMENTS

Stain care treatments allow you to target and remove stains using specialised stain care techniques. The wash temperature and pre wash settings adjust based on the stain type you select. Some cycle settings will be unavailable when Stain Care is selected.

Key steps for removing stains

- 1 Treat stains as soon as possible.
- 2 If using a stain removal product, do this as a pre-treatment to the stain care treatment. Do not add it to the washer.
- 3 Run a Stain Care treatment.
- 4 If needed, repeat the stain care treatment until the stain is removed.
- 5 Avoid ironing or steaming the item until the stain is removed.

Oil based

Oil-based stains don't dissolve well in water. This stain care treatment loosens the stain without melting it into the fabric and spreading it deeper, and it uses detergent to dissolve the fats. It is important to treat oil-based stains quickly because they can turn yellow over time and become even harder to remove.

Oil-based stains can include oil, butter, waxes, crayons, animal fat, food grease, sun screen, sweat and collar stains.

Protein based

Protein-based stains are sensitive to heat which can cause them to set into the fabric. It is important to treat them as soon as possible. This stain care treatment modifies temperature to prevent the stains setting.

Protein-based stains include dairy products, grass, eggs, meat and blood.

Inorganic based

Inorganic stains are made of fine particles that attach to fabric. This stain care treatment controls tumbling and detergent amount to detach the particles from the fabric.

Inorganic based stains include dirt, mud, clay, ink, chalk and makeup.

Pigment and tannin based

Pigments and tannins are typically strong-coloured stains. This stain care treatment helps remove the pigments from the fabric, but in some cases, a bleaching agent is required to remove the colour completely. This can be done as a pre-treatment before washing.

Pigment and tannin-based stains include tea, coffee, wine, beer, berries, fruits, vegetables, juice and chocolate.

Starch based


Starches are commonly found in food products and can trap other stains to fabric. This stain care treatment uses detergent to dissolve the starch and helps to release other stains so they can be washed off the fabric.

Starch-based stains include baby food, tomato sauce, BBQ sauce, pasta sauce, condiments and gravy.

PROOFING TREATMENT

Proofing treatment prepares waterproof items for spray-on or in-wash waterproofing. It is only available with the **OUTDOORS** item type.


Follow the manufacturer's instructions when applying a proofing agent. If recommended, fix or activate the proofing agent in the dryer after the proofing treatment.

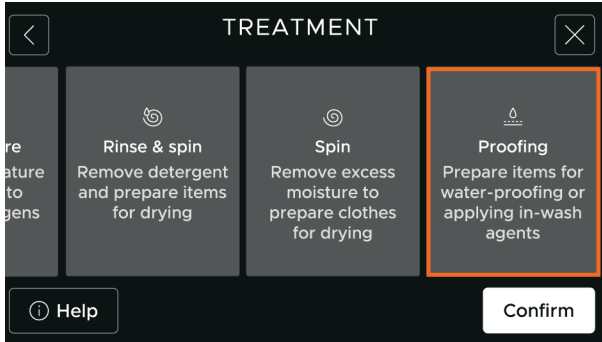

Pre-proofing only

To pre-proof an item before applying a spray-on proofing agent, place 1 to 2 items in the washer and run the proofing cycle to clean them.

After the cycle, apply the proofing agent to the item according to the product instructions.

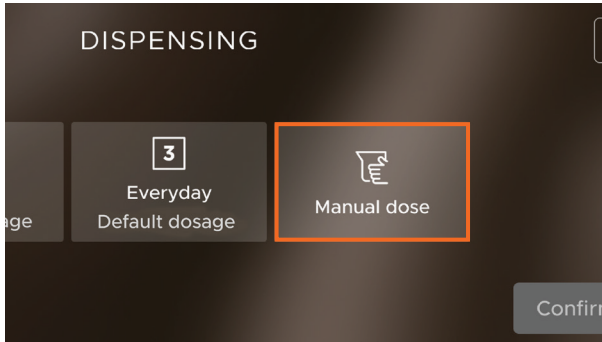

In-wash proofing

Set dispensing to **MANUAL**, and add the recommended amount of proofing agent to the Manual Dose dispenser cartridge.

Place 1 to 2 items in the washer, select **PROOFING** from the Treatment options, then start the cycle.

CHOOSE A DETERGENT

Specialised detergents provide the best wash performance for different items. We recommend using a specialised detergent type where relevant.

If switching detergent types between loads, we recommend cleaning the dispenser drawer to remove unsuitable detergent before washing items with a specialised detergent. See 'Clean the dispenser drawer'.

Everyday

For your everyday items that do not require specialised care.

Darks

Dark detergents are specially designed to keep darks vibrant and prevent dye transfer during the wash. Avoid using darks detergents with white or light-coloured items.

Whites

Whites detergents are designed to brighten your white items as they typically contain whitening agents. Avoid using whites detergents with coloured or dark items.

Sensitive

For items of users with sensitive skin. Sensitive detergents are typically free from fragrance and colourants, safer for those with allergies or asthma, and ideal for baby clothes.

Delicates

For delicate and ultra-delicate fabrics. Delicate detergents preserve fibres while maintaining softness.

Wool

Wool detergents are ideal for all types of woollen items to gently clean and maintain softness.

Silk

Silk detergents are ideal for washing item types containing silk fibres, preserving fibres while maintaining softness and lustre.

Down

Down detergents gently clean filled down garments, restoring loft, removing odours and revitalising water repellency. May be suitable for synthetic-filled garments.

Softener

Softeners are for conditioning items, giving them a softer feel. Softeners are dispensed during the rinse phase to prevent mixing with detergents.

CLEAN AND MAINTAIN YOUR APPLIANCE

Surfaces and accessories

Wipe with a damp cloth and dishwashing liquid, then dry with a clean, lint-free cloth. We do not recommend using the following cleaning products as they may cause damage:

- Plastic or stainless steel scouring pads
- Abrasive, solvent, household cleaners
- Acid or alkaline cleaners
- Handwash or soap
- Stainless steel cleaners or polishes
- Laundry detergents or disinfectants

Cleaning the drum and the door

- Run the Drum Clean cycle.
- Wipe the rubber seal around the door to prevent odours. Remove any items or lint and wipe out any water.
- Remove dirt or lint from the drum and wipe it clean. Do not leave metal objects in the drum as these may rust and cause staining.
- Leave the door open when not in use to prevent odours. Keep children and pets away from the washer so they cannot become trapped inside it.

Cleaning the hose(s)

Each hose contains a filter to stop contaminants in the water from entering your washer. Occasionally, disconnect the hoses where they connect to the taps and wash out any dirt build-up.

Moving your washer


- Remove the dispenser drawer and empty out any detergent or softener. Refer to 'Clean the dispenser drawer.'
- Clean the pump filter and ensure any water in the washer is drained. Refer to 'Clean the pump filter'.

Products that might damage your washer

- Concentrated bleaches, laundry pre-soakers/sanitiser, stain removers and hydrocarbon solvents (eg petrol and paint thinners) can cause damage to the surfaces eg control panel, and components of your washer.
- Be careful when washing items stained with solvents as they are flammable. DO NOT put them in your dryer.
- Use of dyes in your washer may cause staining of the plastic components. The dye will not damage the washer but we suggest you thoroughly clean your washer afterwards. We do not recommend the use of dye strippers in your washer.
- Nappy sanitiser and bleach are very corrosive to metal surfaces. DO NOT tip the contents of a nappy bucket into your washer. Rinse and wring items out thoroughly before placing them in the washer.


CLEAN THE DISPENSER

Check and clean the dispenser and cartridges regularly to remove build-up. Wash cartridges thoroughly if you reset to a different detergent. You can remove the drawer if required.

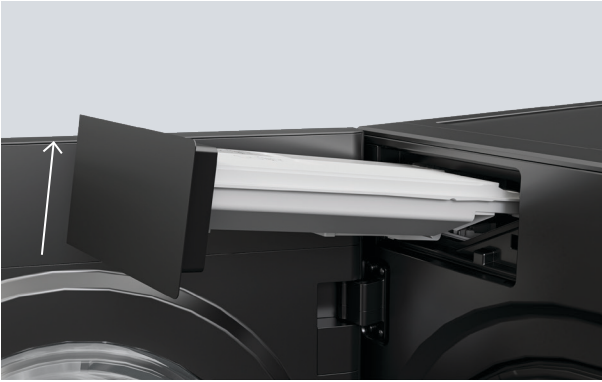

Removing the drawer

1. Open the dispenser drawer fully, then tilt it up to remove.

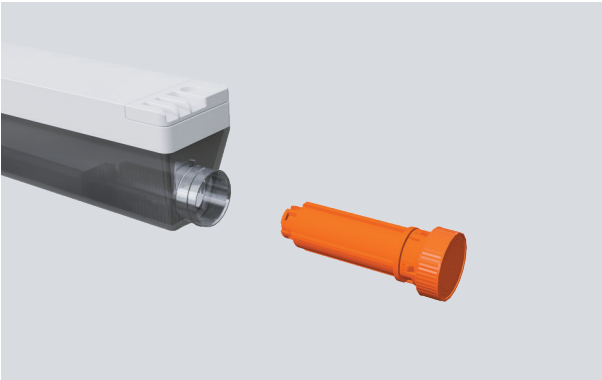

2. Lift out the cartridges and remove the fittings from the end. Wash the cartridges and fittings in warm water. Use a soft brush to remove stubborn build-up. Dry each part thoroughly, then put the fittings back in the cartridges.



3. Fill cartridges with their assigned detergents, and fit them back in the drawer as required. Push the drawer to close.

Store unused cartridges level if they have detergent in them.


RUN THE DRUM CLEAN CYCLE



DRUM CLEAN is a hot water cycle designed to be used with Washing Machine Cleaner to remove any buildup and odours. A reminder will display after 50 cycles.


Run the drum clean cycle when you see the reminder or more frequently if you use Eco or liquid detergents and low-temperature cycles.

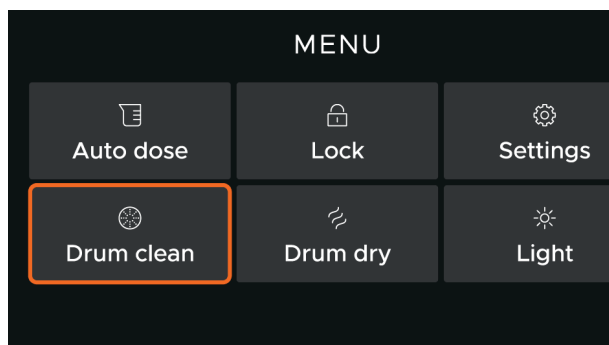

1. Ensure the drum is empty, then add Washing Machine Cleaner directly into the drum. Follow the manufacturer's instructions for recommended dosage.




2. Go to MENU  and select DRUM CLEAN. Press CONFIRM, then press the START/PAUSE  button to begin the cycle.

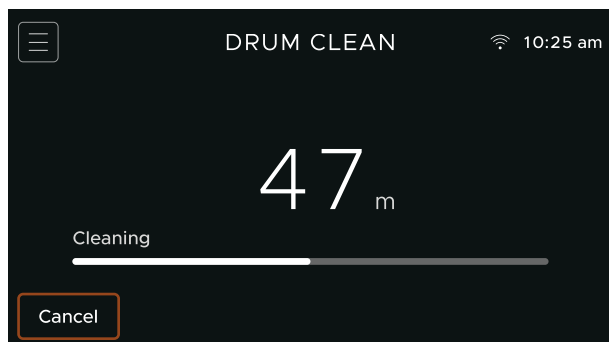


3. The cycle progress will show on the display. Press CANCEL to cancel the cycle.

UNLOCK THE DOOR

In a power failure, you can use the door-release tab to unlock the washer door and remove items, but you must drain the washer first.

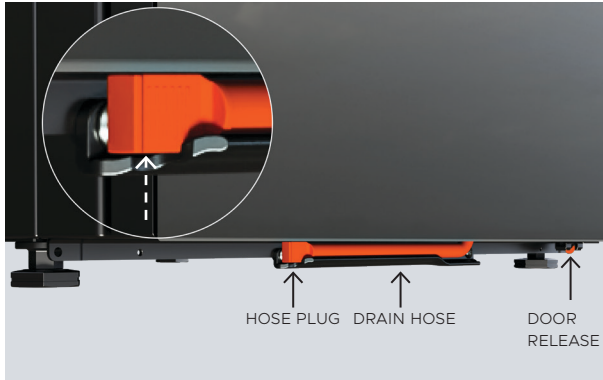

1. Use your fingers to lift the drain hose at the plug end and unhook it from under the washer.

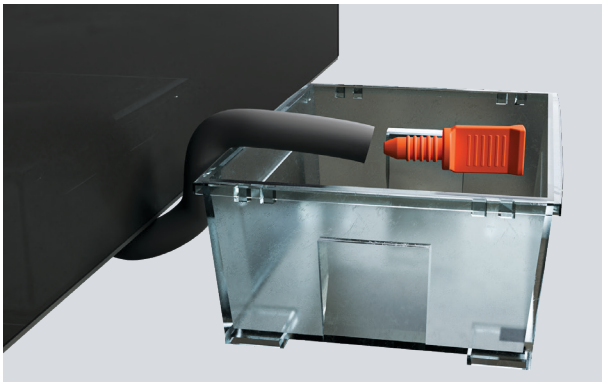

2. Position the hose over a shallow container, and remove the hose plug. Drain water from the washer so it is safe to open the door.

Replace the plug after draining, and refit the hose in its housing.



3. Use a suitable tool to pull down the door-release tab and unlock the door.

Hold the tool parallel to the floor, place your hand on top of it, and push downward to lower the tab.

Do **not** use the door as a lever point.


CLEAN THE PUMP FILTER

Check and clean the pump filter when you see an onscreen alert or you notice the washer is not draining. Turn the washer off at the wall before you remove any parts, then drain the washer.



1. Unlock and open the door, then push on the filter cover to access the filter.

See 'Unlock the door' for how to drain the washer and unlock the door.

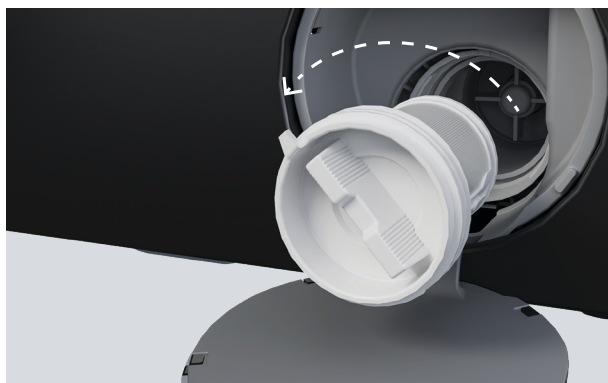

2. Turn the filter anti-clockwise to remove it, then clean and rinse it.

Some water may leak out when you remove the filter.



3. Check and clear the cavity behind the filter, and check that the impeller in the cavity moves freely.

CLEAN THE PUMP FILTER




4. Refit the filter, and turn it clockwise until the handle is in the vertical position.

 

TROUBLESHOOTING

General use

Why will the appliance not turn on?

- No power. Check the appliance is connected to the power supply. Press POWER  to turn the appliance on.
-


Why is the display not responding?

- Appliance needs time to start up when first powered on. This can take 30 seconds.
 - Appliance needs to be reset. Press POWER  to turn the appliance off. Wait a few seconds, then turn it back on. If the problem persists, disconnect from the power supply, wait a few seconds, then reconnect and press POWER  to turn it on.
 - Appliance may require a software update. Connect it to Wi-Fi and check for updates in the app.
 - Controls are locked. Press and hold the screen to unlock.
-

Why can't I see all the cycle settings and features on my washer?

- Software needs to be updated. Connect your washer to the app to get the latest updates and access extra features. See 'Wi-Fi connection and remote mode'.
-



Why is the washer not starting?

- Door not closed. Check nothing is obstructing the door, and close it firmly.
 - Cycle confirmed but not started. Press the START/PAUSE  button to start the cycle.
 - Washer is overloaded. Remove some items and restart the cycle.
 - Delay start is set. See 'Set Delay start'.
 - The controls are locked. Press and hold the screen to unlock.
 - Hot and cold taps not turned on. Turn on the hot and cold water and resume cycle.
 - There is a fault. See 'Fault codes'.
-

Why is the washer stopping and starting?



CREASE FREE is turned on. Press options, then CREASE FREE to turn off.

Why did the washer stop mid-cycle?

- Cycle has been paused. Press RESUME then START/PAUSE  to resume the cycle.
 - The door is open. Close the door and press START/PAUSE  to resume the cycle.
 - Washer may have detected suds and is waiting for them to dissolve before continuing the cycle.
-

TROUBLESHOOTING

Why is the washer vibrating or making noises?

- Transit bolts may still be in place. Refer to installation guide for how to remove them.
 - Washer overloaded. Press **START/PAUSE**  to pause the cycle and remove some items.
 - Washer not level. Refer to installation guide for instructions about levelling the washer.
 - Load out of balance. Press **START/PAUSE**  to pause the cycle and redistribute items.
 - Washer is in **DRUM DRY** mode.
 - Washer has a fault. See 'Faults'.
-

Why is the wash cycle taking so long?

- Washer is overloaded. Pause the cycle and remove some items.
 - Items are tangled. Untangle the items and resume the cycle.
 - Incorrect settings for the load. Check the selected fibre type, item type and treatment and adjust if required.
 - Washer is not draining. Check the drain hose for blockages and correct if possible. If the problem persists contact Customer Care.
-


Why is the fabric damaged after a wash cycle?

- Cycle settings not appropriate for the load type. Follow instructions on care labels and sort items accordingly. See 'Sort your items'.
 - Metal parts on the items or in the load may catch on fabric. Always fasten zips, velcro and other clasps before placing items in the washer.
-

Why do items keep getting tangled?

- Loads not separated before going in the washer. Load items individually and try separating larger items from smaller items.
 - Load size is too large. Try washing smaller loads. See 'Load the washer'.
 - Wash big items like sheets and duvet covers separately and use the **Sheets** item type.
 - Cycle settings not the best option for the load type.
 - Delicate items not separated. Wash pantyhose, bras and stockings in a small washbag.
-

Why do items keep getting creased?

- Items have been left in the washer after the cycle ended. Turn **CREASE FREE** on at the start of the cycle to minimise creasing.
 - Washer is overloaded. Press  **ADD ITEM** to pause the wash and remove items. See 'Wash options'.
 - Select the **Delicate** or **Ultra Delicate** Item type. This will reduce spin speed and minimise creases.
-

TROUBLESHOOTING

Why is dye transferring between my items?

- Items not sorted before going in the washer. Separate white and coloured items into separate loads.
 - Cycle settings not appropriate for load type. Select the relevant COLOUR option for your load.
-

Why is the washer not draining?

- Pump filter needs to be cleaned. See 'Clean the pump filter.'
 - Drain hose not connected correctly. See the installation guide for instructions.
 - Drain hose or drain is blocked. Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.
-

Why is the washer beeping?

- The cycle has ended. Items can be removed.
 - Washer has a fault. See 'Faults'.
-

Why is water coming from under the washer?

- Door not closed. Check nothing is obstructing the door, and close it firmly.
 - Dispenser drawer not closed. Close it firmly.
 - Drain hose or drain is blocked. Check the drain hose and drain for blockages and correct if possible. If the problem persists contact Customer Care.
 - Drain hose not connected correctly. See the installation guide for instructions.
-

Why is my washing wetter than I expect at the end of the cycle?

- Out of Balance load affecting spin speed. Redistribute the load and run a spin treatment to remove excess water.
 - Quick or delicate cycles have lower spin speed and can result in wetter washing at the end of the cycle. Select Moderate and Durable treatments as these have faster and longer spin times.
-

Why are my clothes not as clean as I expected?

- Incorrect settings for the load. Select a higher SOIL LEVEL or more durable item type.
 - Not enough detergent. Increase detergent amount by increasing SOIL LEVEL or adjusting AUTO DOSE amount.
 - Washer overloaded so can't wash items properly. See 'Load the washer' for maximum load capacity guidance.
 - Ineffective detergent. Use a good quality detergent for best results.
 - Washer still has residue from previous wash. After washing particularly soiled clothing, empty the washer and run a RINSE cycle to remove residual dirt.
 - Use STAIN CARE treatment for specific stains.
-

TROUBLESHOOTING

Why is the remaining cycle time not accurate?

Cycle time is an estimate based on load size and water flow rates. It adjusts throughout the cycle to give you an estimation of minutes remaining. The time shown is not the Declared Program Time.

Why does my item have wet patches on after a STEAM REFRESH cycle?

This is normal and helps remove wrinkles. Remove the item from the washer immediately at the end of the cycle and hang up to dry for a few minutes before wearing.

Why does my washer smell after a cycle?

- Washer needs to dry out. Use DRUM DRY after a cycle, or leave the washer door ajar.
 - Drum and door need to be cleaned. See 'Clean and maintain your appliance'.
 - Try using a different detergent.
-

FAULTS

How do I know if there is a problem?

Your appliance will beep and an alert will show in the display.

What to do

First try to fix the issue and clear the alert according to the onscreen instructions.

If the problem persists

- 1 Note down the fault code.
- 2 Contact Customer Care or a Fisher & Paykel trained and supported service technician. Refer to the Service and Warranty booklet for contact details.

COMPLIANCE INFORMATION

Energy and Water Label Cycle

The cycle for energy and water labelling in accordance with AS/NZS 2040: 2021 and AS/NZS 6400: 2016 is as follows: Cotton, Item: Durable, Colour: White, Dispensing: Manual Dose, More Options - Optimise: Energy. This cycle is the recommended energy and water saving cycle for normally soiled everyday washing, equal to the rated capacity.

Note for Testing Laboratories: The powder detergent is placed directly into the bottom of the drum. No more than the maximum amount of anti-foaming agent is then placed into the bottom of the drum followed by the PBIS solution. The load is then added in accordance with AS/NZS 2040: 2021.

UV Sanitise (20°C)

This cycle complies with the bacterial removal requirements of GB 21551.5-2010.

Average elimination rate for the following bacteria, Staphylococcus aureus & Escherichia coli >99.99%.

Fibre: COTTON, Item Type: DURABLE, Treatment: SANITISE, Colour: DARK 20C, Soil Level: MODERATE, AutoDose: MANUAL.

Hot Sanitise

This cycle complies with the bacterial removal requirements of GB 21551.5-2010.

Average elimination rate for the following bacteria, Staphylococcus aureus & Escherichia coli >99.99%

Fibre: MIXED, Item Type: MODERATE, Treatment: SANITISE, Colour: MIXED, Soil Level: MODERATE, AutoDose: MANUAL, More Options: SANITISE METHOD - HOT WATER.

Allergy Care

This cycle complies with the dust removal requirements of QB/T 5958-2023. Average elimination rate for the following allergen Dermatophagoides farinae =100%

Fibre: COTTON, Item Type: MODERATE, Treatment: ALLERGY CARE, Colour: MIXED, Soil Level: MODERATE, AutoDose: MANUAL

Woolmark Wool Care

The wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of machine washable wool products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M2540.



Fibre: WOOL, Item Type: DELICATE, Treatment: WASH, Colour: WHITE, Soil Level: LIGHT AutoDose: MANUAL.

The wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of wool garments labelled as "hand wash" provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M2541.



Fibre: WOOL, Item Type: ULTRA DELICATE, Treatment: WASH, Colour: WHITE, Soil Level: LIGHT AutoDose: MANUAL.

MANUFACTURER'S WARRANTY AND SERVICE GUIDE

NZ



To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, or view online at <https://www.fisherpaykel.com/nz/help-and-support/warranty-information>

AU



To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, refer to your separate warranty and service book or view online at <https://www.fisherpaykel.com/au/help-and-support/warranty-information>

This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this product's Manufacturer's Warranty.

Complete and keep for safe reference:

Model _____

Serial No. _____

Purchase Date _____

Purchaser _____

Dealer _____

Suburb _____

Town _____

Country _____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2026. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

433543A 04.26