

FISHER & PAYKEL

**FOOD STORAGE
CONTAINERS**

FSC3PRM1, FSC4DLM1, FSC5PNM1, FSC5FPM1

USER GUIDE

NZ AU US CA UK IE SG

..... SAFETY INSTRUCTIONS

WARNING!

Read entire manual. Failure to follow all guides and rules could cause personal injury. Follow safety instructions below:

- Check suitability of parts before microwaving, heating in an oven, freezing, or cleaning in a dishwasher. (Refer to 'Use and Care' section and Iconography on individual parts).
- Ensure container lid is removed before placing container in the oven.
- Ensure vent on container lid are open before placing container in microwave.
- Allow glass parts to come to room temperature before placing in the microwave or oven.
- Do not put hot containers directly onto cool surfaces- place on cooling tray or board.
- Do not put container on cook top to heat up contents.
- This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use.
- Regularly clean all parts of the containers that come into contact with foods. Refer to 'Use and Care' sections.
- Never store volatile or flammable materials in your containers as they may explode.
- Never freeze liquids in glass containers. Liquid expands during freezing, which may cause the container to explode.
- Follow all other use and care instructions.

USE & CARE

To determine suitability of parts, compare the symbols below with those located on the containers.



Fridge/
Freezer



Plastics



Microwave



Dishwasher



Oven

- All materials used are safe for food storage.
- Acacia timber lids: designed for pantry and countertop storage. **Hand wash only with warm water, mild detergent, and soft cloth.** Dry acacia lid thoroughly after cleaning. Use food-safe vegetable oil to coat lid and re-apply every 12 months or less. Rub on vegetable oil using paper towel or soft cloth.
- The acacia lids may have a natural odour. This is normal. Refer to wash instructions for proper cleaning guidelines.
- Glass and Stainless-Steel containers: oven safe to 230°C. Ensure container lid is removed before placing container in oven.
- Some discolouration of the stainless steel containers is normal after prolonged exposure to high temperatures and should not be considered a defect.
- Use a damp, soft cloth and non-corrosive cleaner suitable for stainless steel to remove discolouration.
- Glass lids: fridge/freezer, dishwasher, and microwave safe. Microwave with vent open.
- For glass lids, close vents to create leak resistant seal when storing food.
- Use a small straw brush to clean around lid seals and vents.
- When opening and closing container, open vents first to release air.
- For information on recyclable materials, please refer to your local recycling requirements.

..... **MANUFACTURER'S WARRANTY**

Warranty NZ AU

You automatically receive a two-year Manufacturer's Warranty with the purchase of this product covering parts and labour for servicing within the country of purchase.

Fisher & Paykel undertakes to:

Replace without cost to the owner any Product, which is found to be defective within TWO YEARS of the date of purchase.

This warranty DOES NOT cover

- Faults or failures which are not related to any defect in the Product. For example:
 - ① Instructing you how to use the product.
 - ② Correcting fault(s) caused by the user.
 - ③ Correcting damage caused by pests, e.g. rats, cockroaches etc.
- Defects caused by factors other than:
 - ① Normal domestic use or
 - ② Use in accordance with the Product's User Guide.
- Defects to the Product caused by accident, neglect, misuse or Act of God.
- Normal recommended maintenance as set out in the Product's User Guide.
- Faults or failures when the Product has been dismantled, or tampered with.

This Warranty is an extra benefit and does not affect your legal rights.

Product sold in AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure

In Australia, to make a claim call customer care 1300 650 590 or email customer.care@fp.com.au.

While our number is toll-free there may be costs to you depending on the method you use to call, and there may be costs to you involved with accessing email if you choose that method. Fisher & Paykel Customer Services Pty Limited, Level 1, 1 Eden Park Drive, Macquarie Park, NSW 2113. ABN 67 003 335 171.

..... **MANUFACTURER'S WARRANTY**

Product sold in NEW ZEALAND ONLY

In New Zealand, to make a claim call customer care on 0800 372 273 or email customer.care@fp.co.nz.

Full warranty and service information can be found on our website:

NZ: www.fisherpaykel.com/nz/help-and-support/warranty-information

AU: www.fisherpaykel.com/au/help-and-support/warranty-information

Warranty UK IE

You automatically receive a two-year Manufacturer's Warranty with the purchase of this product covering parts and labour for servicing within the country of purchase.

Full warranty and service information can be found on our website:

UK: www.fisherpaykel.com/uk/help-and-support/warranty-information

IE: www.fisherpaykel.com/ie/help-and-support/warranty-information

Warranty US CA

When you purchase any new Fisher & Paykel product for personal or consumer use you automatically receive a two-year limited warranty covering parts and labor for servicing within the 48 mainland United States, Hawaii, Washington DC and Canada.

In Alaska the limited warranty is the same except that you must pay to ship the product to the service shop or the service technician's travel to your home.

Products for use in Canada must be purchased through the Canadian distribution channel to ensure regulatory compliance.

Full warranty and service information can be found on our website:

US: www.fisherpaykel.com/us/help-and-support/warranty-information

CA: www.fisherpaykel.com/ca/help-and-support/warranty-information

Warranty SG

Full warranty and service information can be found on our website:

SG: <https://www.fisherpaykel.com/sg/help-and-support/warranty-information> Warranty NZ AU

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2025. All rights reserved.

The models shown in this guide may not be available in all markets and are subject to change at any time.

The product specifications in this guide apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time.

For current details about model and specification availability in your country, please go to our website or contact your local Fisher & Paykel dealer.

432743A 07.25