WASH PROGRAM DATA

Wash program times indicated are approximate. For information on which program to use for your load, refer to your user guide.

United Kingdom and Ireland

DD60*A, DD60*C & DD60*D models

| CYCLE | WASH PROGRAM (CYCLE TIME) | | | | | | | |
|--------------|---------------------------|----------------------------|--------------------------|-------------------------|------------------------------|--------------------------|--|--|
| | HEAVY (~160min) | MEDIUM (~150min) | ECO* (~243min) | FAST (~49min) | DELICATE (~105min) | RINSE (~15min) | | |
| Pre wash | 60°C | n/a | n/a | n/a | n/a | n/a | | |
| Main wash | 65°C | 55°C | 50°C | 48°C | 45°C | n/a | | |
| Post rinse | Yes | Yes | Yes | Yes | Yes | n/a | | |
| Final rinse | 65°C | 60°C | 51°C | 50°C | 50°C | n/a | | |
| Drying phase | Yes | Yes | Yes | n/a | Yes | n/a | | |

| USAGE | WASH PROGRAM | | | | | | | |
|--------------|--------------|--------|------|------|----------|-------|--|--|
| | HEAVY | MEDIUM | ECO* | FAST | DELICATE | RINSE | | |
| Water (L) | 10.0 | 8.3 | 7.8 | 7.4 | 8.0 | 2.6 | | |
| Energy (kWh) | 1.00 | 0.65 | 0.54 | 0.46 | 0.46 | n/a | | |

*Reference program for energy label in compliance with EN60436 Regulations.

Wash times can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 15°C incoming water (Great Britain and Ireland).

STANDARDS TEST

United Kingdom and Ireland

The DishDrawers are tested to EN60436 standards for both wash and dry performances using the parameters detailed below.

Wash program

Eco

Detergent quantity

14g per drawer – added to the main powdered detergent dispenser

Rinse aid setting

4

Water softener setting

2

Capacity

6 place settings per drawer

Accessories to be used

Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid, fold away cup racks, glass supports are to be used for the test. Ensure the small items container it is removed from cutlerly basket if provided.

Height setting of cup racks DD60*A models

DD60'A models

The cup racks are already at a fixed height.


All other models:

Adjust the height to a position clear of other load items.

Correct orientation of glass supports on side of drawer



Recommended loading pattern Top and bottom drawer

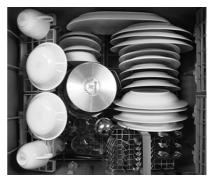

Cutlery basket

