28 5/16" 22 3/8" DATUM : FRONT OF CARCASS A A T T 0 PLAN VIEW DATUM : FRONT OF CARCASS 0 **B** 29 13/16" 0 0 48 1/2" 8 8 8 8 8 8 DATUM : BOTTOM OF PRODUCT FRONT VIEW PROFILE VIEW 20

inches

FISHER & PAYKEL

DATA SHEET 30" Professional Double Wall Oven

Model no:

WODV2-30

(refer page 2 for metric measurements)

Product Dimensions	in
Overall height of oven	48 1/2'
Overall width of oven	29 13/16′
Depth of oven front and control panel (excludes handle and dials)	1 9/16′
Depth of oven chassis (does not include oven front)	22 3/8'
Height from bottom datum to bottom of control panel	43 3/4'
E Height from bottom datum to top of top door	43 5/16′
Height from bottom datum to centre of top handle	41 3/4'
Height from bottom datum to bottom of top door	22 7/16′
Height from bottom datum to top of bottom door	21 15/16′
Height from bottom datum to centre of bottom handle	20 3/8'
Height from bottom datum to top of vent	1 1/16'
① Thickness of handles	
M Height of chassis	47 15/16'
Depth of door (open) (measured from front of door)	20 7/8'
Overall width of chassis	28 5/16′
Width of handle	28′
	2 3/8'

Minimum inside depth of cavity from front datum	22 5,

48 3/16"

28 1/2"

Minimum inside height of cavity from bottom datum

Minimum inside width of cavity

INDICATES PRODUCT DATUM -----INDICATES CLEARANCES ------

DATE: 24.04.2018

IMPORTANT: Throughout this guide, dimensions may vary by ±2mm (1/16"). Read the installation guide for detailed information on installing the product. For full installation instructions and specifications visit fisherpaykel.com

o 720 0 569 A A T T 0 PLAN VIEW I DATUM : FRONT OF CARCASS 0 **B** 757 0 0 A 0 1232 8 8 8 8 8 8 8 DATUM : BOTTOM OF PRODUCT FRONT VIEW PROFILE VIEW 0 100 200 400

illimetres

FISHER & PAYKEL

DATA SHEET 30" Professional Double Wall Oven

Model no:

WODV2-30

(refer page 1 for imperial measurements)

Product Dimensions	mm
Overall height of oven	1232
Overall width of oven	757
Depth of oven front and control panel (excludes handle and dials)	39
Depth of oven chassis (does not include oven front)	569
Height from bottom datum to bottom of control panel	1112
E Height from bottom datum to top of top door	1100
Height from bottom datum to centre of top handle	1061
Height from bottom datum to bottom of top door	570
Height from bottom datum to top of bottom door	557
Height from bottom datum to centre of bottom handle	518
Height from bottom datum to top of vent	27
① Thickness of handles	
Height of chassis	1218
Depth of door (open) (measured from front of door)	530
Overall width of chassis	720
Width of handle	711
Depth of handle (measured from front of door)	60

1224

724

575

INDICATES PRODUCT DATUM ------

Minimum inside height of cavity from bottom datum

Minimum inside depth of cavity from front datum

Minimum inside width of cavity

DATE: **24.04.2018**

INDICATES CLEARANCES -

IMPORTANT: Throughout this guide, dimensions may vary by ±2mm (1/16"). Read the installation guide for detailed information on installing the product. For full installation instructions and specifications visit fisherpaykel.com