



Professional grill cart
CAD36 and CAD48 models

**Installation instructions
and User guide**

A MESSAGE TO OUR CUSTOMERS

Thank you for selecting this DCS by Fisher & Paykel Grill Cart. Because of this product's unique features we have developed this manual. It contains valuable information on how to properly install and maintain your new Professional Grill Cart for years of safe and enjoyable use.

To help serve you better, please fill out and submit your Product Registration by visiting our local website listed on the back cover. In addition, keep this guide handy, as it will help answer questions that may arise as you use your new Grill Cart.

See section 'Service' for Customer Care contact details.

NOTE: Please write the Model, Code, and Serial Numbers on this page for references (can be found on the inside, left wall of the cylinder drawer).

MODEL NUMBER _____ CODE _____ SERIAL NUMBER _____

NOTE: Inspect the product to verify that there is no shipping damage. If any damage is detected, call the shipper and initiate a damage claim. DCS by Fisher & Paykel is not responsible for shipping damage.

DO NOT discard any packing material (box, pallet, straps) until the unit has been inspected.



WARNING

1. Do Not store or use gasoline or other flammable vapours and liquids inside or in the vicinity of this or any other appliance.
2. An LPG cylinder not connected for use shall not be stored inside or in the vicinity of this unit.



FOR YOUR SAFETY

If you smell gas:

1. Do not turn on any electrical switch; do not use any phone in your building.
2. Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
3. If you cannot reach your gas supplier, call the fire department. Installation and service must be performed by a qualified installer, service agency or the gas supplier.

TABLE OF CONTENTS

SAFETY PRACTICES & PRECAUTIONS	2
MODEL IDENTIFICATION & DIMENSIONS	3
BEFORE INSTALLING YOUR APPLIANCE	
Shipping Inspection	3
INSTALLATION	
Locating the Cart	4
Cart Assembly Instructions	4
Optional Attaching Side Shelf	9
USING THE CART	
Removing Drawers	11
Re-installing Drawers	12
CARE AND MAINTENANCE	14
SERVICE	15
WARRANTY	16

SAFETY PRACTICES AND PRECAUTIONS

1. Begin by insuring proper installation and servicing.
2. Follow the installation instructions in this manual.
3. To extend the life of your product, be sure to follow the use and care guidelines in this manual.



WARNING:

1. **Do not allow children or pets to play in or around the Cart.**
2. **To prevent personal injury or damage to the drawers, do not overload them. The maximum rating of each drawer is 15.8 kg.**
3. Do not store items of interest to children above or on the inside of any cart. Children could be seriously injured if they should climb onto or into the cart to reach these items.



WARNING!

Do not push down on the top of the drawers. The unit could tip forward.
Do not overload drawers. Maximum rating of each drawer is 15.8 kg.




WARNING!

1. Improper hand placement during drawer closure may cause injury to hands or fingers.
2. Always close or open drawers using their handles.
3. Be sure to keep hands away from drawer edges when opening or closing drawers.


MODEL IDENTIFICATION & DIMENSIONS

CAD-36

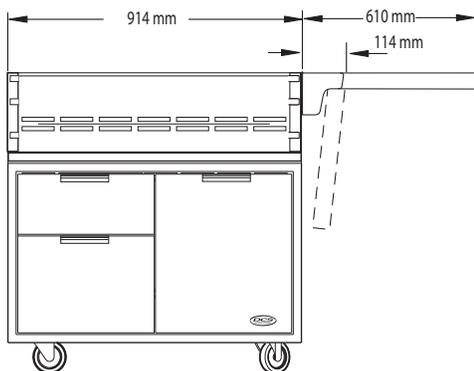


front view

CAD-48

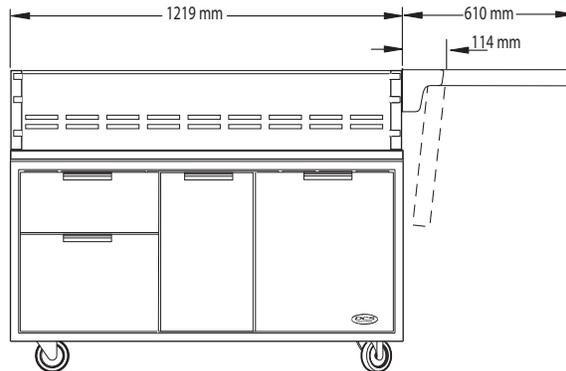

front view

CAD-36/48

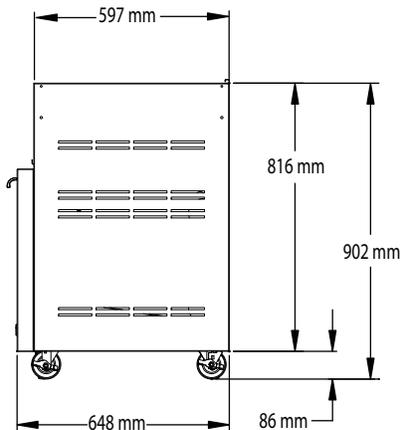

side view

BEFORE INSTALLING YOUR APPLIANCE

SHIPPING INSPECTION

1. Inspect the Cart to verify that there is no shipping damage.
2. If any damage is detected, call the retail dealer and initiate a damage claim. DCS by Fisher & Paykel is not responsible for shipping damage.

NOTE: Do not discard any packing material (box, straps) until the unit has been inspected.

- Operate the drawers to be sure they glide smoothly.
- Examine the drawer fronts to be sure there are no dents or scratches.



Fig. 01

Illustration only - carts vary

INSTALLATION

CART ASSEMBLY INSTRUCTIONS

CAUTION:

DO NOT BLOCK VENTILATION OPENINGS

Do not remove castor wheels from cart, as resting the cart directly on its base will block ventilation openings, causing a hazardous situation. Keep ventilation openings on side walls and base of cart unobstructed at all times.

Some parts have sharp edges; care must be taken when handling the various components to avoid injury. Please read safety information provided in these instructions before beginning assembly. Wear gloves when handling.

Two or more people should work together to assemble the cart and grill.

NOTE: Avoid using side shelf to move cart. Push or pull cart by grasping corners of head.

LOCATING THE CART

For proper use, this product should be installed/positioned on a level, flat ground or patio. Unevenness such as bumps, cracks and protrusions should be 6 mm or less. Ensure that the area does not slope in any direction. Refer to Fig. 02 for required flat area dimensions.


GETTING STARTED

- Remove packaging.

Contents Included:

Your cart is packaged in one box. The box contains your cart and a universal hardware kit to be used for grill installation and may contain extra hardware for your convenience.

Table of quantity of parts

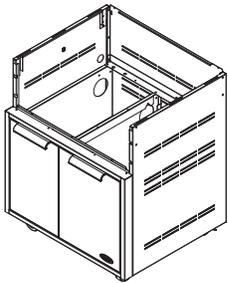Contents	Model	Part No.	Qty.
 Illustration only - carts vary	CAD-36	85101	1
	CAD-48	85100	1

Contents	CAD-36	CAD-48
 Machined Phillip screws 10-24X12mm	16	17
 Bracket, Tab	2	4
 Bolt Hex 1/4-20-12mm	2	2
 Washer .313 x .750	4	4
 Nut Hex 1/4-20	2	2

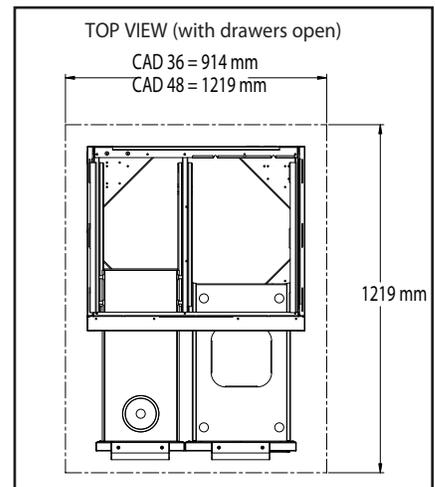


Fig. 02

Tools Required:

	Eye Goggles
	Work Gloves
	Power Screwdriver or Variable Speed Drill with Phillips - tip #2 Attachment
	4mm Allen Key
	5mm Allen Key
	2mm Allen Key
	Adjustable Spanner

Fig. 03

INSTALLATION

CART ASSEMBLY INSTRUCTIONS

STEP 2

Outdoor Appliance Head Preparation

1. First you will need to remove the angle brackets from the side of the unit and replace them with cart mount brackets (Fig. 04). Unit is shipped prepared for island installation.
2. Install the Bracket Tab on both sides using 8 of the 10-24 x 12mm screws. Install each bracket with 4 screws on each side of the grill head (Fig. 04, 05 and 06). For a CAD-48, use the appropriately labeled bracket for your grill head and cart side.

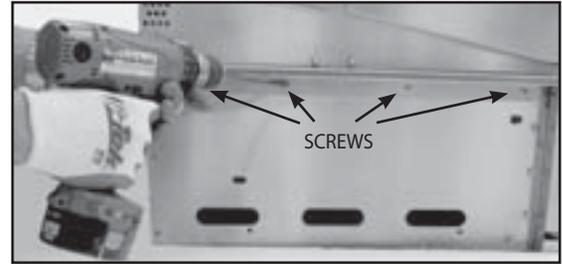


Fig. 04

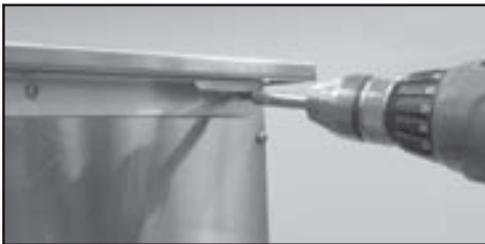


Fig. 05

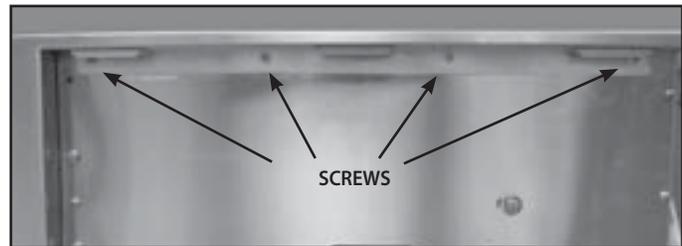


Fig. 06

Note:

For the CAD-48 there are two sets of brackets. If you have the BGB48-BQR, use the brackets labeled LEFT-48 BQR and RIGHT-48 BQR. If you have the BGB48-BQAR, use the brackets labeled 48 BQAR.

INSTALLATION

CART ASSEMBLY INSTRUCTIONS

STEP 3

Head Placement onto Cart (2 Persons Required)

1. Remove drip tray/pan (Fig. 07) and other removable components (to lighten the load) such as grates, top burner caps and components, and griddle flue cover, radiant tray and grill burner for easier handling.
2. Two persons required to lift head (*images for illustration only - burner/sink model shown is not currently available in New Zealand and Australia*). Placing head on cart, place rear of head over the rear of the cart first (Fig. 08). Then allow the rear side tabs to first locate in the slots on the top of the cart sides. The other tabs will locate in the middle and front slots as the head is lowered into position on the cart (Fig. 09).



Fig. 07



Fig. 08

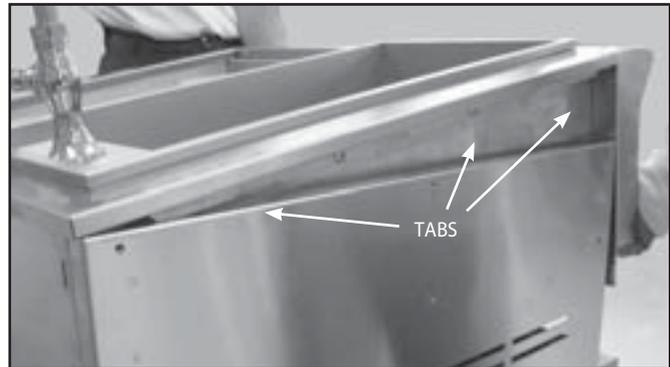


Fig. 09

INSTALLATION

CART ASSEMBLY INSTRUCTIONS

3. Position tabs on side bracket to fit into slots on the cart (be aware of pinch points)(Fig. 10 -12). When complete, the landing ledge should sit flush on the top of the cart (no gap).
4. Secure the head to rear of cart (Fig. 13) with Phillips-head screws provided (10-24 x 12mm).

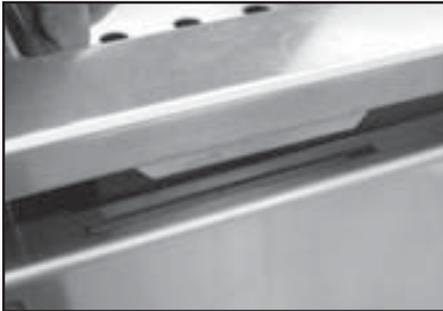


Fig. 10

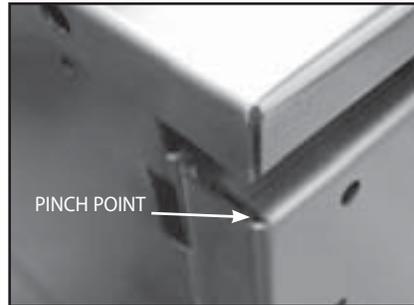


Fig. 11



Fig. 12



Fig. 13

STEP 4

Front End Screw Installation

1. Install remaining screws (10-24 x 12mm) into the front of head to the cart (Fig.14).
2. Slide drip tray/pan back into place.



Fig. 14

INSTALLATION

CART ASSEMBLY INSTRUCTIONS

STEP 5

Gas Hookup - LPG

Attach LPG gas line connector hose assembly (as shown in "LPG Gas Hookup" section - of the outdoor grill manual) and then connect to LPG cylinder as shown.



Fig. 15



Fig. 16

FOR YOUR SAFETY

To prevent personal injury or damage to the drawers, do not overload them. The maximum rating of each drawer is 15.8 kg.



WARNING!

Do not push down on the top of the drawers. The unit could tip forward.

INSTALLATION

SIDE SHELF ASSEMBLY INSTRUCTIONS (OPTIONAL)

STEP 6

Optional Attach Side Shelf Accessory on Either Side

NOTE: Side shelf Model CAD-SK can be installed with the head already on the cart.

1. Screw shoulder bolts (2) into the bottom screws on the side of the cart (Fig. 17 and 18). Tighten with 4mm Allen key.
2. Slide left and right side shelf brackets over the shoulder bolt (Fig. 19) and install top screw attaching the side shelf brackets onto the cart (Fig. 20). Tighten with Phillips screwdriver.
3. Holding the side shelf, install 2 shoulder bolts into the slot and screw into the side shelf tray (Fig. 21). Tighten with a 5mm Allen key (Fig. 22).
4. Place shelf in the up position and check for level.

If shelf is not level, adjust side shelf set screw. Set screws can be adjusted using a 2mm Allen wrench (Fig. 23). Turn the Allen key clockwise to raise the shelf. Turn 1/4 turn and review to see if the shelf is level. The set screws in the left and right bracket should be adjusted equally to ensure the shelf sits level.

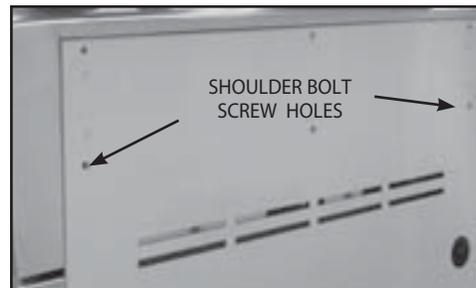


Fig. 17

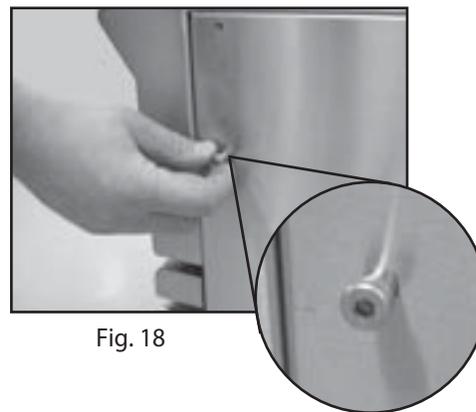


Fig. 18

INSTALLATION

SIDE SHELF ASSEMBLY INSTRUCTIONS (OPTIONAL)



Fig. 19



Fig. 20



Fig. 21

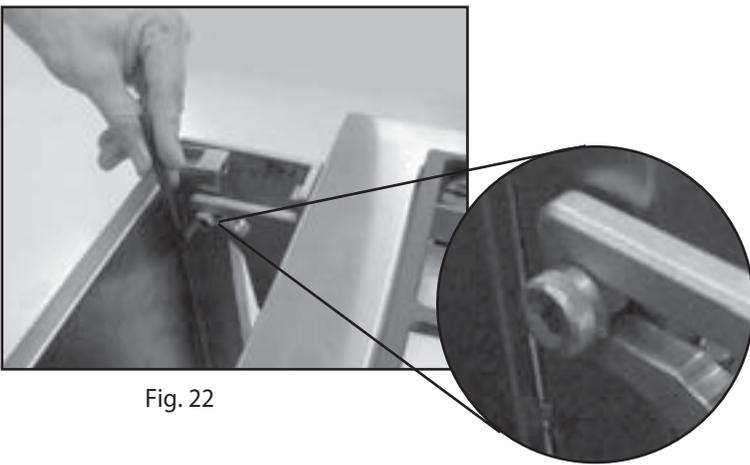


Fig. 22

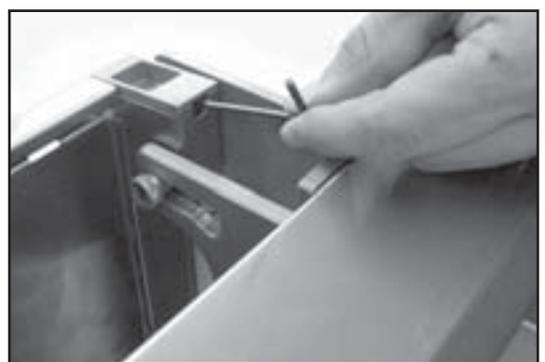


Fig. 23

USING THE CART

REMOVING DRAWERS

1. To remove the drawers, pull them out until their slider latch is visible. Carefully push the latch down on the left side while pulling up on the latch on the right side and pull the drawer completely out of the frame (Fig. 24 and 25).
2. To prevent damage to surfaces, place the drawers on a stable surface on a protective towel or tablecloth while removed from the cart.

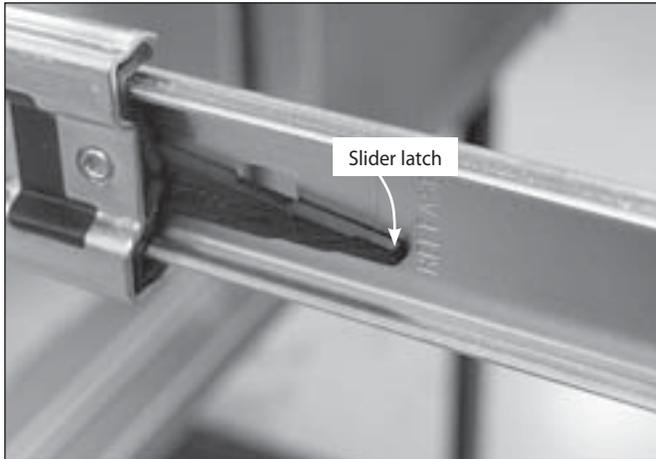


Fig. 24

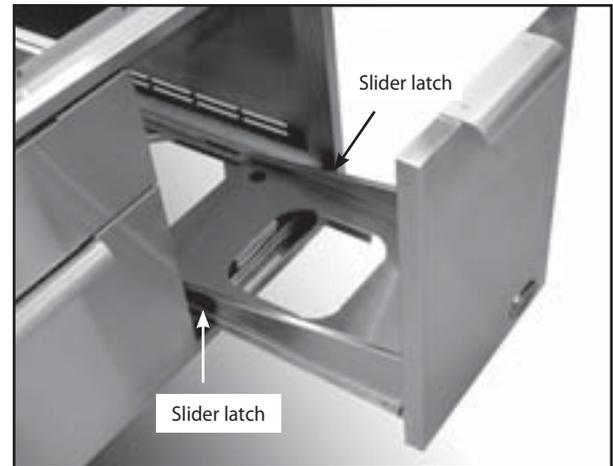


Fig. 25

FOR YOUR SAFETY

To prevent personal injury or damage to the drawers, do not overload them. The maximum rating of each drawer is 15.8 kg.

LOCKING THE CART IN PLACE

To prevent the cart from accidentally moving during use, two of the four castor wheels are equipped with brakes. When you have moved your cart to its location, lock it in place by applying the brakes as shown below.



Fig. 26

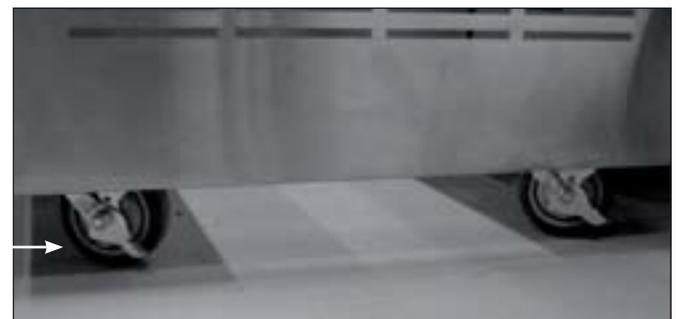


Fig. 27

USING THE CART

RE-INSTALLING DRAWERS

1. Re-install the drawers by extending their guides as shown in Fig. 28.
2. While holding the drawer parallel to the cabinet, carefully align & engage the ends of the glides. Slide the drawer about 3 cm so that the glides are supporting the back of the drawer (Fig. 29).



Fig. 28

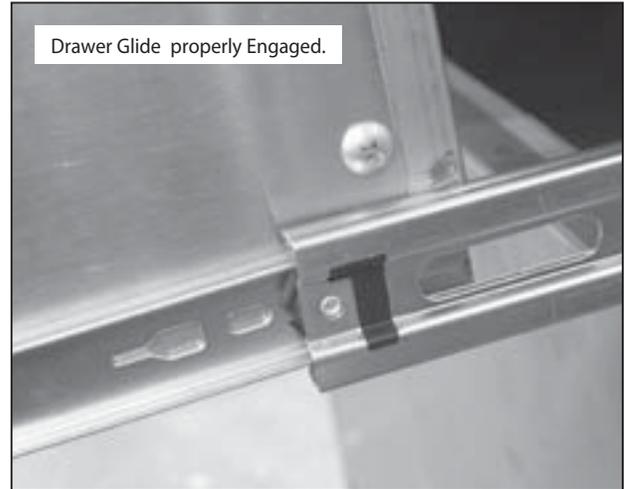


Fig. 29

3. While holding the drawer up by the handle, pull the glides from the drawer cavity out over the drawer glide until they click (Fig. 30).
4. As you push the drawers in, you will encounter moderate resistance. Continue to push the drawer all the way in to complete the engagement process. The drawer will now glide smoothly in & out with light effort (Fig. 31).



Fig. 30



Fig. 31

USING THE CART

5. Install the two (2) racks provided into the opening by sliding them onto the rollers on the sidewalls of the left cavity (Fig. 32).



Fig. 32

CARE AND MAINTENANCE

All parts of the Professional Grill Cart can be cleaned with hot soapy water, rinsed, dried and buffed to a shine with a soft, heavy cloth. Always try this first, as it is the mildest cleaning procedure.

1. Use the mildest cleaning procedure first. Some brands of cleaners of the same type are harsher than others, read their directions. A scent or a propellant can make a difference in the product, read the ingredients. Try on a small area first.

Caution should be taken to keep the regulator free from any cleaning soaps or water.

2. To avoid marring the surface, always rub metal finishes in the direction of the stainless steel polish lines (grain). The cleaner will be more effective when used in the direction of the polish lines.
3. Use only clean sponges, soft cloths, paper towels, plastic non-metal soap pads for cleaning or scouring as recommended in this section. (Use only soap pads with soap still in them. An empty pad can scratch.)
4. Be sure to rinse all parts thoroughly and to wipe dry to avoid water marks.
5. After cleaning, use a stainless steel polish, applied to the drawer and handle surfaces.

SERVICE

For warranty service and to purchase replacement parts, please contact Customer Care. To arrange for service under warranty, please have the following information ready:

- Model number*
- Serial number*
- Part number*
- Date of installation
- A brief description of the problem

*these can be found on the serial label on the inside, left wall of the cylinder drawer

CONTACT US THROUGH OUR LOCAL WEBSITE

New Zealand www.fisherpaykel.co.nz/customercare

Australia www.fisherpaykel.com.au/customercare

CALL US TOLL-FREE, 24/7

New Zealand 0800 372 273

Australia 1300 650 590

WRITE TO US

New Zealand Fisher & Paykel Appliances Limited
PO Box 58732
Botany, Auckland 2163
fax: (09) 273 0656
email: customer.care@fp.co.nz

Australia Fisher & Paykel Customer Services Pty
PO Box 798,
Cleveland,
QLD 4163
fax: + 61 7 3826 9298
email: customer.care@fp.com.au

WARRANTY

2

You receive a 2 year Manufacturer's Warranty with this product. Fisher & Paykel Appliances will repair (or at its option replace) any part which is found to be defective within TWO YEARS from date of purchase, without cost to you for either parts or labour.

+13

You also receive an additional THIRTEEN YEAR parts only warranty on your Stainless steel grill cover, Burner box, Cooking grates, Grill racks (Excluding discoloration or surface corrosion). This additional 13 year warranty commences on the day following the expiry of the two year manufacturer's Warranty and excludes labour.

+3

You also receive an additional THREE YEAR parts only warranty on your Stainless steel grill burners, stainless steel side shelf elements, stainless steel grill cart elements and all Cast Alloy parts (Excluding discoloration or surface corrosion). This additional 3 year warranty commences on the day following the expiry of the two year manufacturer's Warranty and excludes labour.

Fisher & Paykel Appliances will repair (as to parts) or, at its option replace any part which is found to be defective within the additional warranty periods. You will be responsible for any labour costs, including applicable call-out or service fees and freight.

THIS WARRANTY DOES NOT COVER

A Service calls which are not related to any defect in the Product. The cost of a service call will be charged if the problem is not found to be a Product fault. For example:

1. Correcting the installation of the product.
2. Instructing you how to use the product.
3. Replacing house fuses or incorrect house wiring or plumbing.
4. Correcting fault(s) caused by the user.
5. Noise or vibration that is considered normal, e.g. drain/fan sounds, regeneration noises or user warning beeps.
6. Correcting damage caused by pests, e.g. rats, cockroaches etc.

B Defects caused by factors other than:

1. Normal domestic use or
2. Use in accordance with the Product's User Guide.

C Defects to the Product caused by accident, neglect, misuse or Act of God.

D The cost of repairs carried out by repairers other than Fisher & Paykel Authorised Repairers or the cost of correcting such unauthorised repairs.

E Normal recommended maintenance as set out in the Product's User Guide.

F Repairs when the product has been dismantled, repaired or serviced by other than a Fisher & Paykel Authorised Repairer.

G Pick-up and delivery.

H Transportation or travelling costs involved in the repair when the product is installed outside the Fisher & Paykel Authorised Repairers normal service area.

WARRANTY (continued)

To make a claim under any warranty,

call customer care 1300 650 590.

Or email aus.customercare@fisherpaykel.com.

Service under any warranty must be provided by an authorised Fisher & Paykel Appliances Service provider. Used other than in accordance with the products user guide and other than for normal domestic use may invalidate any warranty. This warranty is an extra benefit and does not affect your legal rights.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

To view full terms and conditions, visit www.fisherpaykel.com.au/DCS.

You must retain your original proof of purchase. Failure to produce proof of purchase when requested may, at Fisher & Paykel's discretion, invalidate your claim. The warrantor is: Fisher & Paykel Australia Pty Ltd, 16 Parramatta Road, Lidcombe, NSW 2141. Ph Customer Care: 1300 650 590 Email: aus.customercare@fisherpaykel.com.

www.fisherpaykel.co.nz
www.fisherpaykel.com.au



Copyright © Fisher & Paykel 2012. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.