

## WASH PROGRAM DATA

Wash program times and temperatures indicated are approximate. For information on which program to use for your load, refer to your user guide.

### DD60DTXI models

CYCLE	WASH PROGRAM (CYCLE TIME)							
	AUTO (108-149min)	HEAVY (169min)	MEDIUM (142min)	LIGHT (35min)	60 MIN (60min)	GLASSWARE (125min)	ECO* (263min)	RINSE (15min)
Pre wash	n/a	50°C	48°C	n/a	n/a	45°C	n/a	n/a
Main wash	48°C - 65°C	65°C	58°C	48°C	60°C	55°C	40°C	n/a
Post rinse	Yes	Yes	Yes	Yes	Yes	Yes	Yes	n/a
Final rinse	60°C	65°C	60°C	40°C	53°C	60°C	40°C	n/a
Drying phase	Yes	Yes	Yes	n/a	n/a	Yes	Yes	n/a

USAGE PER DRAWER	WASH PROGRAM							
	AUTO	HEAVY	MEDIUM	LIGHT	60 MIN	GLASSWARE	ECO*	RINSE
Water (L)	7.6-10.7	9.9	7.2	6.1	8.2	11.2	5.7	2.3
Energy (kWh)	0.53-0.73	0.90	0.67	0.30	0.60	0.62	0.30	n/a

### DD60STXI models

CYCLE	WASH PROGRAM (CYCLE TIME)							
	AUTO (143-184min)	HEAVY (202min)	MEDIUM (177min)	LIGHT (35min)	60 MIN (60min)	GLASSWARE (160min)	ECO* (267min)	RINSE (15min)
Pre wash	n/a	50°C	48°C	n/a	n/a	45°C	n/a	n/a
Main wash	48°C - 65°C	65°C	58°C	48°C	60°C	55°C	40°C	n/a
Post rinse	Yes	Yes	Yes	Yes	Yes	Yes	Yes	n/a
Final rinse	60°C	65°C	60°C	40°C	53°C	60°C	45°C	n/a
Drying phase	Yes	Yes	Yes	n/a	n/a	Yes	Yes	n/a

USAGE PER DRAWER	WASH PROGRAM							
	AUTO	HEAVY	MEDIUM	LIGHT	60 MIN	GLASSWARE	ECO*	RINSE
Water (L)	7.6-10.7	9.9	7.2	6.1	8.2	11.2	5.7	2.3
Energy (kWh)	0.53-0.73	0.90	0.67	0.30	0.60	0.62	0.34	n/a

\*Reference program for energy/water label in compliance with AS/NZS 2007 and AS/NZS 6400.

Wash times and energy consumption can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 20°C (New Zealand and Australia) incoming water.

# STANDARDS TEST

The DishDrawer™ Dishwashers are tested to AS/NZS 2007 and AS/NZS 6400 standards for both wash and dry performance, energy and water consumption using the parameters detailed below.

## Wash program

Eco

At the end of the program, open the drawer 50 mm to improve the dry performance.

## Detergent quantity (IEC type D)

PRE WASH: 2g per drawer - added directly to the drawer below the detergent dispenser

MAIN WASH: 21.75g per drawer - added to the powdered detergent dispenser

## Rinse aid setting

3

## Capacity

7 place settings per drawer

## Accessories

Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid and fold away cup racks are to be used for the test.


## Height setting of cup racks

Adjust the height to a position clear of other load items.

Note: Ensure the product is level and has the correct drain hose height. Refer to 'Installation Guide' for details.

## Recommended loading pattern

Top and bottom drawer

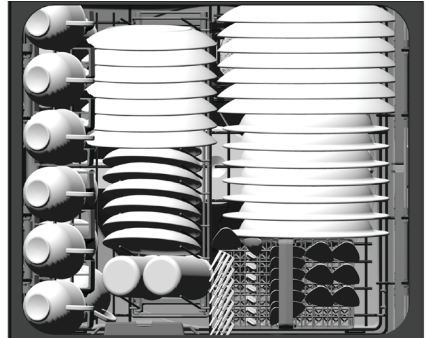

## Cutlery basket

