

SAFETY & WARNINGS

WARNING!

Cut Hazard
Failure to use caution could result in injury.
• Take care: some edges may be sharp.



- For products that are not front-mounted, installation must be carried out by a Fisher & Paykel trained and supported service technician.
- Ensure all packaging is removed and disposed of responsibly.
- Installation of this product requires basic mechanical skills.
- Ensure product is installed with the correct tools to avoid personal injury or damage to the appliance.
- Take care not to scratch the door with the supplied Hex key when tightening the screws.

COMPONENTS REQUIRED

Supplied



Handle (1)



Grub screw (2)



M5x25mm countersunk screw (2)



M5x25mm pan head screw (2)



Pin lock (2)



2mm hex key (1)

Not supplied



Powered driver



Crosshead driver



Tape measure



Level

FITTING HANDLE TO PANEL




①

Custom panel installations:
Mark the handle location on the panel. Ensure distance between holes is 432mm.



②

Custom panel installations:
Drill the holes using a 6mm drill bit. Counterbore from the rear.

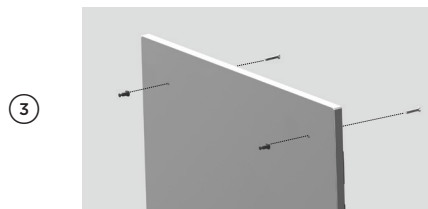

③

Align the pin locks to the front of the panel before inserting the supplied screws from the rear of the panel.

Custom and Dishwasher panels:
Countersunk screw
DishDrawer panels:
Pan head screw



④

Secure pin locks by tightening the screws using a crosshead driver. Do not overtighten.



⑤

Loosen the grub screws and fit the handle onto the pin locks.



⑥

Tighten the grub screws using the supplied hex key.