


FISHER & PAYKEL

DATA SHEET 300mm Front Control Ceramic Cooktop

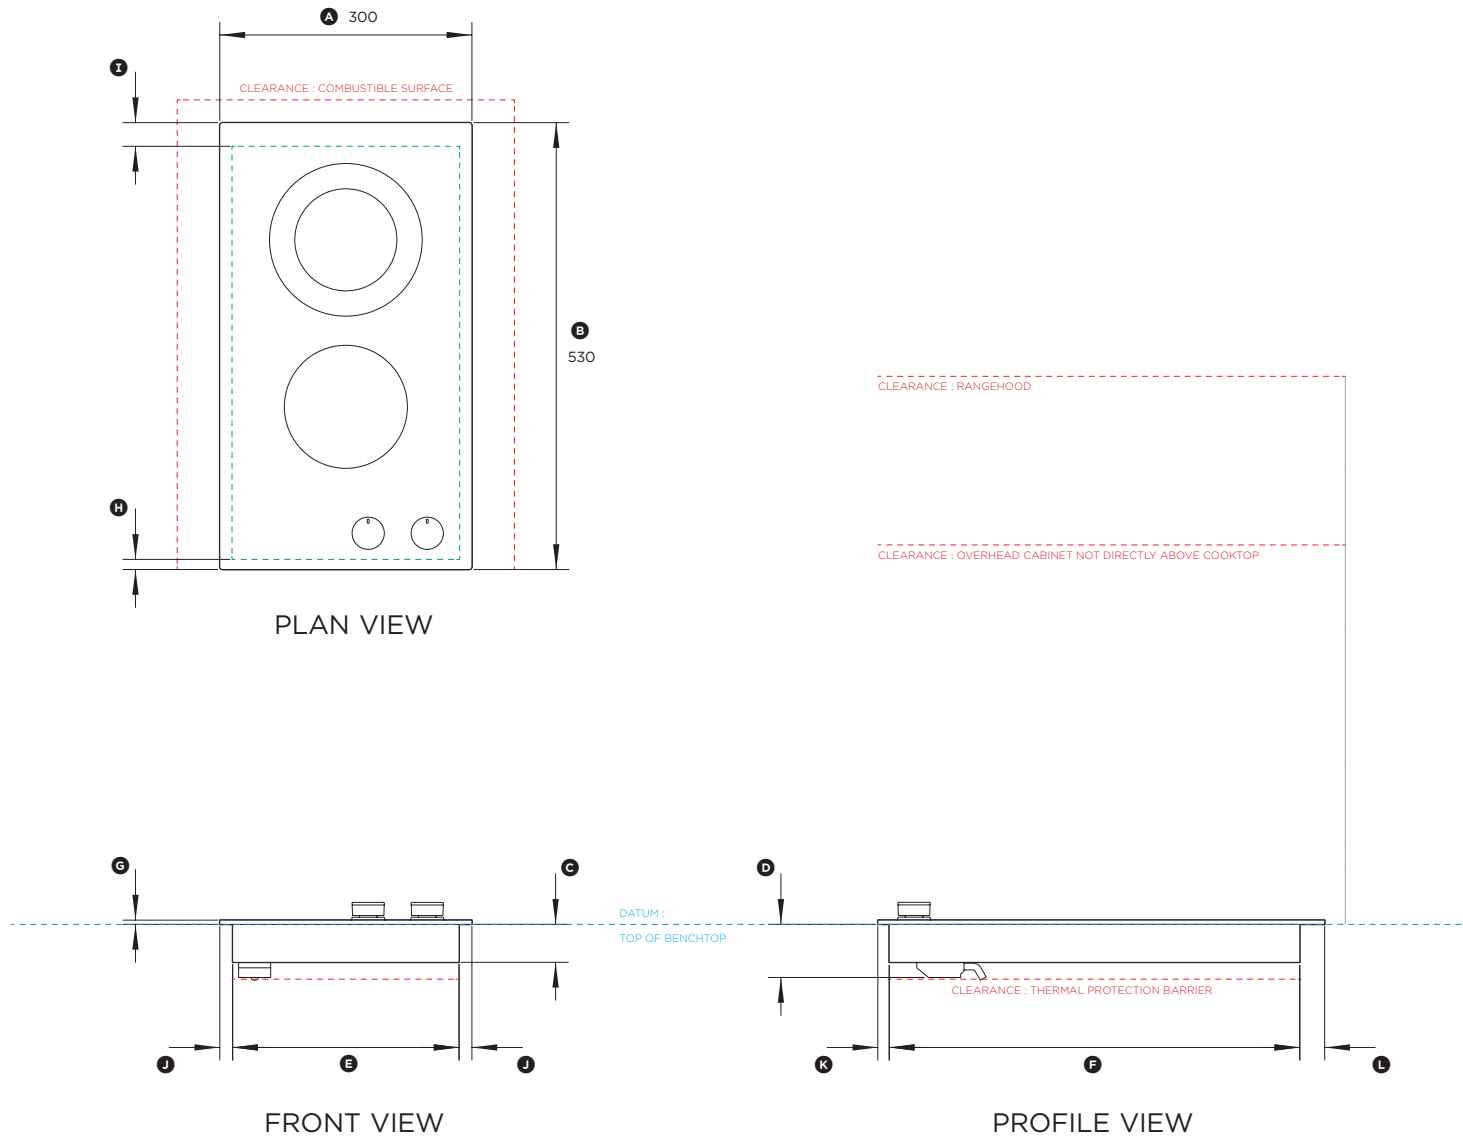

Model no:

CG302CBX2

Dimensions	mm
Ⓐ Overall width of cooktop	300
Ⓑ Overall depth of cooktop	530
Ⓒ Height of chassis (below top of benchtop)	46
Ⓓ Height of chassis including terminal block (below top of benchtop)	63
Ⓔ Width of chassis	269
Ⓕ Depth of chassis	487
Ⓖ Height from counter datum to top of cooktop surface	5
Ⓗ Distance from front of cooktop to cutout	12
Ⓘ Distance from rear of cooktop to cutout	28
Ⓚ Distance from side of cooktop to chassis	15
Ⓛ Distance from front of cooktop to chassis	13
Ⓚ Distance from rear of cooktop to chassis	30

Minimum Clearances	mm
Minimum clearance from left edge of cutout to nearest combustible surface	65
Minimum clearance from right edge of cutout to nearest combustible surface	65
Minimum clearance from rear edge of cutout to nearest combustible surface	55
Minimum clearance from glass surface	650
Minimum clearance from benchtop to overhead cabinet not directly above cooktop	450
Minimum clearance below top of benchtop to thermal protection barrier	65

Cutout Dimensions	mm
Overall width of cutout*	270
Overall depth of cutout**	490

* Note cutout position is centred to the cooktop width.

** Note cutout is offset 8mm towards the front of the cooktop

DATE: **01.06.2017**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

