

---

# 60CM COMBI-STEAM FIRST USE

---

Get to know your appliance	3
Set up the oven	7
Select a cooking method or function	8
Use Steam methods and functions	10
Fill the water tank	11
Set the timer	12
Set Delayed cook or Auto off	13
Use the temperature sensor	14
Use Multi shelf	15
Connect to Wi-Fi	16
Enable Remote mode	17
Turn Sabbath mode on	18
Enable Voice to open	19
Cooking methods and functions	20
Clean and maintain your oven	21

**FISHER & PAYKEL**

NZ AU UK IE SG

## **60CM COMBI-STEAM OVEN**

---

### **COMBI-STEAM**

OS60SAMHUNB5, OS60SAMHUNG5, OS60SAMHUB5,  
OS60SAMHUG5, OS60SACHUDX5

### **COMPACT COMBI-STEAM**

 
OS60NAMHUNB5, OS60NAMHUNG5, OS60NAMHUB5,  
OS60NAMHUG5, OS60NACHUDX5

## GET TO KNOW YOUR APPLIANCE




### How to get the best results from your oven

- Download the app to use remote mode and get updates.
- Set up and condition the oven before you use it.
- Run regular CLEAN cycles.
- Register your product to get streamlined service support.

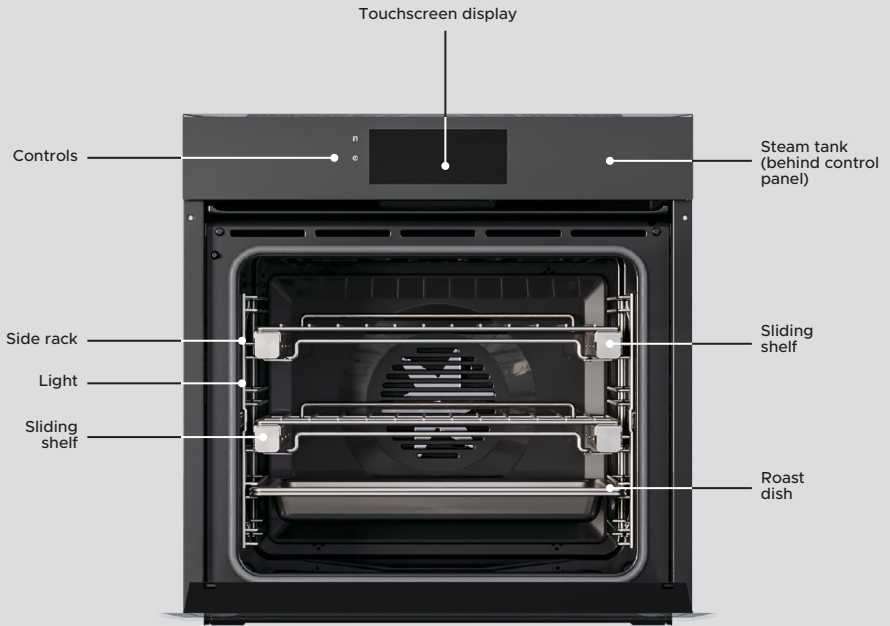

All imagery shown in this guide is representative. Your product may differ.

# GET TO KNOW YOUR APPLIANCE

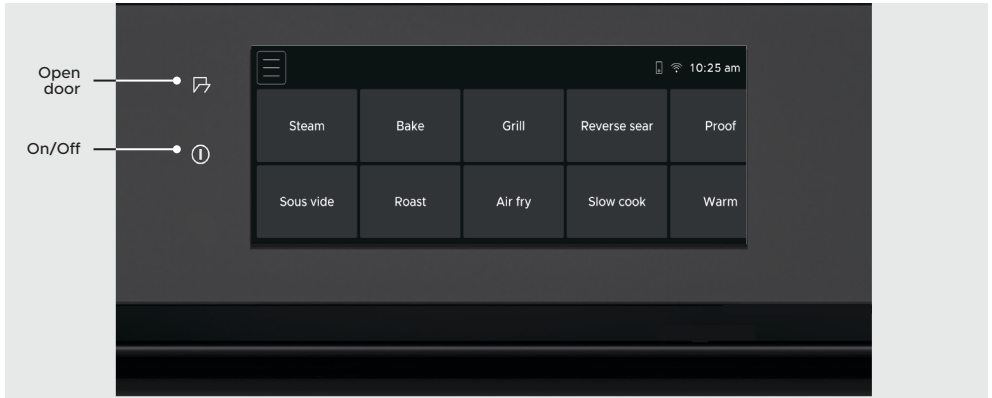 


## HOME SCREEN

Open Door button*	Press and hold to open or close the oven door.
Power button	Press and hold to turn the display on when oven is in standby. The oven will go into standby after a period of inactivity, and the display and clock will turn off. If Remote Mode is enabled, the power button will pulse when oven is in standby.
Menu	Press to access additional features and settings.
Cooking methods	Choose from a range of optimised cooking methods or traditional functions.

\*handleless models only
 
# GET TO KNOW YOUR APPLIANCE

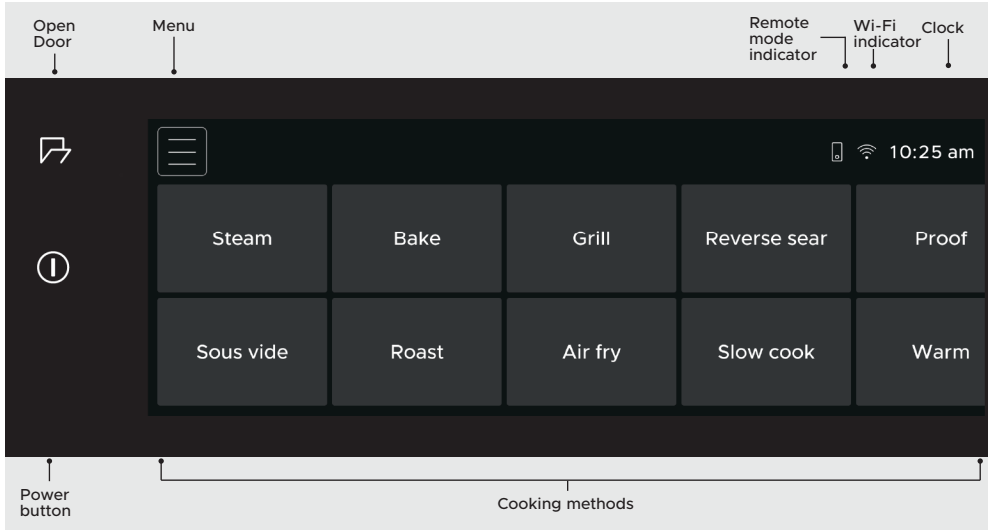


## HOME SCREEN







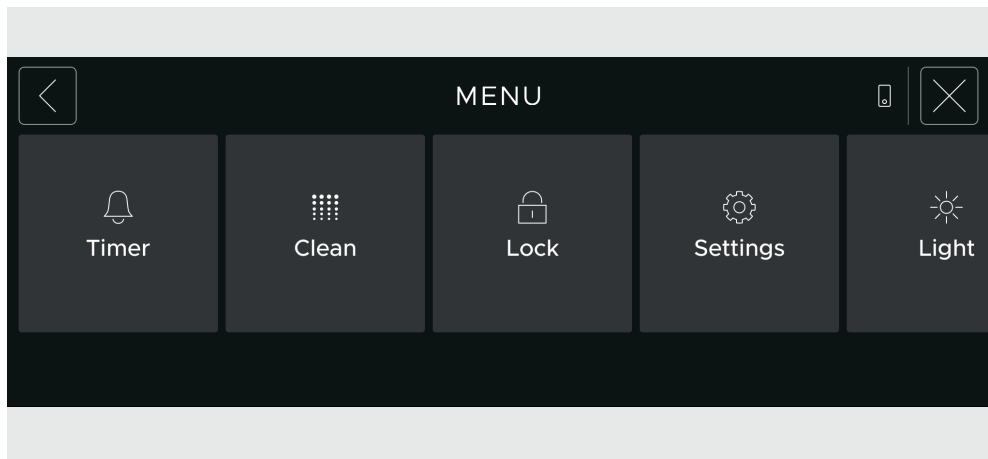 


Control dial*	<ul style="list-style-type: none"> <li>• Turn the dial to scroll.</li> <li>• Press to select.</li> <li>• Press and hold to go back.</li> </ul>
Open Door button**	Press and hold to open or close the oven door.
Power button	<p>Press and hold to turn the display on when oven is in standby. The oven will go into standby after a period of inactivity, and the display and clock will turn off.</p> <p>If Remote Mode is enabled, the power button will pulse when oven is in standby.</p>
Menu	Press to access additional features and settings.
Cooking methods	Choose from a range of optimised cooking methods or traditional functions.

\*Some models only

\*\*Handleless models only



## MENU

	<b>TIMER</b>	Set a timer to keep track of cooking times or as a general timer. The timer does not turn the oven off.
	<b>CLEAN</b>	Set a <b>CLEAN</b> cycle to clean the inside of the oven. Refer to Care and Maintenance guide for full instructions.
	<b>LOCK</b>	Lock the controls to prevent accidental use. When locked, the controls will be unresponsive and the appliance will not turn on. Press and hold the screen anywhere to unlock.
	<b>SETTINGS</b>	Adjust the settings to suit your preferences or set up a Wi-Fi connection.
	<b>LIGHT</b>	Press <b>LIGHT</b> to turn the oven lights on or off.
	<b>DRY</b>	Set a <b>DRY</b> cycle to dry the inside of the oven after cooking with steam.
	<b>REMOTE</b>	Connect appliance to your mobile device to operate it remotely via the app.
	<b>BACK</b>	Go back one level.
	<b>EXIT</b>	Press to return to the home screen.

 
## SET UP THE OVEN

Before using your oven, check there is no plastic or cardboard left inside it, then set the clock. We recommend conditioning your oven for 1 hour before initial use to remove manufacturing residue. A small amount of smoke may be present. Ensure the kitchen is well ventilated.




### Remove cable ties

Remove any packaging and the cable ties that are securing the shelves and trays.

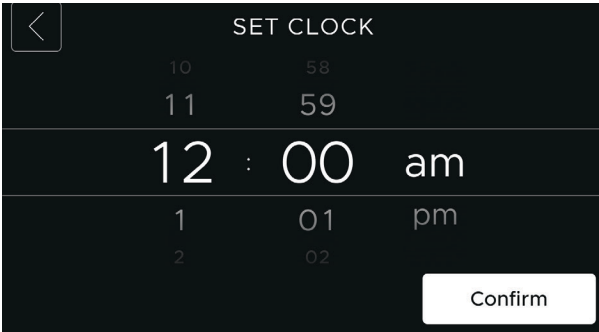

### Set the clock

 Swipe up or down to set the time, then press confirm.

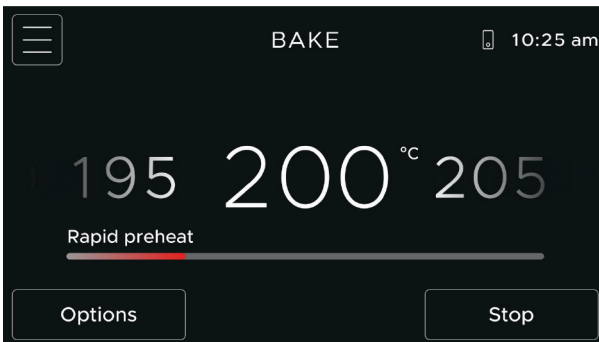

### Condition the oven

Navigate to the TRADITIONAL FUNCTIONS menu. Select BAKE, then set the oven at 200°C for 30 minutes. Next, set to GRILL for 5 minutes, then FAN FORCED for 20 minutes.

 
Wipe clean once oven has cooled.

## SELECT A COOKING METHOD OR FUNCTION

Select a cooking method and follow on-screen prompts for an optimised cooking environment, or choose from a range of traditional cooking functions.




1. Position the shelves at the desired height.

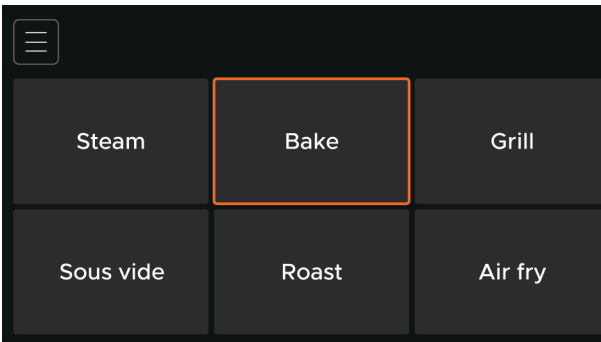


2. Select a cooking method or scroll to select **TRADITIONAL FUNCTIONS**.

 For steam-based selections, you'll be prompted to fill the water tank.

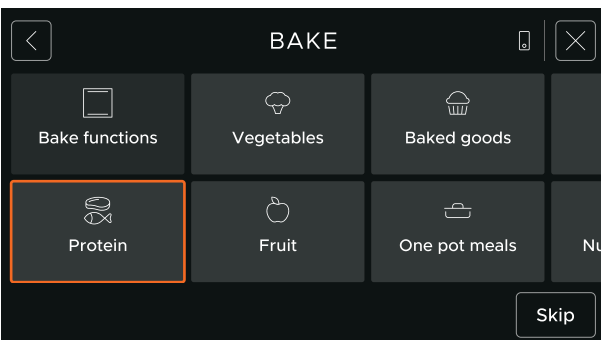


3. Select a food category or function as required.

## SELECT A COOKING METHOD OR FUNCTION

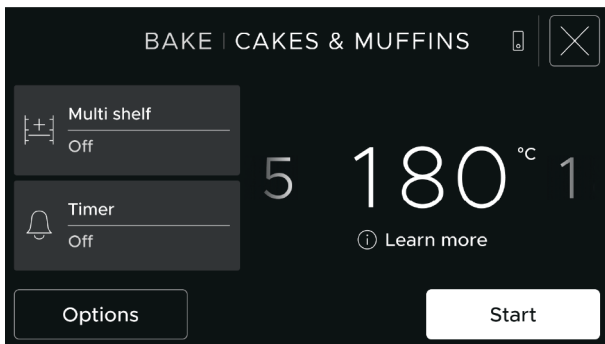 


4. Adjust the temperature if needed and add any additional timers or cooking options, then press **START**.

 Press **STOP** at any point during cooking to turn the oven off.

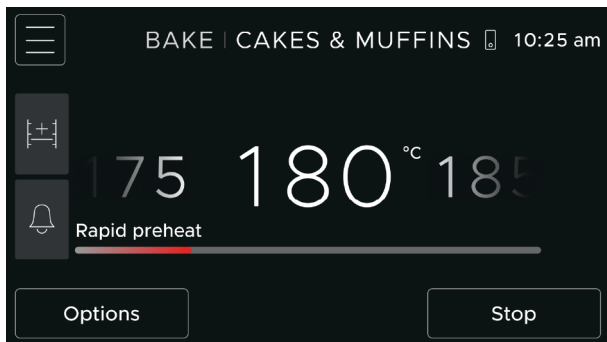

### Methods with preheat

 A progress bar will show while the oven is heating. To prevent burning, place food in oven once oven reaches temperature.

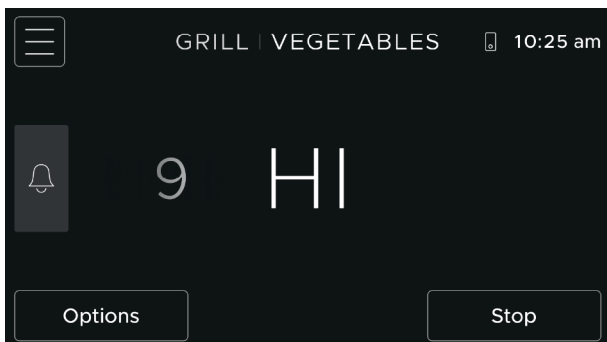

### Methods without preheat

If there is no progress bar, place food in the oven when you start the cook.

 
Press **STOP** at any point to turn the oven off.

## USE STEAM METHODS AND FUNCTIONS




Use STEAM cooking methods and functions to add moisture to the cooking environment and retain nutrients, colour and texture.


Fill the tank with fresh water first. See 'Fill the water tank'.

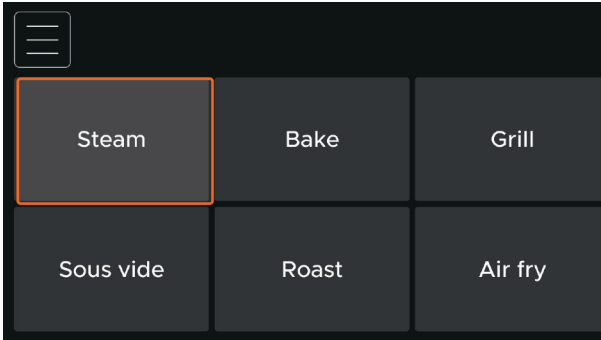

 1. Select a steam method or steam function as desired.

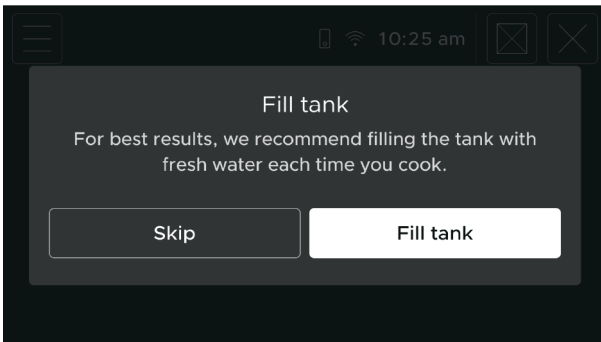

 2. Fill the water tank before starting a steam-based cook or when prompted.

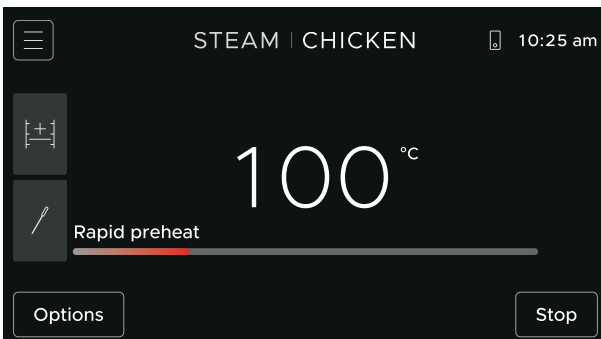

3. Adjust the temperature if needed and add any additional timers or cooking options, then press START.

Press stop at any point during cooking to turn the oven off.

## FILL THE WATER TANK



Before using any steam methods or functions, you'll need to fill the water tank. For best results, we recommend filling the tank with fresh water before you cook.



1. Select 'Fill Tank' to move the control panel. Pull the water tank out of its compartment.



2. Fill with fresh water, taking care not to fill past the MAX FILL line.

 


3. Refit the tank in the compartment and close control panel.


## SET THE TIMER




Use the timer to keep track of cooking times or as a general timer. The timer does not turn the oven off.

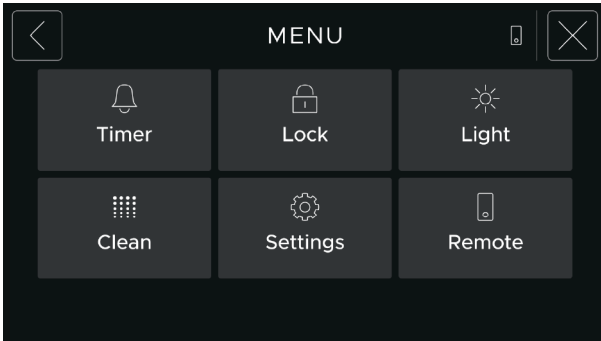

 1. Select **TIMER** from the menu or from the cooking screen.

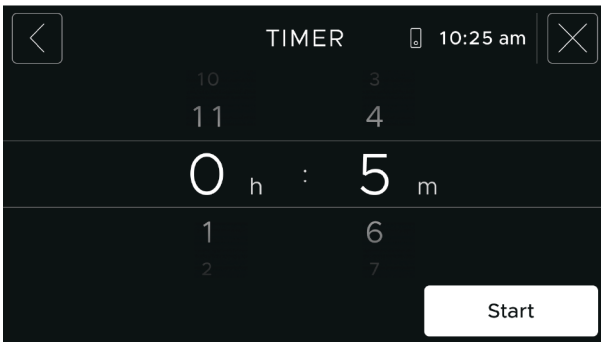

 2. Scroll to set the desired duration, then press **CONFIRM** to start the countdown.

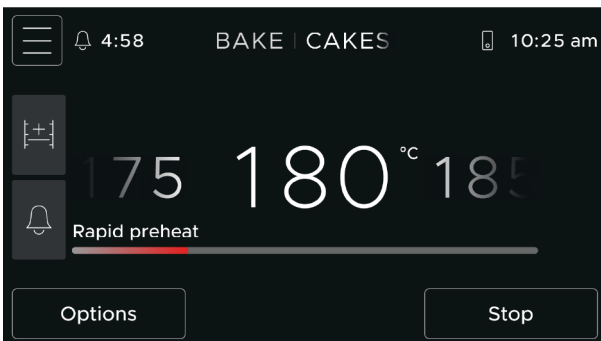

3. The remaining time will show on the screen. Press it to adjust or cancel the timer.

When the timer is complete, an alert will sound and a message will show on the screen. Press **DONE** to dismiss the message.

## SET DELAYED COOK OR AUTO OFF



You can set DELAYED COOK or AUTO OFF when using most cooking methods or functions. Use DELAYED COOK to set the oven to turn on later, cook for a set duration and turn off at a set time. Use AUTO OFF to set the oven to turn off after a set duration.



Press **OPTIONS** on the cooking screen, then select **DELAYED COOK** or **AUTO OFF**.

 


### Delayed cook

Set a cook duration and a cooking end time, and press **START**.

Cover food or place it on a lower shelf in oven to prevent burning as the oven preheats.

Not recommended with **GRILL**, **FAN GRILL**, or **DEFROST**.

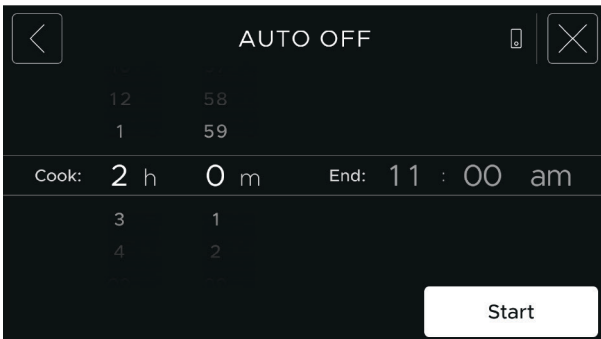

### Auto off

Set a cook duration, and press **START**.

 
The oven will turn off after the set duration.

## USE THE TEMPERATURE SENSOR




Use the wired temperature sensor or a compatible wireless sensor to monitor your cook to achieve your desired doneness.

Insert the sensor into the thickest part of the protein, avoiding bone, and ensure the tip doesn't protrude or touch cookware.

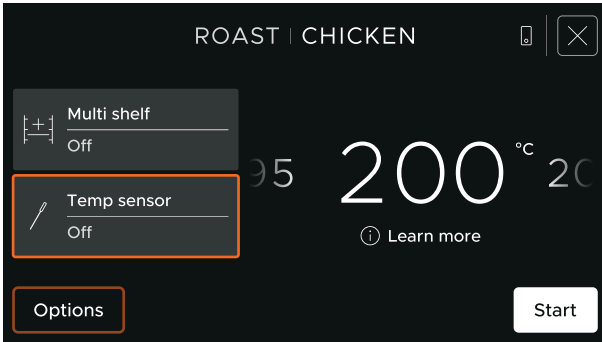


 1. Select a cooking method or function and press **OPTIONS** or **TEMP SENSOR**.

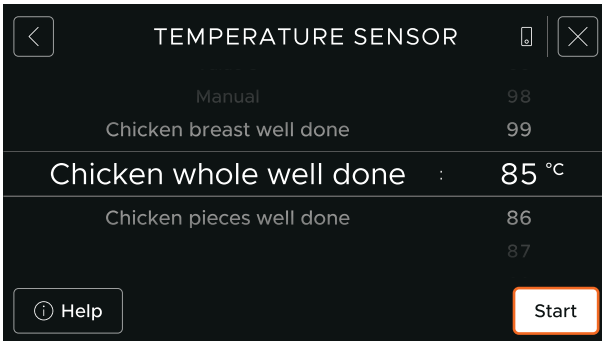

2. Select the relevant protein and desired doneness or removal temperature, then press **START**.

 Allow your oven to preheat if necessary.

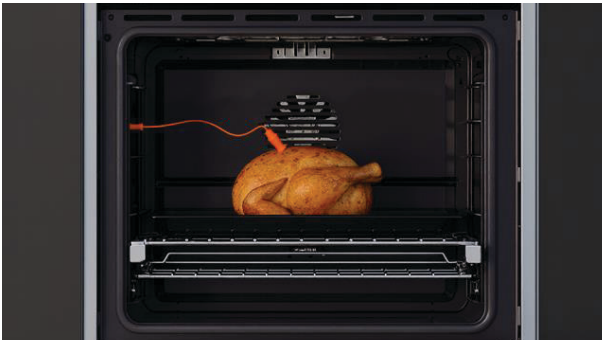


3. Place food in the oven. If using the wired sensor, plug it into the socket on the inside-left of the oven until it clicks into place.

Rest meat before serving to allow the internal temperature to rise.


## USE MULTI SHELF



 
Use the MULTI SHELF option so heat distributes evenly when you cook food on more than one shelf at a time. You can turn it on or off before and during cooking.

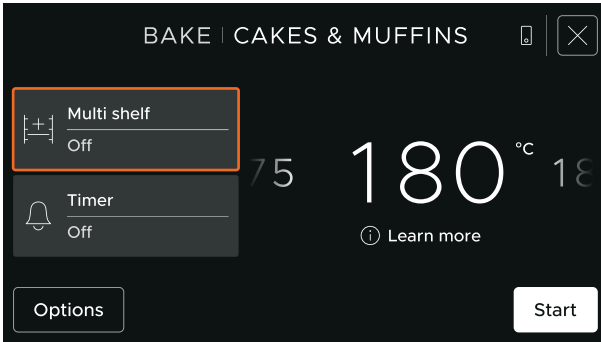

 1. Select a cooking method or function, and press MULTI SHELF.

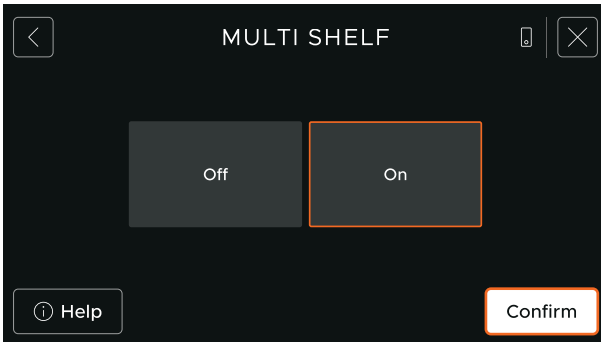

 2. Press ON, then CONFIRM.

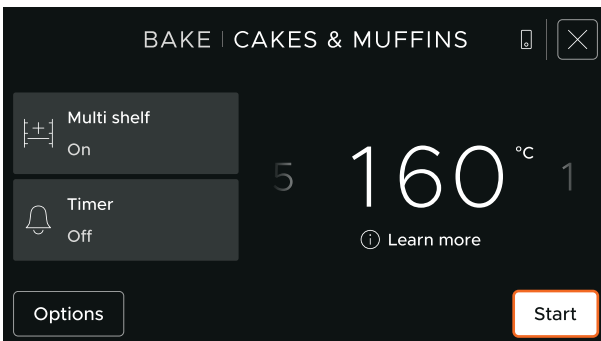


3. Press START, and allow your oven to preheat if necessary before putting the food in. Press MULTI SHELF again to turn it off.

## CONNECT TO WI-FI



 
Connect your appliance to your home wireless network to receive updates and connect to the app.

It may take up to 10 minutes to connect your appliance.

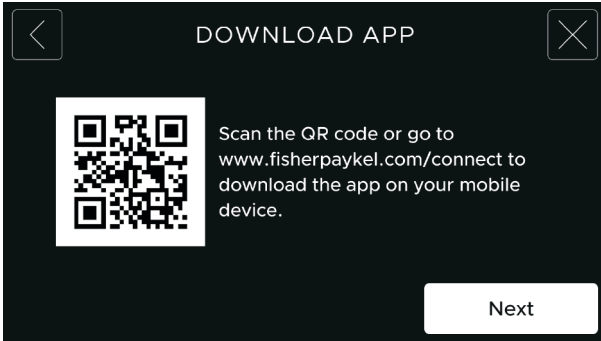


On your mobile device

 Scan the QR code to download the app, then create an account and add your appliance.

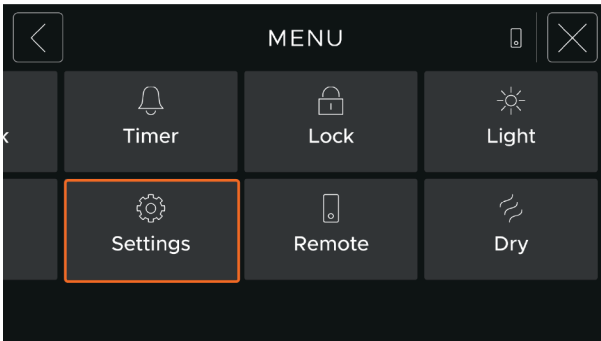

On your appliance

 1. Ensure your home Wi-Fi network is on, then go to MENU and select SETTINGS.

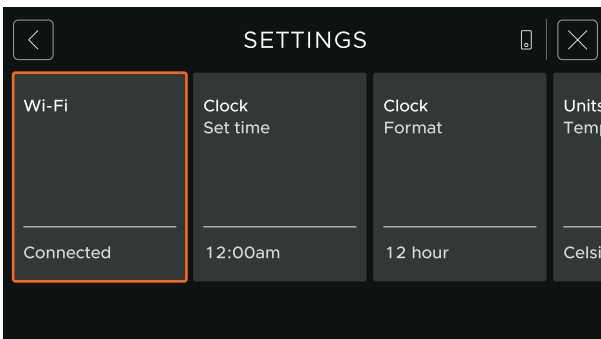


2. Select WI-FI and follow the onscreen instructions to connect.


## ENABLE REMOTE MODE



 
Enable REMOTE MODE to operate your appliance remotely via the app.

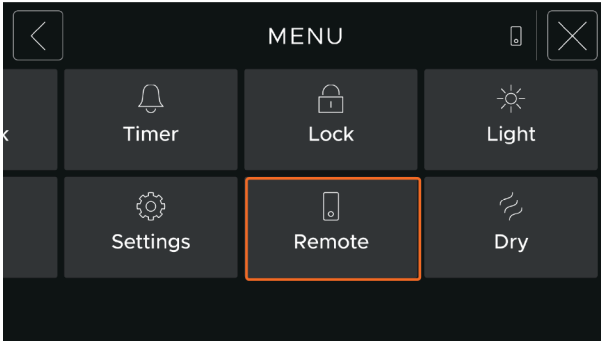

 1. Go to MENU, and select REMOTE.

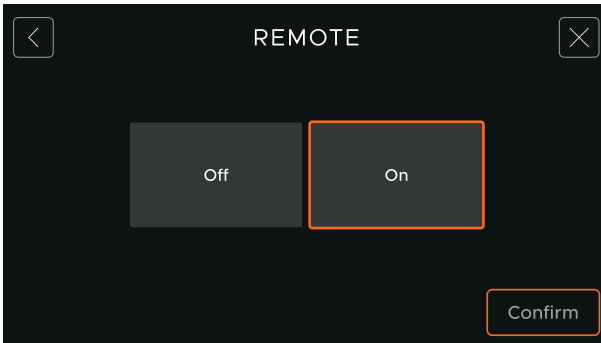

 2. Select ON, then press CONFIRM.

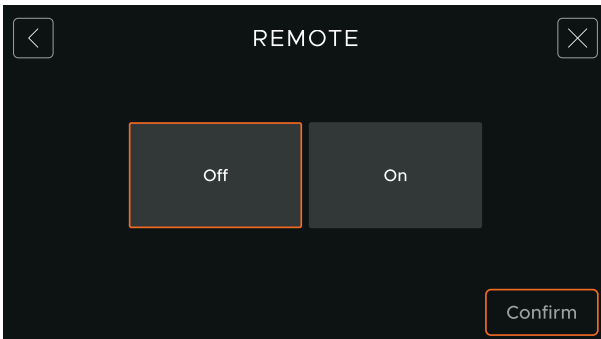

### Disable Remote Mode

Go to MENU, and select REMOTE. Select OFF, then press CONFIRM.

 
## TURN SABBATH MODE ON

For the Sabbath observant. Sets your oven to heat continuously for as long as needed. The display will be unresponsive and no tones or alerts will sound. Your oven will stay in Sabbath mode until cancelled. Use the supplied door-opening tool to open handleless models when Sabbath Mode is on.


**LOW**  
Keep hot food warm

**MODERATE**  
Reheat cold food


**HIGH**  
Cook raw food

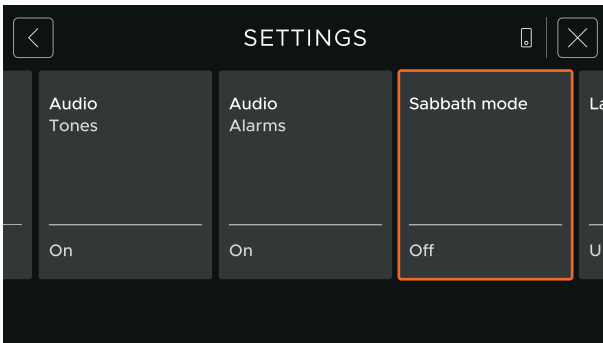

 1. Go to **SETTINGS** and select **SABBATH MODE**.

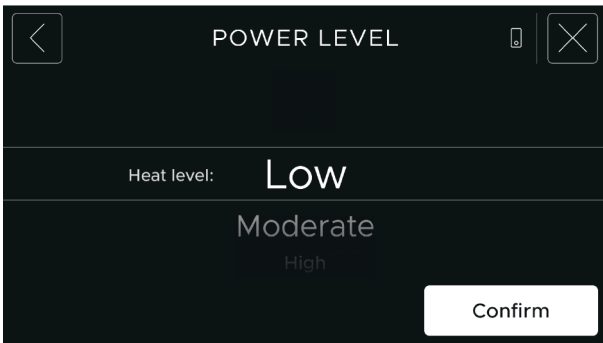

 2. Set a heat level and press **CONFIRM**. Follow the onscreen instructions to set the oven light on or off and to set a **SABBATH MODE** duration.

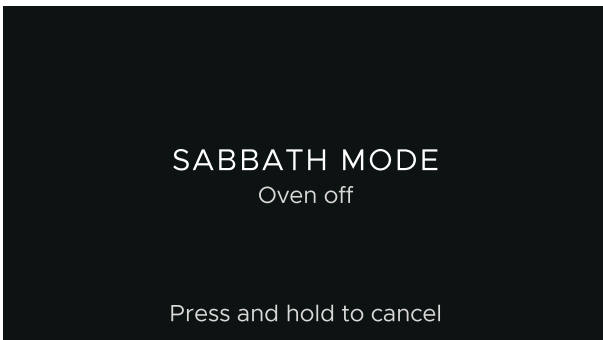


3. The oven will stay in **SABBATH MODE** until the set duration has passed or until cancelled. Press and hold the screen to cancel **SABBATH MODE**.


## ENABLE VOICE TO OPEN

 Enable 'Voice to open' on handleless models to open the oven door. Your appliance must be connected to Wi-Fi and have Remote Mode enabled. Voice control also requires a smart speaker or your mobile device to control the oven door.

Only use voice control when you can see the oven and it is safe to open the door.

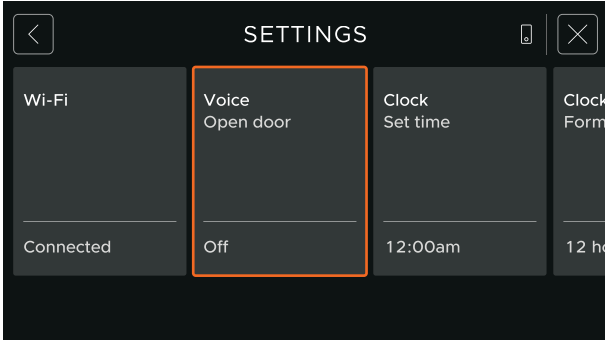

 1. Go to **SETTINGS** and select **VOICE OPEN DOOR**.

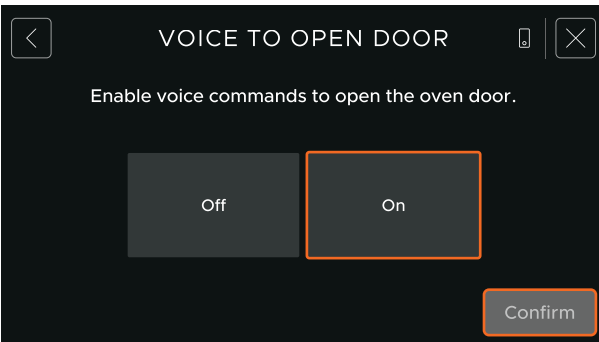

2. Select **ON**, then **CONFIRM**.  
Follow the instructions on the screen and in the app to complete the setup.

Method-led cooking lets you select what you want to cook and how you want to cook it. Your oven will then recommend the optimal heat type and temperature for perfect cooking results. Explore the full range of methods and functions available.

## Methods

Cooking methods support you to achieve your desired result across a range of food categories. Each method may be supported by one or more functions.

Air fry	Regenerate
Bake	Reverse sear
Defrost	Roast
Grill	Slow cook
Proof	Sous vide
Steam	Warm

## Functions

Functions are specific cooking environments. They deliver heat in a fixed way and can involve either a single step or a sequence of steps.

Air fry	Crisp regenerate
Bake	Eco slow cook
Classic bake	Fan bake
Classic fan	Fan grill
Fan forced	Grill
Fan forced + high steam	Roast
Fan forced + low steam	Slow cook
Fan forced + medium steam	Steam regenerate
Sous vide	Vent bake
Steam	

## CLEAN AND MAINTAIN YOUR OVEN

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

### Clean door glass after each use

Allow oven to cool, then wipe the door glass clean after each use to prevent stains becoming baked on.

To remove the glass for cleaning, see 'Care and Maintenance Guide'.

### Clean inside of the oven after each use

Allow oven to cool, then clean up any easy-to-reach spills, food or grease stains to prevent them becoming baked on.

### Wipe up excess water

Allow oven to cool, then wipe up any water remaining after a steam cook.

### Run regular steam clean cycles

Run a STEAM CLEAN cycle before wiping out the oven to help lift stubborn spills.

### Run regular DRY cycles

Set a DRY cycle to dry the inside of the oven after cooking with steam.

### Descale to remove mineral buildup

Run a steam descale cycle when prompted to clean mineral buildup from your oven and maintain cooking performance.



### Care, maintenance and troubleshooting information

Scan the QR code or visit [fisherpaykel.com](http://fisherpaykel.com) and search for your model code.

OS60SAMHUNB5, OS60SAMHUNG5, OS60SAMHUB5, OS60SAMHUG5,  
OS60SACHUDX5, OS60NAMHUNB5, OS60NAMHUNG5, OS60NAMHUB5,  
OS60NAMHUG5 & OS60NACHUDX5





