

User guide

Multifunction pyrolytic oven

OB90S9MEPX1 models

CN

Introduction	2
Safety and warnings	3
The control panel	6
Setting the clock and first use	7
Using your oven	8
Oven functions	9
Using the rotisserie	10
Using the timer	12
Automatic cooking	13
Baking chart	15
User preference settings	16
Sabbath setting	18
Care and cleaning	20
Using the Self Clean function	30
Troubleshooting	33
Alert codes	36
Warranty and service	38

Important!

SAVE THESE INSTRUCTIONS

The models shown in this user guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please visit our local website listed on the back cover or contact your local Fisher & Paykel dealer.


2 Introduction

Congratulations on your new purchase. Your Fisher & Paykel oven has a number of features to make cooking a great experience for you:

- a choice of eight oven functions, including Rotisserie
- a convenient, no-mess, pyrolytic Self Clean function – see ‘Using the Self Clean function’
- intuitive electronic controls and displays
- illuminated halos around the dials for visual feedback
- preference settings – see ‘User preference settings’ and ‘Sabbath setting’.

Before you start

- Make sure the installer has completed the ‘Final checklist’ in the Installation instructions.
- Read this guide, taking special note of the ‘Safety and warnings’ section.
- Remove all the packaging and check that you have all the accessories listed below.
- Make sure you follow the instructions under ‘Setting the clock and first use’ before using your oven for cooking or baking.

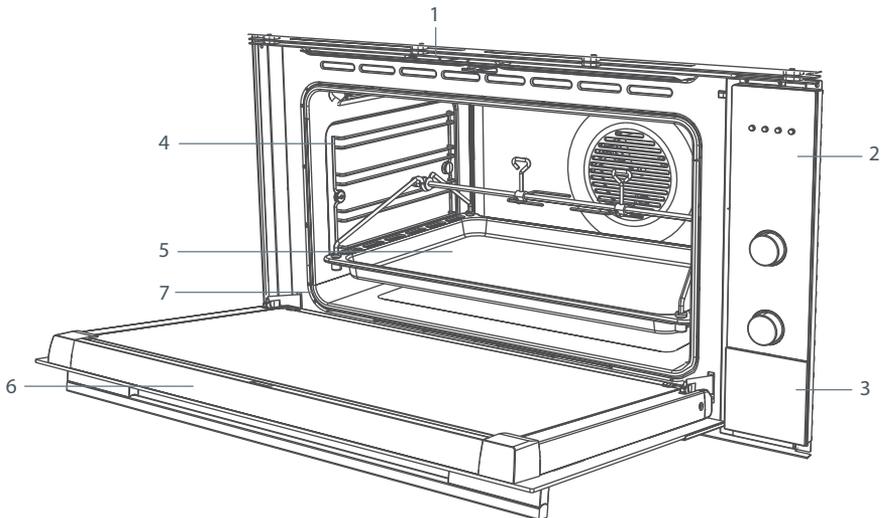

- 1 Oven vent louvres
- 2 Control panel
- 3 Stainless steel strip
- 4 Side racks
- 5 Grill tray and rotisserie
- 6 Oven door and handle
- 7 Oven seal

Not illustrated:

- Baking tray
- Step-down oven shelf
- Oven shelf
- Grill rack

Operation

Your oven has been carefully designed to operate safely during normal cooking procedures. Please keep the following safety instructions in mind when you are using it:

WARNING!



Electrical Shock Hazard

Disconnect the oven from the power supply before replacing the oven lamp. Failure to follow this advice may result in death or electrical shock.

WARNING!



Fire Hazard

Follow the instructions on starting a Self Clean cycle carefully. Items made from combustible materials (for example: wood, fabric, plastic) may catch fire if left in the oven during a Self Clean cycle.

Do not place aluminium foil, dishes, trays, water or ice on the oven floor during cooking, as doing so will irreversibly damage the enamel; lining the oven with aluminium foil may even cause fire.

Never use your appliance for warming or heating the room. Persons could be burned or injured or a fire could start.

Storage in or on appliance: flammable materials should not be stored in an oven or near its surface.

Failure to follow this advice may result in overheating, burning, and injury.

WARNING!



Hot Surface Hazard

Accessible parts may become hot when in use.

To avoid burns and scalds, keep children away.

Use oven mitts or other protection when handling hot surfaces such as oven shelves or dishes.

Use care when opening the oven door. Let hot air or steam escape before removing or replacing food.

Do not touch heating elements or interior surfaces of the oven. Heating elements may be hot even though they are dark in colour. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements or interior surfaces of the oven until they have had sufficient time to cool. Other surfaces of the appliance may become hot enough to cause burns - among these surfaces are the oven vent, the surface near the oven vent, and the oven door.

Failure to follow this advice could result in burns and scalds.

WARNING!



Cut Hazard

Take care - some edges are sharp.

Failure to use caution could result in injury or cuts.

Important safety instructions


To reduce the risk of fire, electrical shock, injury to persons, or damage when using the oven, follow the important safety instructions listed below:

- *Read all the instructions before using the oven. Use the oven only for its intended purpose as described in these instructions.*
- *Proper installation: be sure your appliance is properly installed and earthed by a qualified technician.*
- *Isolating switch: make sure this oven is connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.*
- *Household appliances are not intended to be played with by children.*
- *Do not leave children alone. Children should not be left alone or unattended in the area where the appliance is in use. They should never be allowed to sit or stand on any part of the appliance.*
- *Children or persons with a disability which limits their ability to use the appliance, should have a responsible person to instruct them in its use. The instructor should be satisfied that they can use the appliance without danger to themselves or their surroundings.*
- *Do not place heavy objects on the oven door.*
- *Wear proper apparel. Do not wear loose fitting or hanging garments when using the appliance. They could ignite or melt if they touch an element or hot surface and you could be burned.*
- *User servicing: do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.*
- *Do not use water on grease fires. Smother the fire or flame or use a dry chemical or foam type extinguisher.*
- *Use only dry oven mitts or potholders. Moist or damp potholders on hot surfaces could result in burns from steam. Do not let potholders touch hot areas or heating elements. Do not use a towel or a bulky cloth for a potholder. It could catch fire.*
- *Do not heat unopened food containers. They can build up pressure that may cause the container to burst and result in injury.*
- *Safe food handling: leave food in the oven for as short a time as possible before and after cooking. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warm weather.*
- *Always keep oven vents unobstructed.*
- *Do not operate your appliance by means of an external timer or separate remote-control system.*

Important safety instructions

- *Caution. Hot air can blow from the vent at the top of the oven as part of the oven's cooling system.*
- *Placement of oven shelves: always position shelves in the desired location while the oven is cool (before preheating). If a shelf must be removed while the oven is hot, do not let the oven mitts or potholder contact hot heating elements in the oven or the base of the oven.*
- *Do not clean the oven seal or use any oven-cleaning products on it. It is essential for a good seal, which ensures that the oven operates efficiently. Care should be taken not to rub, damage or move it.*
- *Do not use oven cleaners, harsh/abrasive cleaning agents, waxes, or polishes. No commercial oven cleaner, oven liner, or protective coating of any kind should be used in or around any part of the oven. Do not use harsh/abrasive cleaners, scourers or sharp metal scrapers to clean the oven door glass since they scratch the surface, which may result in the glass shattering.*
- *Clean only the parts listed in this manual.*
- *Do not use a steam cleaner to clean any part of the oven.*
- *Before starting a Self Clean cycle, remove oven shelves, side racks, and all other cookware/utensils, and wipe up large food spills or grease deposits.*
- *Before starting a Self Clean cycle, make sure you move any pet birds to another, closed and well-ventilated room. Some pet birds are extremely sensitive to the fumes given off during a Self Clean cycle, and may die if left in the same room as the oven during such a cycle.*
- *During a Self Clean cycle, the oven reaches higher temperatures than it does for cooking. Under such conditions, the surfaces may get hotter than usual and children should be kept away.*
- *Do not store things children might want above the oven. Children could be burned or injured while climbing on the oven to retrieve items.*
- *Do not install or operate the appliance if it is damaged or not working properly. If you receive a damaged product, contact your dealer or installer immediately.*
- *Use only bakeware approved for oven use. Follow the bakeware manufacturer's instructions.*

6 The control panel

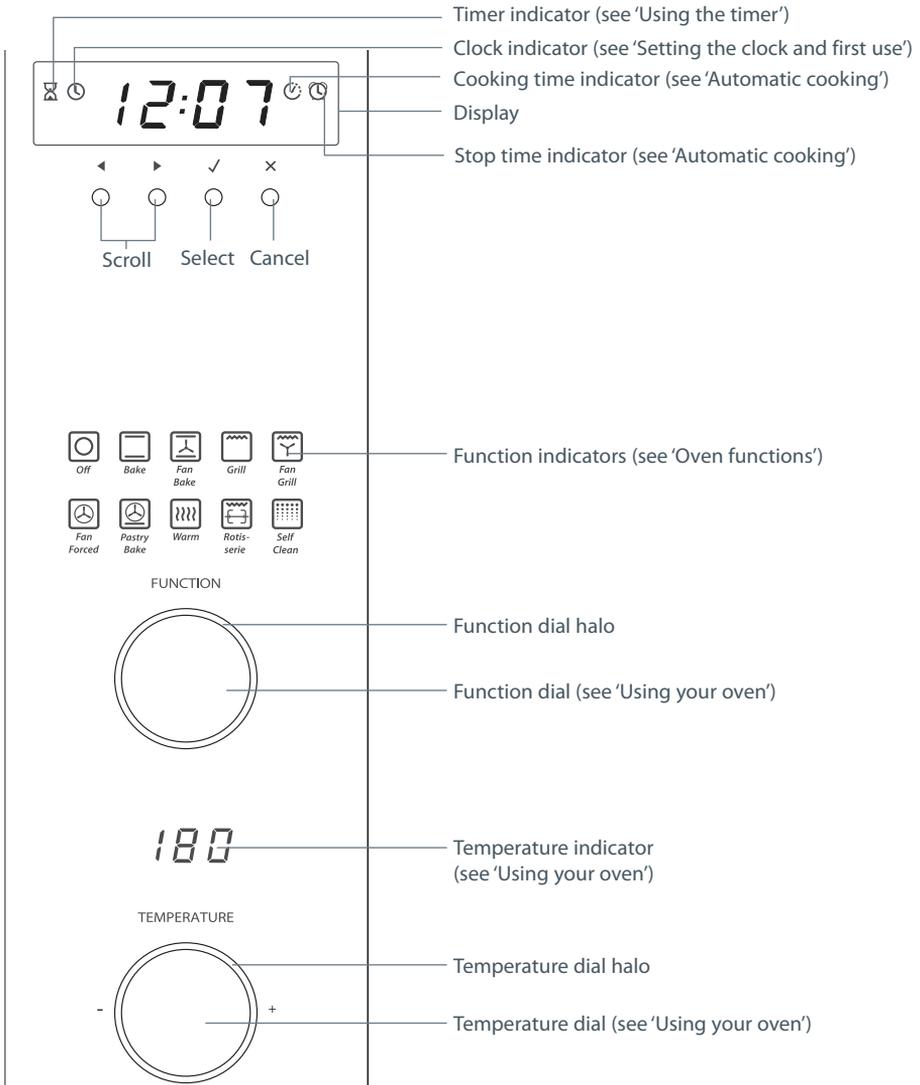

Locking the control panel

You can lock the control panel to prevent unintended use (eg children playing with the oven). Doing so will disable the dials and all the buttons.

To lock the control panel

- 1 Make sure the oven is not in use (the function dial is turned to **Off** ) and neither automatic cooking nor the timer is set (no indicator is lit in the display).
- 2 Press and hold the select  button until you hear a beep and --- appears in the temperature indicator.

To unlock the control panel

Press and hold the select  or cancel  button until you hear a beep and the temperature indicator becomes blank.

Setting the clock

You will need to set the clock to make full use of your oven.




- 1 Ensure the power supply to the oven is on.




- 2 Select the clock ⌚ by pressing the right scroll ► button twice.
 - The clock ⌚ indicator will appear and the colon will flash.



- 3 Press the select ✓ button to confirm.
 - The display will flash to indicate the clock is ready to be set.

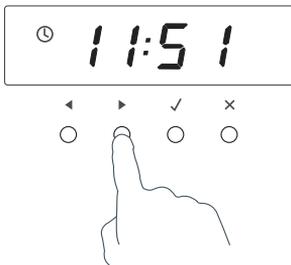

- 4 Set the time by pressing the scroll ◀ ► buttons. Holding the buttons down will speed up the scrolling.

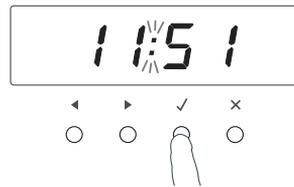

- 5 Press the select ✓ button to confirm.
 - The clock ⌚ indicator will soon disappear but the clock is now set.

First use: conditioning the oven


It is important to condition your oven before using it for cooking and baking. Conditioning will burn off any manufacturing residues and ensure that you get the best results right from the start.

- 1 Make sure you have set the clock.
- 2 Slide in the shelves and the grill tray. Position them as shown.
- 3 Heat the oven for:


30 minutes at 200 °C using **Bake**  then

15 minutes at 200 °C using **Fan Grill** 


- See 'Using your oven' for instructions.
 - There will be a distinctive smell while you are conditioning the oven. This is normal, but make sure the kitchen is well ventilated during the conditioning.
- 4 Once cooled, wipe out the oven with a damp cloth and mild detergent, and dry thoroughly.

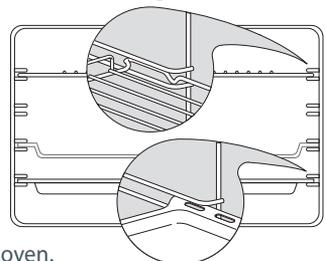

8 Using your oven

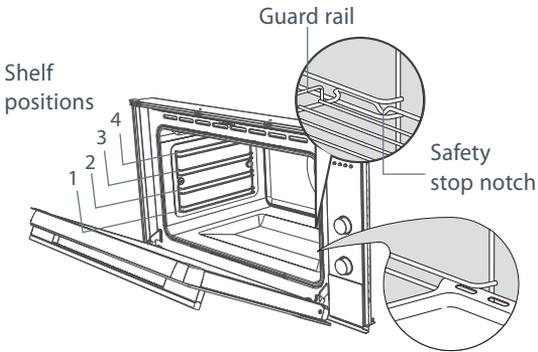


- Slide in the shelves you will need, making sure that:
 - they are between the two wires of a shelf position
 - the safety stop notches point down
 - the guard rail is at the back.
- Note: when you slide in the grill tray, make sure it is positioned between the two wires of a shelf position, as shown.

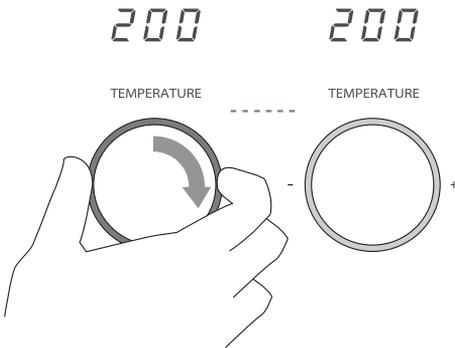

- Set the temperature.
 - While the oven is heating up, the halo will glow red and the temperature indicator will alternately show the actual and set temperatures.
 - When the oven is ready to use, a long tone will sound and the halo will turn white.
 - Note: **Grill**  provides instant radiant heat, so the halo will stay red and there will be no tone.




FUNCTION

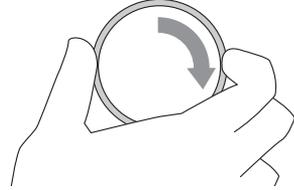

- Select a function.
 - The halo will glow white.



FUNCTION

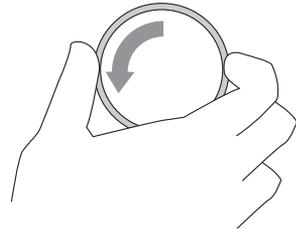

OFF

TEMPERATURE



- When you have finished cooking, turn the function dial to **Off** .

**Off**

Selecting this will turn the oven off.

**Bake**

This is the traditional method of baking. It is best to bake on only one shelf at a time in this function. Ideal for large cakes and dishes that bake for several hours.

**Fan Bake**

Ideal for dishes like lasagne that need to brown on top and also single trays of small cakes or biscuits that bake in less than an hour.

**Grill**

Grill is the most suitable function for 'finishing off' many meals, for example browning the top of potato gratin and frittata. Use Grill to toast bread or to grill your favourite chicken, fish and steak. Note: heat levels are from LO (50% power) to HI (100% power), with settings from 1 to 9 in between. Grill provides instant radiant heat, so the temperature dial halo will stay red.

**Fan Grill**

Ideal for roasting tender cuts of meat and poultry. Use the lower shelf positions for larger items eg a whole chicken.

**Fan Forced**

Great for multi-shelf cooking. The consistent temperature ensures baking is well risen. Cookies baked on Fan Forced are crisp on the outside and chewy in the middle.

**Pastry Bake**

Excellent for sweet and savoury pastry foods, for moist breads and brownies and cookies that you want extra chewy.

**Warm**

Use this function to keep cooked food hot and to warm plates and serving dishes. To reheat food from cold, use a cooking function at 150°C, then switch to Warm set between 70-90°C only when the food is piping hot. Note: this function is not for cooking food and the temperature cannot be set higher than 90°C.


**Rotisserie**

Rotisserie is a delicious way to cook meat and poultry. The slowly rotating food is basted continuously in its own juices, making it tender on the inside and well browned and full of flavour on the outside. See 'Using the rotisserie'.


**Self Clean**

The Self Clean cycle takes care of the mess and grime that is traditionally associated with oven cleaning. See 'Using the Self Clean function' for details. Note: this is NOT a cooking function.

10 Using the rotisserie

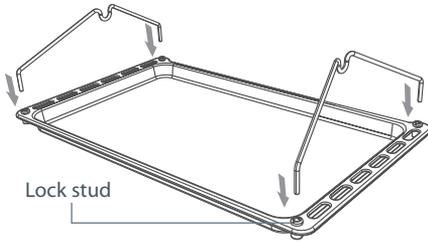

- 1 Prepare the rotisserie supports.
 - Place the grill tray on the benchtop.
 - Insert the supports into the lock studs.
 - Push the supports all the way down to lock them in firmly.

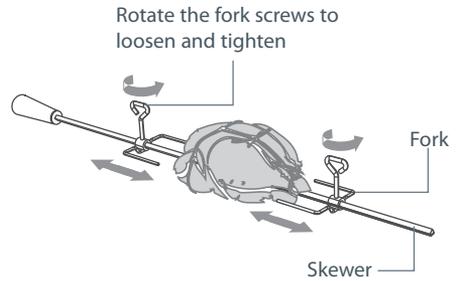

- 2 Secure the meat.


Important!

Take care, the forks are sharp!


When securing the meat, ensure that:

- the skewer goes through the centre of the meat
- the forks hold the meat firmly in place
- the fork screws are tightened
- there are no loose or projecting parts. Poultry should be trussed.

Note: the rotisserie can rotate up to 6 kg of meat.

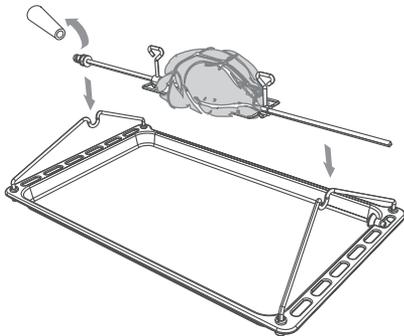


- 3 Position the skewer on the supports.
 - Place the skewer on the supports, and check that the meat does not touch the grill tray.
 - Twist the handle off. It must not be left in the oven.

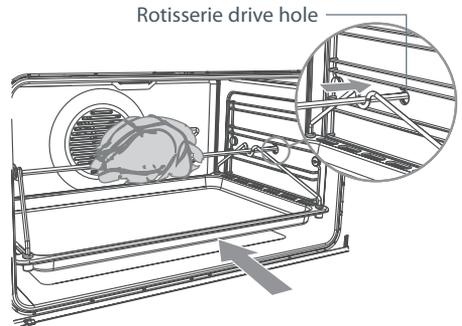

- 4 Place the rotisserie in the oven.
 - Slide the grill tray all the way to the back on shelf position 1.
 - Push the skewer through the hole cover on the right-hand wall of the oven, then insert it fully into the rotisserie drive hole.




FUNCTION

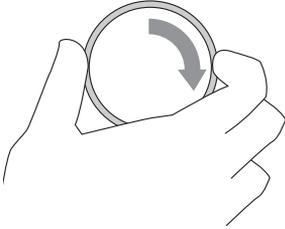

- 5 Select the **Rotisserie**  function.
 - The skewer will start rotating.
 - Check that the meat does not touch the grill tray or the grill element at the top of the oven.

210

TEMPERATURE

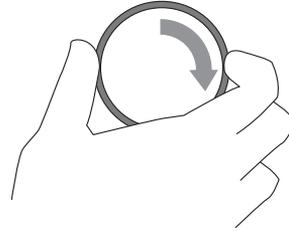

- 6 Set the temperature.
 - We recommend around 210 °C.

When you have finished using the rotisserie

- 1 Turn the oven off.
- 2 Using oven mitts, carefully disengage the right end of the skewer from the rotisserie drive hole.
- 3 Slide out the grill tray and place it on a heat-resistant surface.
- 4 Twist the handle onto the left end of the skewer.
- 5 Lift the skewer off the supports by the handle.
- 6 Loosen the fork screws and slide the meat off the skewer.

Tips for using the rotisserie

- For food safety reasons, we do not recommend using the rotisserie with stuffed meat.
- If your meat is too big or heavy (over 6 kg) for the skewer, place it on top of the grill rack in the grill tray, and use **Fan Forced** . This function will give a result similar to a rotisserie.
- Use a meat thermometer to ensure that meat is cooked through to a safe temperature.
- See 'Care and cleaning' for advice on cleaning the rotisserie parts.

12 Using the timer

- You can use the timer at any time, even if you are not using the oven.
- If the time is more than an hour, the display will count down in minutes (hr:min). If it is less than an hour, it will count down in seconds (min:sec).
- You can set the timer for up to 23 hours 59 minutes.

Important!

The timer does NOT turn the oven off.



- 1 Select the timer ⌘ by pressing the right scroll ► button once.
- The timer ⌘ indicator will appear and the colon will flash.



- 2 Press the select ✓ button to confirm.
- The display will flash to indicate the timer is ready to be set.



- 3 Set the time by pressing the scroll ◀ ► buttons.
- Holding the buttons down will speed up the scrolling.



- 4 Press the select ✓ button to confirm.
- The timer will then begin to count down.



- 5 If you want to check the time of day, you can toggle between this and the timer countdown by pressing the scroll ◀ ► buttons.

To modify the timer setting

- 1 Make sure the display shows the remaining time counting down.
- 2 Press the select ✓ button.
- 3 Press the scroll ◀ ► buttons to set a new time.
- 4 Press the select ✓ button to confirm.

To cancel the timer setting

- 1 Make sure the display shows the remaining time counting down.
- 2 Press the cancel × button until the display shows the time of day and the timer ⌘ indicator disappears.

When the set time is up

- The display will show 0:00 and a tone will sound every 15 seconds.
- Press any button to stop the tone sounding. The display will revert to showing the time of day.

- You can set the oven to automatically turn on later, cook for a preset time (cooking time), then automatically turn off at a preset stop time. See the example and instructions below (steps 1 to 7).
- If you start cooking manually and only want the oven to turn off automatically after a set cooking time: simply set the cooking time following steps 1 to 3 below. The oven will automatically turn off when the cooking time is over.

Important!

Safe food handling: leave food in the oven for as short a time as possible before and after cooking or defrosting. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warmer weather.

Example: It is 11:05 a.m. You want your food to cook for 1 hour, and you would like it to be ready by lunchtime (12:30 p.m.)


Set the cooking time



- 1 Check the clock shows the correct time of day.
- 2a Press the right scroll ► button three times to scroll to the cooking time ⌚ indicator.
- 2b Press the select ✓ button to confirm.

- 3a Press the right scroll ► button to set the cooking time. Make sure you allow for preheat time in your calculation.

Set the stop time

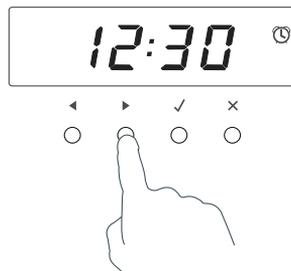

- 4a Press the right scroll ► button once to scroll to the stop time ⌚ indicator.
- 4b Press the select ✓ button to confirm.


- 5a Press the right scroll ► button to set the time you would like your food to be ready by (ie the stop time).
- 5b Press the select ✓ button to confirm.

14 Automatic cooking

Select function and temperature




FUNCTION

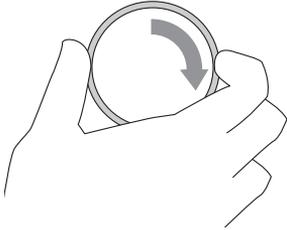

6 Select a function.

180

TEMPERATURE

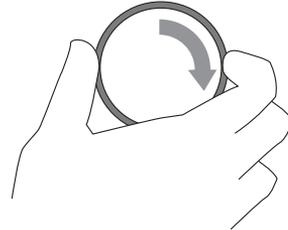

7 Set the temperature.

When automatic cooking is set

- The oven and the lights will stay off, the halos will be unlit, but your oven is now set for automatic cooking. It will automatically turn on at the required time.
- In a few seconds, the display will show the time of day with the cooking time ⌚ and stop time ⌚ indicators lit.
- Note: you can modify the function and temperature while the oven is waiting to start cooking.

When the stop time is reached

The oven will automatically turn off and a long tone will sound.

To check the set cooking time and stop time

Use the scroll ◀ ▶ buttons.

To cancel automatic cooking

Turn the function dial to **Off** .

Please note:

- The settings in the following chart are guidelines only. Follow the instructions in your recipe or on food packaging and be prepared to adjust the oven settings and baking times to achieve the best possible results for you.
- Shelf positions are counted from the base up (1 is the lowest, 4 the highest).
- Arrange oven shelves before you turn the oven on, then preheat the oven to the required temperature. Place items in the oven only when the long tone has sounded and the temperature dial halo has turned from red to white.*
- Single shelf positions below use the flat oven shelf; where a multi shelf arrangement is recommended, the higher position uses the step-down shelf.
- Due to the width of the oven, a single shelf can usually accommodate double the standard recipe.

Food	Note on arrangement	Shelf position(s)	Best function	Temperature (°C)	Time
Small cakes	single shelf	2	Bake	180-190	13-17 mins
	multi shelf	1 and 3	Fan Forced	160-170	16-21 mins
Scones	single shelf	2	Fan Forced	210-230	8-12 mins
	multi shelf	1 and 3	Fan Forced	210-230	8-12 mins
Sponge	two small pans (20 cm), on single shelf	2	Bake	170-190	25-35 mins
	one large pan (26 cm)	2	Bake	175	30-40 mins
Light fruit cake	two pans (21 cm) on single shelf	2	Bake	155-165	1 hr 30 mins
Rich fruit cake	exact baking time will depend on size	2	Bake	130-150	3-6 hrs
Apple pie	single shelf	1	Bake	185	35-45 mins
Custard tart	single shelf	1	Bake	220, then 180**	10, then 20-30** mins
Quiche	single shelf	1	Bake	180-200	30-40 mins
Meringues	single shelf	1	Bake	100-120	1 hr
Bread rolls	single shelf	1	Bake	210-230	15-20 mins
Muffins	2 x 12 muffin trays on single shelf	3	Fan Forced or Fan Bake	190-200	10-15 mins
Pastry case (baked 'blind')	one 21 cm flan tin	1	Pastry Bake	200	10 mins with beans, then 10 mins without

* Note: the colour change and tone may occur some time after the set temperature has been reached. This is because—when heating up from cold—your oven is designed to initially heat to a temperature somewhat higher than what you have set. This is to provide optimal baking conditions right from the start.

** This is a two-stage baking process: adjust the temperature after the first stage.

16 User preference settings


You can set your oven to:

- display the temperature in degrees Celsius or Fahrenheit
- give audio feedback (tones and beeps) or operate quietly
- display time as 12-hr or 24-hr
- operate with the display off
- have its lights on or off during cooking
- operate in Sabbath setting (see 'Sabbath setting' following).

How to change preference settings




- 1 Check the display shows the time of day.
 - If you're unsure, press the cancel × button twice.

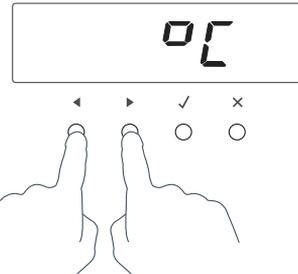



- 2 Press and hold the scroll ◀ ▶ buttons together for 3 seconds to enter the user preference menu.



- 3 Press the right scroll ▶ button to scroll to the setting you want to change. Refer to the table following.

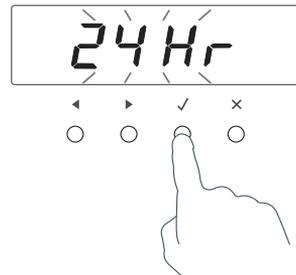

- 4 Press the select ✓ button to select the particular setting.
 - The display will flash.

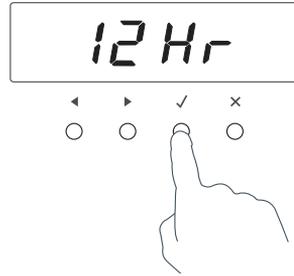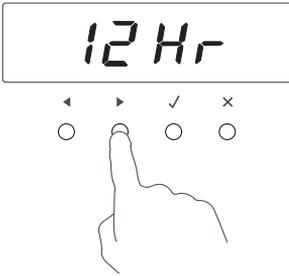

5 Press the right scroll ► button to scroll through the options for that particular setting. Refer to the table below.

6a Press the select ✓ button to save the new option .

6b For all options except 'Display off' : press the cancel × button to quit the user preference menu.

Setting	Default option	Alternative option(s)	
TEMPERATURE SCALE <i>Select between degrees Celsius or Fahrenheit.</i>	CELSIUS oC	FAHRENHEIT oF	
AUDIO FEEDBACK <i>Turn the beeps and tones on or off.*</i>	BEEPS/TONES ON bP on	BEEPS/TONES OFF bP oF	
TIME SCALE & 'DISPLAY OFF' OPTION <i>Select between 24-hr or 12-hr clock display or set 'Display off' option if you only need the basic functionalities of your oven.</i>	24 HR 24 Hr	12 HR 12 Hr	DISPLAY OFF ** oFF
OVEN LIGHTS <i>Have the light off during cooking if you want to save power or want the food you cook to be a surprise for others!</i>	LIGHTS ON DURING COOKING Lt on	LIGHTS OFF DURING COOKING Lt oF	
SABBATH SETTING	SABBATH OFF 5b oF	See 'Sabbath setting' for instructions.	

* The timer tone and alert beeps will sound even if you save the **BEEPS/TONES OFF** option.

** With this option saved, you can still use the oven but the display will be unlit and the buttons will be unresponsive. To quit this option and enable the display, press and hold the cancel × button.


18 Sabbath setting

This setting is designed for religious faiths that observe a 'no work' requirement on the Sabbath.

While your oven is in Sabbath setting



- The display, dial halos and indicators will be unlit, the buttons will be unresponsive.
- No tones or beeps will sound.
- No alert codes or temperature changes will be displayed.
- The oven lights will stay on. If you want the oven lights to be off during Sabbath setting, first select the 'Lights off' option as described in 'User preference settings', and only then set Sabbath setting.
- **Bake**  is the only function available in Sabbath setting.

How to set Sabbath setting

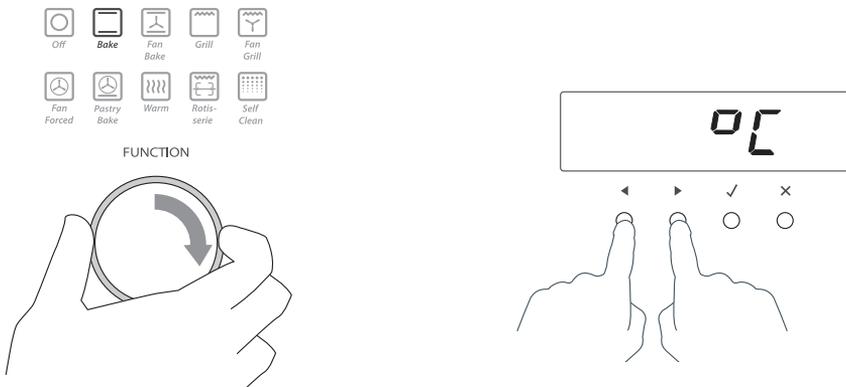

- 1a Select the **Bake**  function.
- 1b Set the desired temperature.
- 1c Wait until the oven starts up.

- 2 Press and hold the scroll   buttons together for 3 seconds to enter the user preference menu.

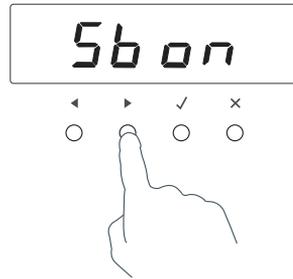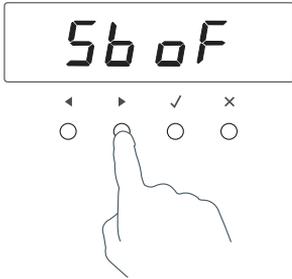

- 3a Press the right scroll ► button to scroll to the Sabbath setting.
- 3b Press the select ✓ button to select the Sabbath setting. The default option is 'Sabbath off'.
 - The display will flash.

- 4a Press the right scroll ► button to scroll to the 'Sabbath on' option.
- 4b Press the select ✓ button to activate the new option.


The display, indicators and dial halos will be unlit and unresponsive, but the oven will bake until you quit Sabbath setting.

To quit Sabbath setting

Press and hold the cancel × button until the time of day appears in the display and the oven turns off.

Manual cleaning

DOs	DON'Ts
<ul style="list-style-type: none"> ■ Before any manual cleaning or maintenance, first wait for the oven to cool down to a safe temperature to touch, then disconnect it from the power supply. ■ Read these cleaning instructions and the 'Safety and warnings' section before you start cleaning your oven. ■ To prevent soiling from becoming 'baked on' and stubborn, we recommend removing any easy-to-reach spills, food or grease stains from the oven cavity enamel after each use. Doing so will reduce the need for using the Self Clean function frequently. 	<ul style="list-style-type: none"> ■ Don't use a steam cleaner. ■ Don't keep flammable substances in the oven. ■ Don't use oven cleaners or any abrasive or harsh cleaners, cloths, scouring pads or steel wool. ■ Don't leave alkaline (salty spills) or acidic substances (such as lemon juice or vinegar) on the oven surfaces. ■ Don't use cleaning products with a chlorine or acidic base. ■ Don't clean the oven seal (see 'Introduction') or use any oven cleaning products on it.

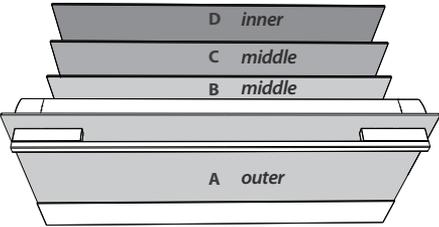What?	How?	Important!
<p>Glass surfaces (oven door panes, control panel)</p>	<p>Door comprises a total of 4 glass panes</p>  <p style="text-align: center;">D inner C middle B middle A outer</p> <ul style="list-style-type: none"> ■ To clean glass panes B-D, you will first need to remove the door and the panes. For instructions, see section 'Removing and replacing the door glass panes for cleaning.' <ol style="list-style-type: none"> 1 Clean with a solution of mild detergent and hot water, then wipe dry. 2 Wipe with a glass cleaner and dry with a soft, lint-free cloth. 	<ul style="list-style-type: none"> ■ Don't use oven cleaners or any other harsh/abrasive cleaners, cloths, scouring pads, steel wool or sharp metal scrapers to clean the glass surfaces. These scratch the glass and may damage its special coating, which in turn could result in the glass cracking or shattering. ■ Even if you only clean the inner pane (D), remove the door and the pane first. Cleaning the glass with the pane in the door may result in cleaning liquid running down the gaps and drying onto internal components. ■ Take particular care when cleaning the control panel glass.

Dials	Clean with a solution of mild detergent and hot water, then wipe dry.	<i>Do not use stainless steel or oven cleaner on the dials, as doing so may damage their coating.</i>
--------------	---	---


Manual cleaning

What?	How?	<i>Important!</i>
<i>Stainless steel strip on the front of the oven door</i>	<ul style="list-style-type: none"> ▪ Clean with a solution of mild detergent and hot water, then wipe dry with a microfibre cloth. ▪ If necessary, use a suitable stainless steel cleaner and polish. 	<ul style="list-style-type: none"> ▪ <i>Always read the label to make sure that your stainless steel cleaner does not contain chlorine compounds as these are corrosive and may damage the appearance of your oven.</i> ▪ <i>Always rub the stainless steel in the direction of the grain.</i>
<i>Aluminium framing of oven door and plastic corner clips</i>	Clean with a solution of mild detergent and hot water, then wipe dry.	
<i>Oven cavity</i>	<ul style="list-style-type: none"> ▪ To clean light soiling off the enamelled surfaces: <ol style="list-style-type: none"> 1 Wipe with a damp cloth and a solution of hot water and mild detergent. 2 Wipe dry with a soft cloth. ▪ To clean stubborn, 'baked on' soiling or the whole oven cavity: use the Self Clean function. See 'Using the Self Clean function' for instructions. 	<i>To prevent soiling from becoming 'baked on' and stubborn, we recommend removing any easy -to-reach spills, food or grease stains from the enamelled surfaces after each use. Doing so will reduce the need for using the Self Clean function frequently.</i>
<i>Grill tray Grill rack Side racks Oven shelves Rotisserie parts Baking tray</i>	<ul style="list-style-type: none"> ▪ Clean with a solution of mild detergent and hot water. ▪ Pre-soak stubborn burnt-on stains. ▪ Except for the baking tray, these parts are also dishwasher safe. 	<ul style="list-style-type: none"> ▪ <i>You don't need to remove the four lock studs from the grill tray. They can be soaked and cleaned while fixed to the tray.</i> ▪ <i>Never leave any of these parts in the oven during a Self Clean cycle. They will get discoloured or damaged.</i>
<i>Oven seal</i>	Do not clean this part.	
<i>Oven vent louvres</i>	Wipe with a damp cloth.	<i>Take care not to let any liquid run down the louvres of the oven vent.</i>

22 Care and cleaning

Removing and replacing the side racks

- Use a flat-head screwdriver or a small coin to loosen the fixing screws.
- When replacing the side racks, make sure that you tighten the fixing screws.

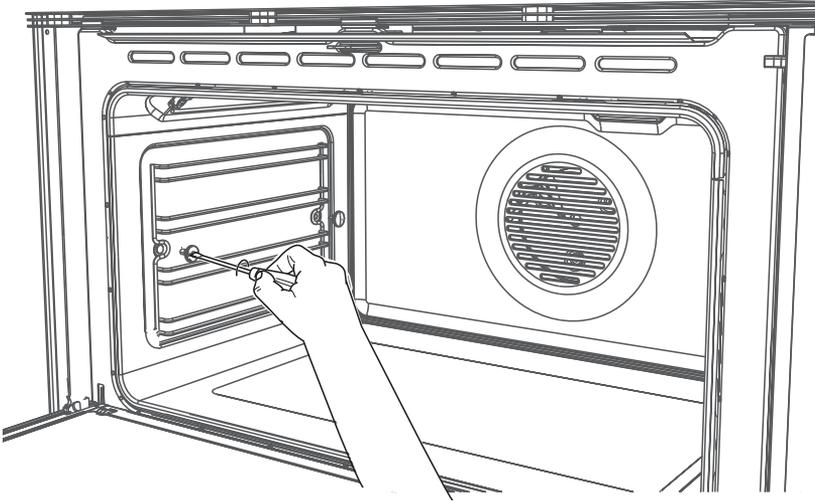



Removing and replacing the door glass panes for cleaning

Make sure you follow the precautions and instructions below very carefully. Replacing the glass panes and the door incorrectly may result in damage to the oven and may void your warranty.


Important!

- *Take care, the oven door is heavy (14 kg). If you have any doubts, do not attempt to remove the door.*
- *Make sure the oven and all its parts have cooled down. Do not attempt to handle the parts of a hot oven.*
- *Take extreme care when handling the glass panes. Avoid the edges of the glass bumping against any surface. This may result in the glass shattering.*
- *Don't use oven cleaners or any other harsh/abrasive cleaners, cloths, scouring pads, steel wool or sharp metal scrapers to clean the glass surfaces. These scratch the glass and may damage its special coating, which in turn could result in the glass cracking or shattering.*
- *If you notice any sign of damage on any of the glass panes (such as chipping or cracks), do not use the oven. Call your Authorised Repairer or Customer Care.*
- *Make sure you replace all the glass panes correctly. Do not use the oven without all glass panes correctly in place.*
- *If the glass panes feel difficult to remove or replace, do not force them. Call your Authorised Repairer or Customer Care for help. Note: service visits providing assistance with using or maintaining the oven are not covered by your warranty.*

Door comprises a total of 4 glass panes

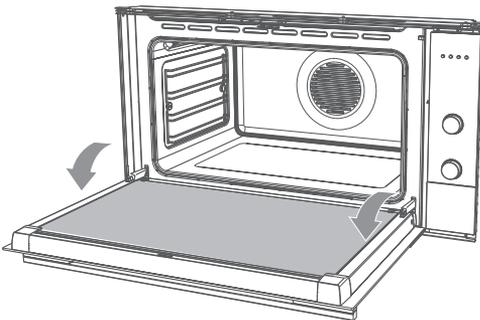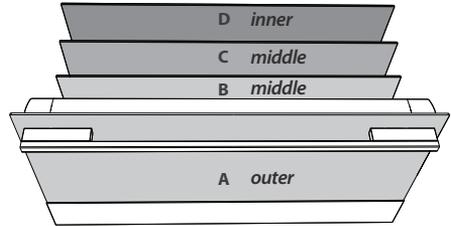


- 1a Make sure you have prepared enough space for resting the door and its glass panes on a clean, flat surface.
- 1b Open the door to its full extent.

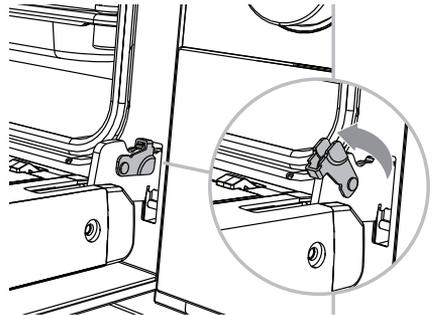


- 2 Open the levers on the left and right hinges to their full extent, as shown.


24 Care and cleaning

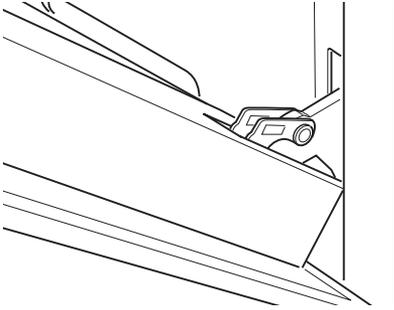

3 Gently close the door until the left and right hinge levers are hooked to the door.

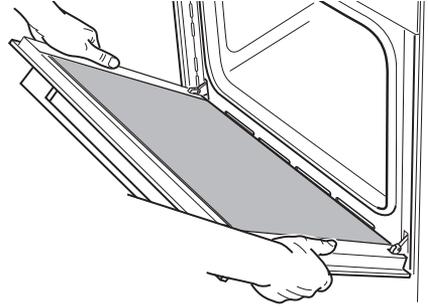


4 Hold the door firmly, as shown.

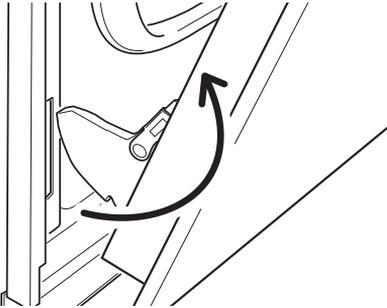


- 5a Lift the door and disengage the hinges.
- 5b Rest the door on a soft surface. Ensure you lay it with the handle side down.



Remove the inner and middle glass panes (three in total)

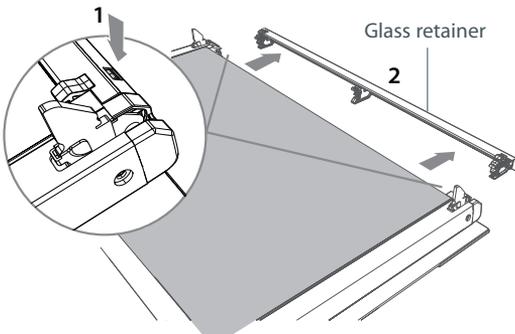

1 Press down on both tabs (1) to release the glass retainer (2).

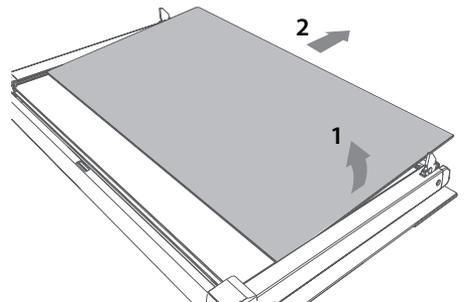

2 Lift the inner pane (D) slightly (1), then gently slide out (2).

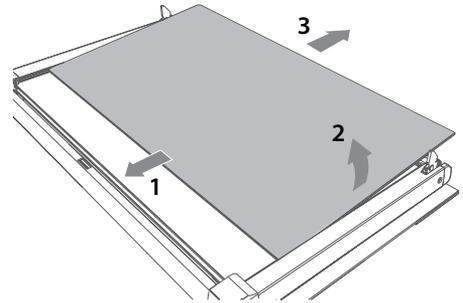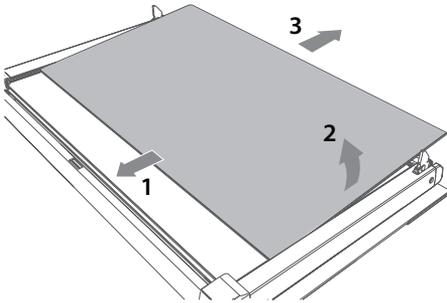


3 Slide the first middle pane (C) slightly towards yourself (1), then lift (2) and slide out (3).

4 Slide the second middle pane (B) slightly towards yourself (1), then lift (2) and slide out (3).


After cleaning, replace the glass panes

When replacing the glass panes, make sure that:


- you replace all three panes correctly, as shown. Each pane must be in the position described below in order to fit into the door and to ensure that the oven operates safely and correctly
- you take extra care not to bump the edges of the glass against any object or surface
- you do not force any of the panes into place. If you are experiencing difficulties replacing the panes, remove them and start the process again from the beginning. If this still does not help, call Customer Care.

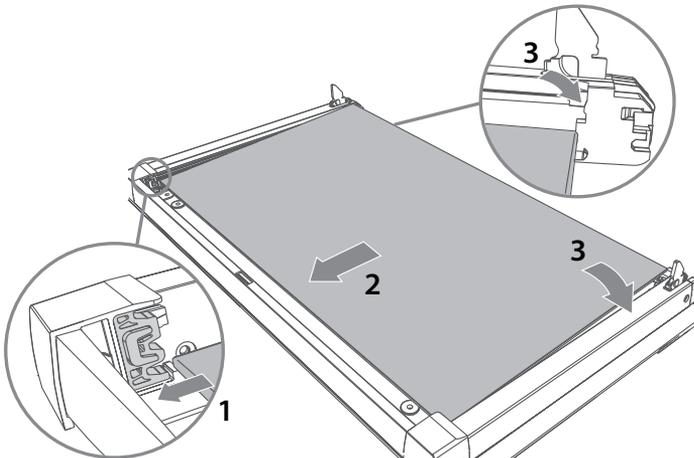

1 Take either one of the middle panes (B or C) and hold it firmly. Insert it in the lowest pair of grooves (1), push it slightly towards yourself (2) and gently lower into place (3).
 Note: the two middle panes (B and C) are identical.

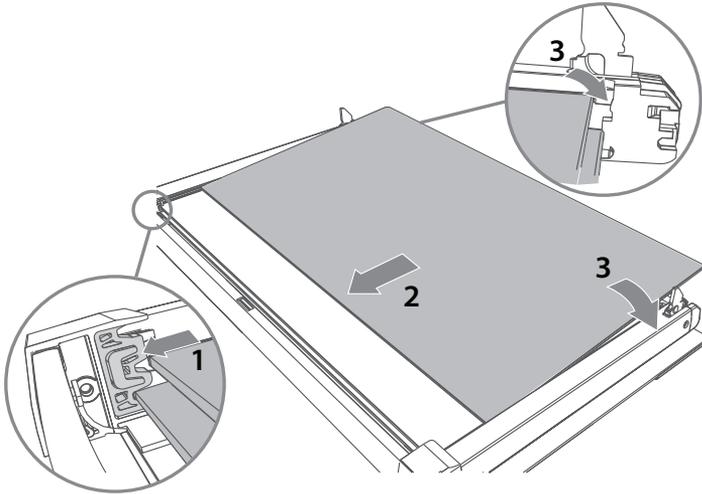


- 2 Take the other middle pane and hold it firmly. Insert it in the next pair of grooves (1), push it slightly towards yourself (2) and gently lower into place (3).

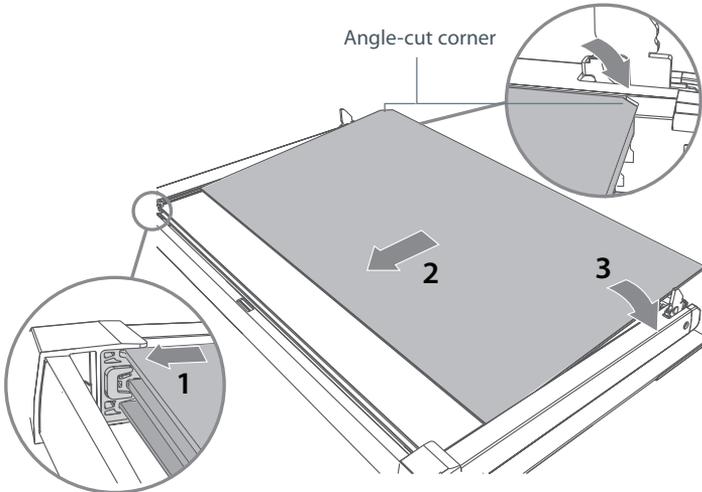


- 3 Take the inner pane (D), holding it with the angle-cut corner orientated as shown. Insert it in the uppermost pair of grooves (1), push it slightly towards yourself (2) and gently lower into place (3).

Important!

Make sure that the angle-cut corner of the inner pane (D) is at the bottom of the oven door, on the left-hand side. It has to be in this position for the door to function correctly.

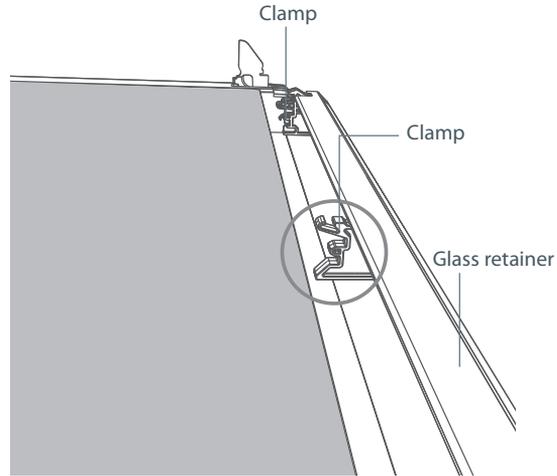

- 4 Position the glass retainer, as shown. It should sit on the bottom edge of the outer glass (A). Check that the clamps of the glass retainer are not deformed or damaged.

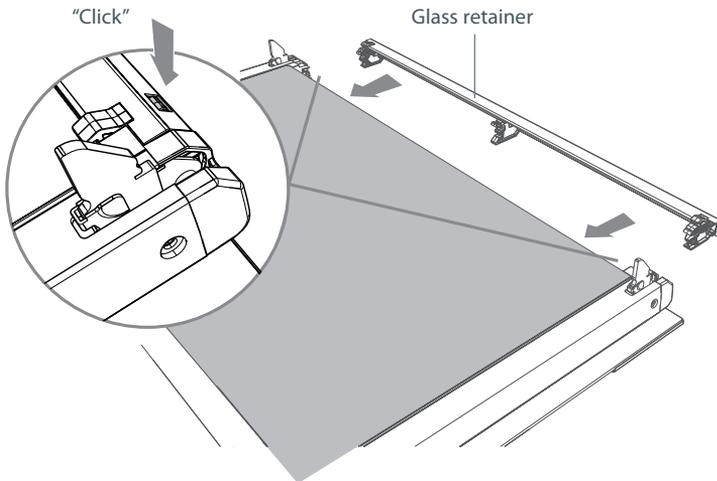


- 5 Gently push the glass retainer back into place. You should be able to hear the tabs on both sides click as they lock the glass retainer in.


Important!

Make sure the glass retainer is correctly and firmly in place and that the glass panes are secure.


Refit the door

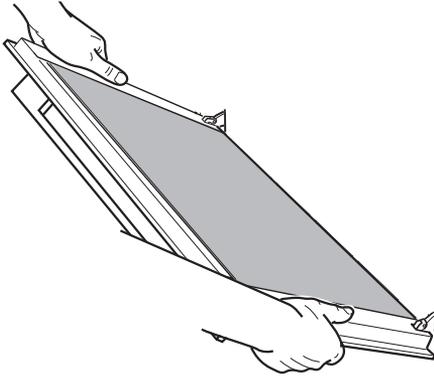


1 Hold the door firmly.

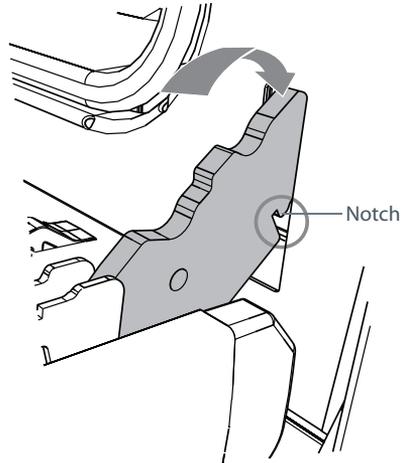

2 Insert the hinge tongues into the slots, making sure that the notches on both sides drop into place as shown.

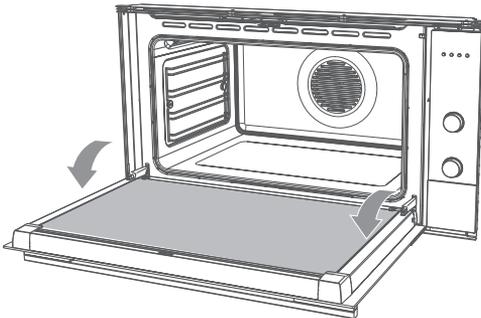

3 Open the door to its full extent.

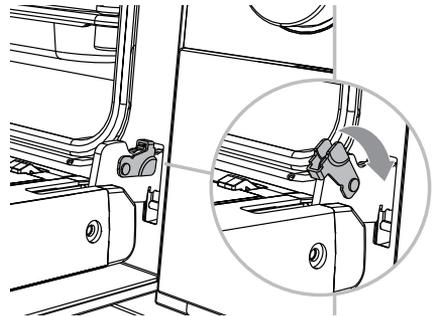

4a Fully close the levers on the left and right hinges, as shown.


4b Close the door, make sure the oven is connected to the power supply, then check that the door is properly in place:

- When you open the door, the lights in the oven should come on.
- When you close the door, the lights in the oven should turn off.

Replacing the oven light bulbs

The oven light bulbs (12V/20 W halogen) have a very long life, but if you should need to replace one, use only a replacement bulb purchased from your nearest Fisher & Paykel dealer and follow these steps. **Note: oven bulb replacement is not covered by your warranty.**


- 1 Allow the oven to cool down, then disconnect it from the power supply.

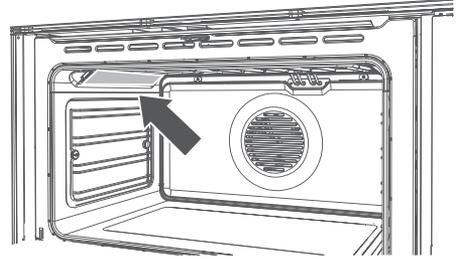

- 2 Remove any oven shelves that may get in the way.




- 3 Using a flat-head screwdriver, twist and lift the retainer clip upwards to release the glass cover. Hold the glass cover to prevent it falling.

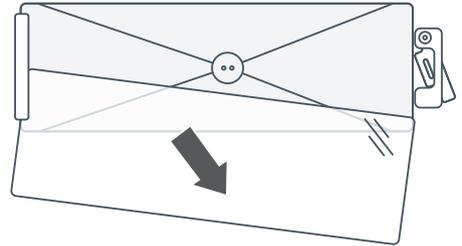

- 4 Carefully lift the glass cover out of the retaining bracket in the back and pull out the faulty bulb.



- 5 Hold the replacement bulb in a soft cloth or tissue (touching the bulb will reduce its life span) and insert it into the socket.

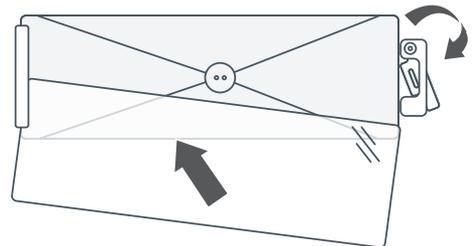

- 6a Reposition the glass cover and twist the retainer clip back in place.
- 6b Reconnect the oven to the power supply.

Using the Self Clean function

- This convenient pyrolytic Self Clean function takes care of the mess and grime that is traditionally associated with oven cleaning. The extremely high temperature during a Self Clean cycle burns off and breaks down stubborn soil and grease deposits. All that remains is a clean oven cavity with a little grey ash which you can easily remove. Note: the inner glass pane (D) of the door may need to be cleaned manually. See 'Care and cleaning'.
- A Self Clean cycle lasts about 3 hours.

Important!

- *Do not use oven cleaners, any degreasing cleaners, or oven liners.*
- *Make sure you remove the side racks, oven shelves and trays, rotisserie and all other bakeware and utensils from the oven before starting a Self Clean cycle. If left in the oven, they will become permanently discoloured or damaged; items made from combustible materials (eg wood, fabric, plastic) may even catch fire.*
- *Do not use your oven to clean miscellaneous parts.*
- *Make sure the room is well ventilated.*
- *Before starting a Self Clean cycle, make sure you move any pet birds to another, closed and well-ventilated room. Some pet birds are extremely sensitive to the fumes given off during a Self Clean cycle, and may die if left in the same room as the oven during such a cycle.*
- *During a Self Clean cycle, the oven reaches higher temperatures than it does for cooking. Under such conditions, the surfaces may get hotter than usual and children should be kept away.*
- *The oven door will be locked during the Self Clean cycle (approximately 3 hours).*
- *If there are cracks or flaws on any of the oven door glass panes, if the oven seal is damaged or worn, or if the door does not close properly, do not start a Self Clean cycle. Call your Authorised Repairer or Customer Care.*



To start a Self Clean cycle

- 1a Remove oven shelves, side racks and all other accessories, bakeware, and utensils.
- 1b Wipe up any spills. Failure to do so may discolour the oven surfaces.
- 1c Check the inner glass pane of the oven door (D). If it has soiling on it (eg stains from greasy splatter), you will need to clean it manually before starting a Self Clean cycle. For instructions, see 'Care and cleaning'.

Important!

If soiling is left on the glass, it will become burnt on during the Self Clean cycle, making it very difficult to remove.

- 2 Close the oven door firmly.

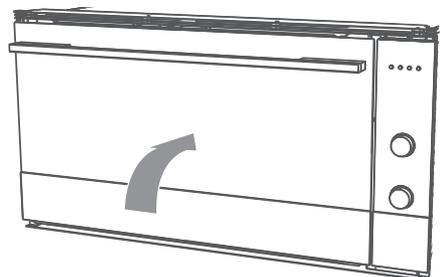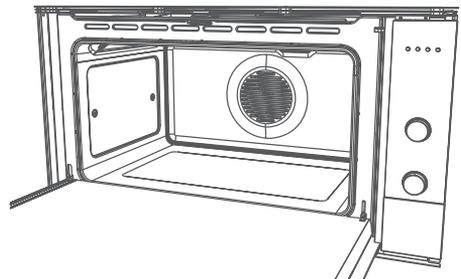


3 Select the **Self Clean**  function.


- The display will flash 3:00, indicating the duration of a Self Clean cycle (3 hours).
- The temperature indicator will be blank, as temperature cannot be adjusted.



FUNCTION

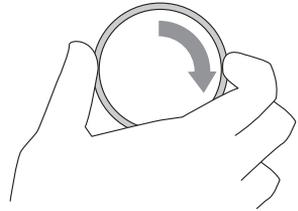

- 4 Once the display is flashing 3:00, press the select  button to start the Self Clean cycle.
- The time will start counting down.
 - For your safety, the oven door will automatically lock and remain locked during the cycle.
 - Note: if the select  button is not pressed within 15 seconds, the oven will automatically turn off. Start from step 3 again.

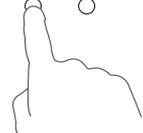

32 Using the Self Clean function

When a Self Clean cycle has finished

The oven will:

- emit a long tone
- automatically turn off
- automatically unlock the door.

In a few seconds, the display will show the time of day.


You need to:

- 1 wait for the oven to cool down completely
- 2 remove the grey ash with a small brush or damp cloth
- 3 wipe out the oven with a clean damp cloth
- 4 dry with a clean lint-free cloth
- 5 replace the side racks and shelves.

To cancel a Self Clean cycle

Important!


- *A Self Clean cycle can only be cancelled while the function dial halo is lit.*
- *If the function dial halo is unlit, the Self Clean cycle is in its cool-down phase and cannot be cancelled. Do NOT disconnect the oven from the power supply. Doing so while the oven is too hot may damage the oven and its surrounding cabinetry.*

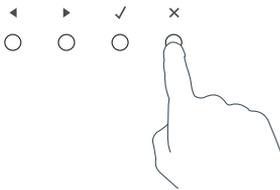

OR



FUNCTION

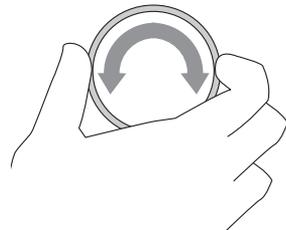

To cancel a Self Clean cycle, press the cancel × button or turn the function dial in either direction.

- If the oven needs to cool down, the **Self Clean**  function indicator will stay lit, the display will show the remaining cool-down time, the temperature indicator will show cascading bars  and the door will remain locked.
- When it has cooled down, the oven will turn off, the door will unlock, a long tone will sound and the display will show the time of day.
- We do not recommend cancelling a Self Clean cycle and then immediately starting one again.

Troubleshooting chart

If there is a problem, check the chart below to see if you can fix it. If the problem cannot be fixed or persists, call your Authorised Repairer or Customer Care.

Problem	Possible causes	What to do
<i>General</i>		
The oven does not work.	No power.	Check that the oven is connected to the power supply and there is no power outage in your area.
The lights do not come on when I open the oven door.	The oven light bulb(s) have blown.	Replace the light bulb(s). See 'Care and cleaning' for instructions.
	The door is not correctly fitted.	See 'Care and cleaning' for instructions on fitting the door correctly.
	The oven is in Sabbath setting and the 'Light off' option has been saved.	To quit Sabbath setting, press and hold the cancel × button. See 'User preference settings' for instructions on changing the 'Light off' option.
The temperature indicator shows --- and the dials and buttons are unresponsive.	The control panel is locked.	Press and hold the select ✓ or cancel × button to unlock the control panel.
The oven is not heating.	The door is not properly closed or it is opened too frequently during cooking.	The heating elements are disabled while the door is open. Make sure the door is properly closed and avoid opening it frequently during cooking.
A glass pane in the oven door has cracked, chipped, or shattered.	Incorrect cleaning or the edge of the glass hitting against something.	You must NOT use the oven. Call your Authorised Repairer or Customer Care.

Problem	Possible causes	What to do
<i>General</i>		
The oven has reached the set temperature but the temperature dial halo is still red (indicating that the oven is not ready to use).	This is normal: when heating up from cold, your oven is designed to initially heat to a temperature somewhat higher than what you have set. This is to provide optimal baking conditions right from the start.	Wait until a long tone sounds and the temperature dial halo turns white: the oven will then be ready to use.
The oven is heating but the display is dark.	The oven is set to 'Display off' option.	To quit the 'Display off' option, press and hold the cancel × button until the display shows the time of day.
	The oven is in Sabbath setting.	To quit Sabbath setting, press and hold the cancel × button until the display shows the time of day.
The oven cancels automatic cooking when I try to adjust the clock setting.	The oven was set for automatic cooking when you were trying to adjust the clock setting.	You can only adjust the clock setting while the oven is not set for automatic cooking. See section 'Setting the clock and first use' for instructions.
The oven beeps when I try to turn the temperature dial OFF or below a certain temperature.	This is normal: for food safety reasons, the oven functions have factory-set minimum temperature settings.	The temperature dial itself cannot be 'turned off'. Selecting Off  with the function dial will turn the oven off.
The temperature dial halo never turns white when I use Grill .	This is normal: the halo stays red to indicate that the grill element provides instant radiant heat.	
The rotisserie skewer will not rotate.	The skewer did not fully engage in the rotisserie drive.	Make sure the skewer is pushed fully into the rotisserie drive hole.
	The meat is too heavy.	To get a finish similar to a rotisserie for pieces of meat or poultry heavier than 6 kg, use the grill tray and rack and the Fan Forced  function.
The rotisserie skewer stops rotating when I open the door.	This is normal: the rotisserie drive is disabled while the door is open.	

Problem	Possible causes	What to do
<i>Self Clean function</i>		
During a Self Clean cycle, the oven is louder than usual.	This is normal: the oven's cooling fans operate at their highest speed.	
The display shows <i>door</i>.	The door has not been properly closed.	Make sure you close the door properly.
The display shows  but the oven door will not open.	The oven door is locked because the oven is still too hot to be used for cooking.	Wait until the Self Clean cycle has finished. If you cancelled a Self Clean cycle which was already underway, the oven still needs to cool down before it can be used. The oven door will automatically unlock.
At a point during a Self Clean cycle, the function dial halo goes out and the temperature indicator starts displaying cascading bars .	This is normal: the oven is in the last phase of the Self Clean cycle, cooling down.	Wait until the Self Clean cycle has finished. A long tone will sound and the oven door will automatically unlock when the oven is ready to use.
I have cancelled a Self Clean cycle but cannot use the oven: <ul style="list-style-type: none"> ■ the oven door will not open ■ the display is still counting down minutes or showing  ■ the Self Clean  function indicator is still lit ■ the temperature indicator shows cascading bars  ■ the dials and buttons are unresponsive. 	This is normal: if the function dial halo is unlit, you have successfully cancelled the Self Clean cycle. However, the oven is still too hot to be used for cooking and needs to cool down.	Wait until the cool-down phase has finished. A long tone will sound and the oven door will automatically unlock when the oven is ready to use. Note: depending on when the Self Clean cycle was cancelled, the cool-down phase may take up to 45 minutes.
The oven is beeping and the display shows <i>A2</i> or <i>A3</i>.	See section 'Alert codes' for instructions.	

If there is a problem, the oven will:

- automatically suspend all oven functions
- beep five times
- display an alert code.

Important!

Do not disconnect the oven from the power supply if you get an alert code, unless the instructions in the chart following specifically instruct you to. There are cooling fans within the oven which are needed to cool the oven's components. Disconnecting the oven from the power supply while the oven is too hot may damage the oven and its surrounding cabinetry.

What to do if an alert code is displayed

- 1 If the beeping hasn't stopped already, press any button to stop it.
- 2 Make a note of the alert code displayed. You may need this information.
- 3 Check the chart following to see if you can fix the problem yourself and follow the instructions.
- 4 *If you can fix the problem* and the alert code does not reappear, you can keep using your oven.

OR

If you can't fix the problem yourself or the alert code reappears and the problem persists: wait until the cooling fans have stopped and the oven has completely cooled down, then disconnect the oven from the power supply and call your Authorised Repairer or Customer Care with the alert code information.

Alert code	Possible causes	What to do
<i>A1</i>	The oven has overheated.	<ol style="list-style-type: none"> 1 Allow the oven to cool down. 2 If the door is locked, wait until it automatically unlocks. 3 Once the oven has cooled down and the door has unlocked, the alert code will disappear. You can now use the oven again.
<i>A2</i>	Door lock error: the door cannot be locked after you have started a Self Clean cycle.	<ol style="list-style-type: none"> 1 Disconnect the oven from the power supply, then connect it again. 2 Wait approximately 10 seconds. This is to allow the door lock to return to its initial position. 3 Set the clock. See 'Setting the clock and first use' for instructions. 4 Try starting a Self Clean cycle again, making sure that you close the door firmly. See 'Using the Self Clean function'.
<i>A3</i>	Door lock error: the door cannot be unlocked after a Self Clean cycle has finished.	<ol style="list-style-type: none"> 1 Disconnect the oven from the power supply, then connect it again. 2 Try pressing on the oven door to help the door lock disengage. 3 If this doesn't help and the alert code reappears, call your Authorised Repairer or Customer Care.
<i>F</i> + number	Technical fault.	<ol style="list-style-type: none"> 1 Note down the alert code. 2 Wait until the cooling fans have stopped and the oven has completely cooled down. 3 Disconnect the oven from the power supply. 4 Call your Authorised Repairer or Customer Care with the alert code information.

38 Warranty and service

Before you call for service or assistance...

Check the things you can do yourself. Refer to the installation instructions and your user guide and check that:

- 1 your product is correctly installed.
- 2 you are familiar with its normal operation.

If after checking these points you still need assistance or parts, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, or contact us through our local website listed on the back cover.

Manufactured by:

Fisher & Paykel Appliances Italy S.p.a
Via Fabbian Matteo, 7
31030 Borso del Grappa (TV)
Italy

Registered importer:

Qingdao Haier International Trading Co. Ltd
Haier Industrial Park
Haier Road
Qingdao 266101
P.R. China

Quality Certificate:



Product details

Model _____ Serial No. _____

Date of Purchase _____ Purchaser _____

Dealer _____ Suburb _____

Town _____ Country _____

Copyright © Fisher & Paykel 2009. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

www.fisherandpaykel.com.cn

CN

Multifunction pyrolytic oven user guide

Published: 09/2009

Part No. 599888 A

F&P Italy Part No. 1103378-β1