



# WARNING!

REMOVE TRANSIT BRACES, BOLTS  
AND RODS BEFORE USE!


① Remove 4 bolts

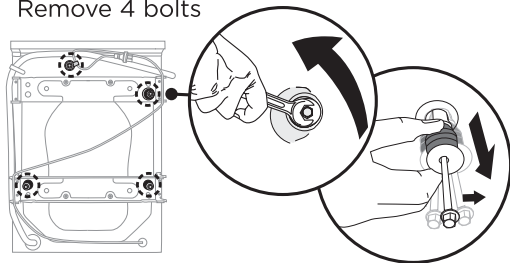

② Remove 2 braces

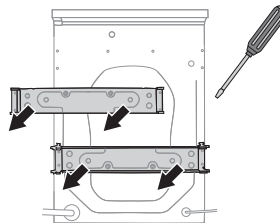

③ Remove 2 long rods

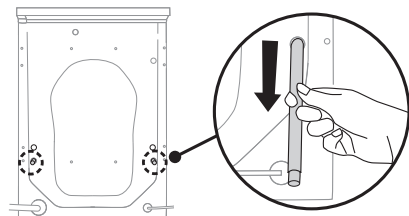

④ Install 6 plugs

