

SAFETY & WARNINGS

WARNING!

Cut Hazard
Failure to use caution could result in injury.
• Take care: some edges may be sharp.

- This trim kit is designed to complement your companion product if installing into 30" (760mm) wide cabinetry. Ensure correct variation is used for styling (contemporary, minimal).

COMPONENTS REQUIRED

Supplied



Button screw 16mm (4)



Template (1)



570813 BRACKET BASE TK PB OB30 (2)



Trim kit top assembly (2)



Adhesive putty

Not supplied



Powered driver (1)



Small pilot hole drill bit (1)



Phillips drill bit (1)



Hammer (1)




Centre punch (1)

For more information, visit www.fisherpaykel.com

TRIM KIT INSTALLATION

①

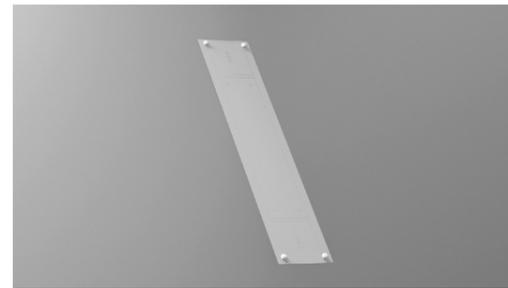

Apply adhesive putty to the four corners on the back of the template.

②



Note the horizontal (red) and vertical (blue) offset lines on the template.

Align the red line with the bottom of the product and the blue line with the side. Secure using an adhesive putty.

③



Ensure the blue line on the template is aligned up the length of the product.

④



Ensure the template is aligned and completely flat against the cabinet. Note the final position of the template.

⑤



Use a centre punch and hammer to mark out the desired hole on the top and bottom of the template.


Create a pilot hole at the marked locations.

⑥



Align the bracket with the pilot holes.

⑦

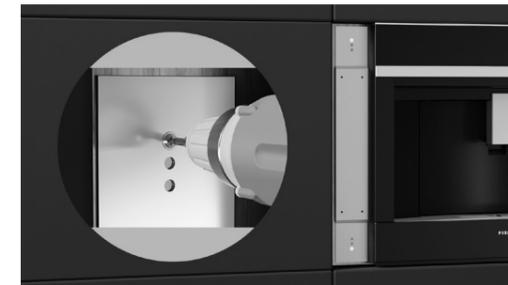

Partially screw the bracket into place using the supplied screws. Ensure the bracket is sitting down and towards the product on the thread of the screw before tightening fully. This will allow for minor adjustment in Step 9 if required.

Repeat on the opposite side.

⑧



Clip the top trim kit assembly into place.

⑨




Check the vertical alignment of the trims.

If alignment requires adjustment within ±1mm, this may be achieved by removing the top assembly and adjusting the position of the base plate.

If greater adjustment is required. Remove the top assembly and base plate before returning to step 5 and choosing a new set of installation holes.

⑩

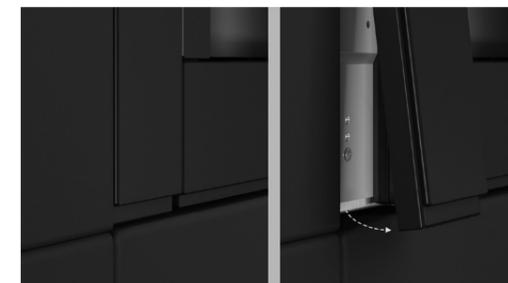

The trim kit top assembly can be removed at anytime.

To remove, lift upwards from the base ensuring the top is carefully supported.