


Tall Product

Standard Product

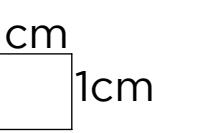

FISHER & PAYKEL

DOOR PANEL TEMPLATE

Use this template to accurately drill the required pilot holes in your custom door panel.

Establish the appropriate dimension below and align the template with the base of your panel.
For full installation guidance, refer to the Installation Guide and Panel Preparation supplied with your appliance.

Centre line

Pilot holes

To pre-drill exit vent - align exit vent part to this box.
Then use exit vent part to align holes for pre-drilling.

Pilot hole size or Use driver to install self-tapping screws.

Maximum height 72mm for door swing clearance.

If the height is greater than 72mm, check the door swing and ensure it fully closes.
Reduce foot height if it's needed.