

Model no:

**OR24SDMBGX2** (refer page 2 for metric measurements)

Dimensions	in
Ⓐ Overall height of range (from floor to cooktop, excluding grates and backguard)	min 35 7/16" max 36 1/4"
Ⓑ Overall width of range	23 7/8"
Ⓒ Depth from front datum to rear of range	24 1/4"
Ⓓ Depth of backguard	2 1/2"
Ⓔ Height of backguard	4 7/16"
Ⓕ Depth of spacers	5/16"
Ⓖ Height from countertop datum to top of grates	1 3/8"
Ⓗ Height from countertop datum to top of control panel	1 3/16"
Ⓙ Height from countertop datum to bottom of control panel	5 3/4"
Ⓚ Height from bottom of chassis to top of backguard	39 3/8"
Ⓛ Height from bottom of chassis to countertop datum	34 15/16"
Ⓜ Height from bottom of chassis to top of oven door	28 9/16"
Ⓝ Height from bottom of chassis to top of storage drawer	10"
Ⓞ Gap between oven door and control panel	7/8"
Ⓟ Gap between oven door and storage drawer	11/16"
Ⓡ Height from bottom of chassis to door handle centreline	35 5/8"
Ⓢ Height from bottom of chassis to drawer handle centreline	8 5/8"
Ⓣ Thickness of handle	5/8"
Ⓤ Width of handle	22 1/4"
Ⓡ Depth of handle	1 5/8"
Ⓟ Depth of open door to front datum	16 11/16"
Ⓡ Height of adjustable levelling feet	min 1/2" max 1 5/16"


Minimum Clearances*	in
Overall width of cavity	min 23 7/8"
Overall depth of cavity	max 24 3/16"
Overall height of cavity	min 35 7/16" max 36 1/4"

\* Refer to installation documents for additional cabinetry clearances.

INDICATES PRODUCT DATUM .....  
INDICATES CLEARANCES .....

DATE: 11.01.2016

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. [www.fisherpaykel.com](http://www.fisherpaykel.com)

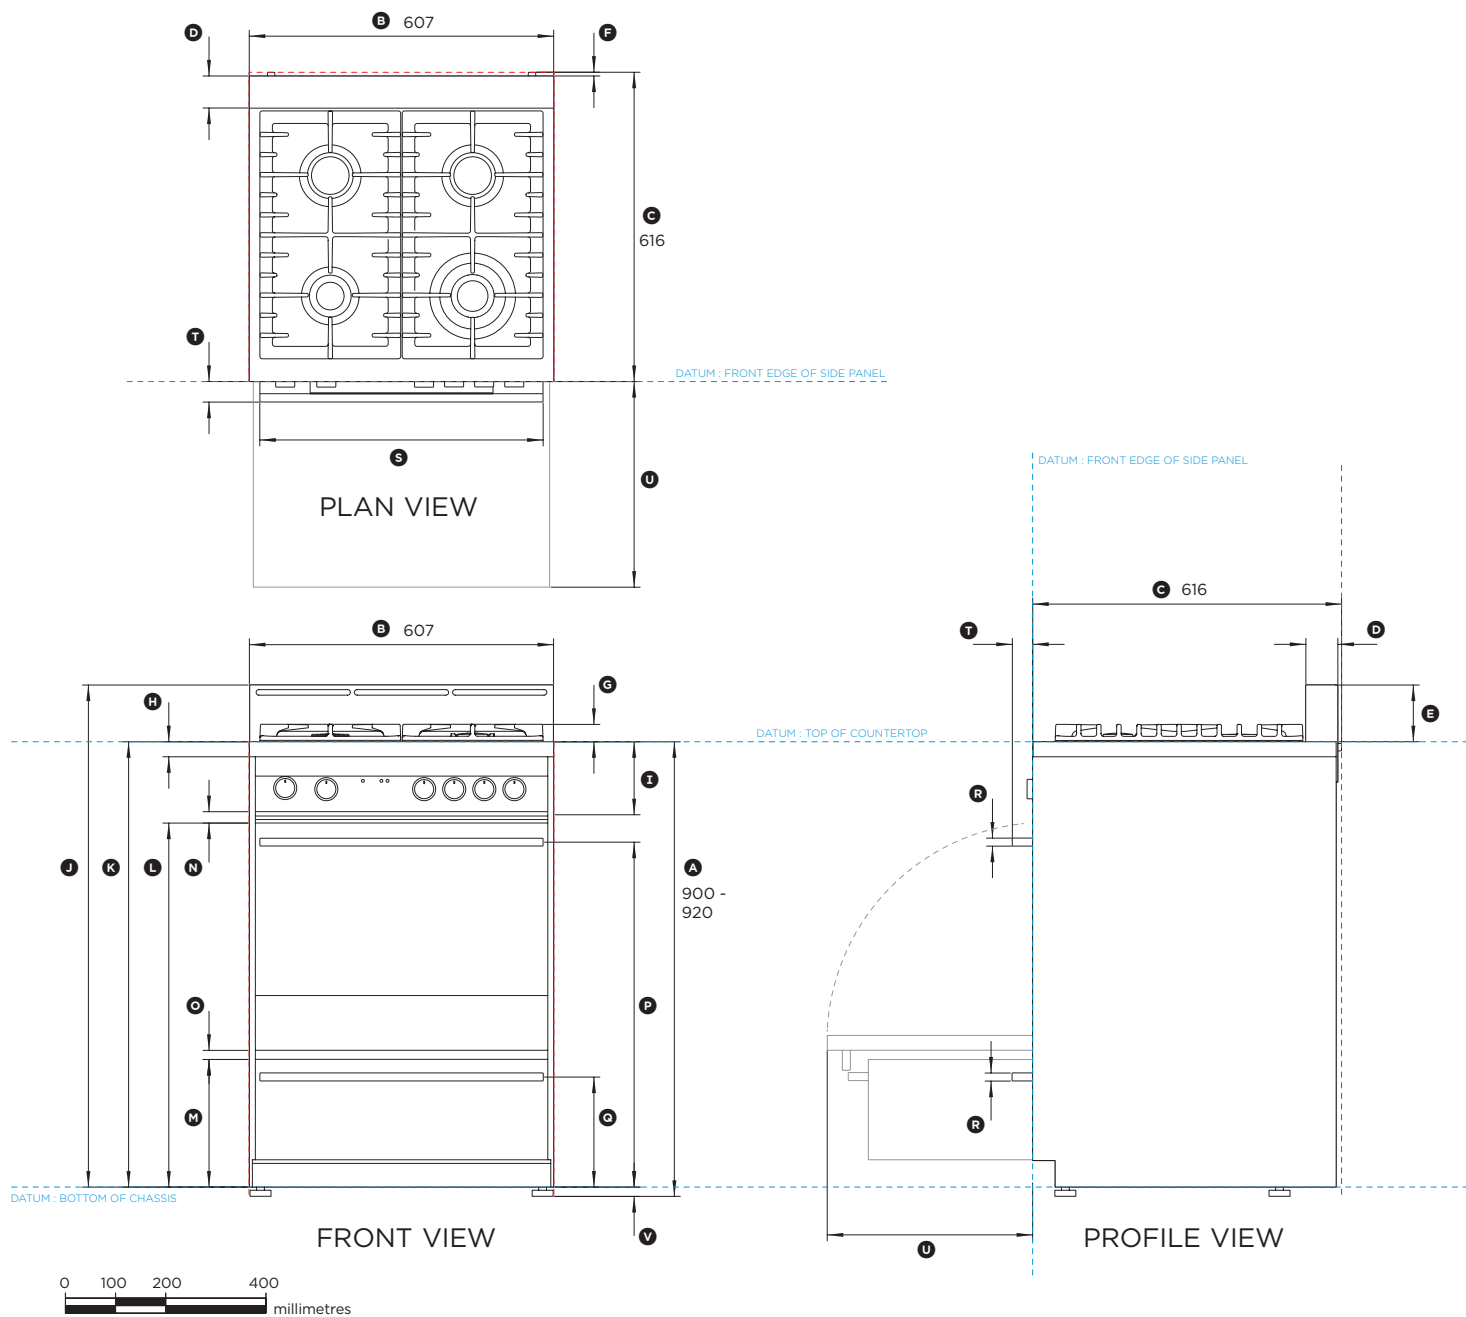

Model no:

**OR24SDMBGX2** (refer page 1 for imperial measurements)

Dimensions	mm
Ⓐ Overall height of range (from floor to cooktop, excluding grates and backguard)	min 900 max 920
Ⓑ Overall width of range	607
Ⓒ Depth from front datum to rear of range	616
Ⓓ Depth of backguard	64
Ⓔ Height of backguard	113
Ⓕ Depth of spacers	8
Ⓖ Height from countertop datum to top of grates	35
Ⓗ Height from countertop datum to top of control panel	30
Ⓘ Height from countertop datum to bottom of control panel	145
Ⓚ Height from bottom of chassis to top of backguard	1000
Ⓛ Height from bottom of chassis to countertop datum	887
Ⓜ Height from bottom of chassis to top of oven door	725
Ⓝ Height from bottom of chassis to top of storage drawer	254
Ⓟ Gap between oven door and control panel	23
Ⓠ Gap between oven door and storage drawer	18
Ⓡ Height from bottom of chassis to door handle centreline	687
Ⓢ Height from bottom of chassis to drawer handle centreline	219
Ⓣ Thickness of handle	16
Ⓤ Width of handle	565
Ⓡ Depth of handle	41
Ⓢ Depth of open door to front datum	424
Ⓥ Height of adjustable levelling feet	min 13 max 33
<b>Minimum Clearances*</b>	<b>mm</b>
Overall width of cavity	min 607
Overall depth of cavity	max 614
Overall height of cavity	min 900 max 920

\* Refer to installation documents for additional cabinetry clearances.

INDICATES PRODUCT DATUM .....  
INDICATES CLEARANCES .....

DATE: 11.01.2016

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (3/32"). Please read the installation manual for detailed information on installing the product. [www.fisherpaykel.com](http://www.fisherpaykel.com)