

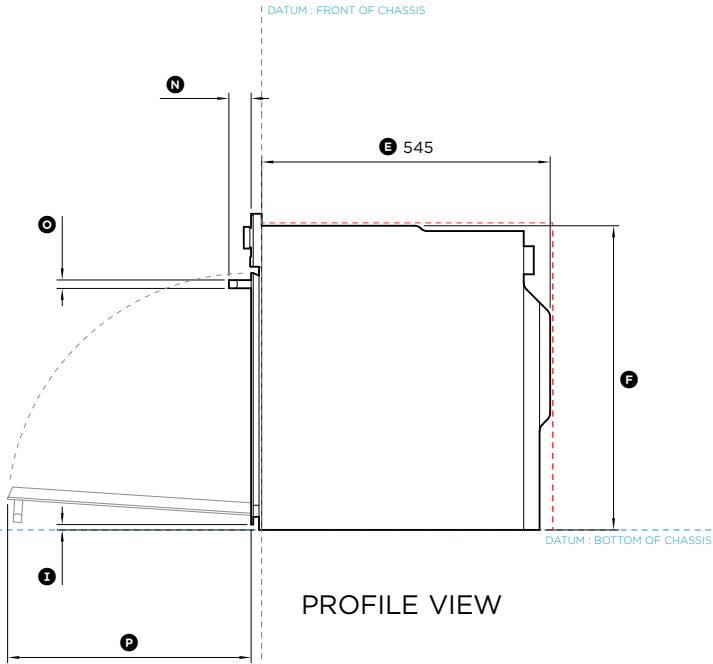
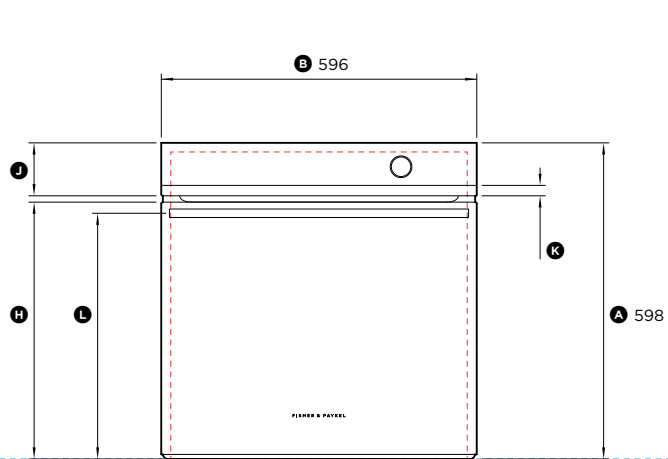


FISHER & PAYKEL

DATA SHEET Oven, 60cm

Model no:
OB60SD9PLX1, OB60SD11PLX1, OB60SD13PLX1, OB60SD16PLX1

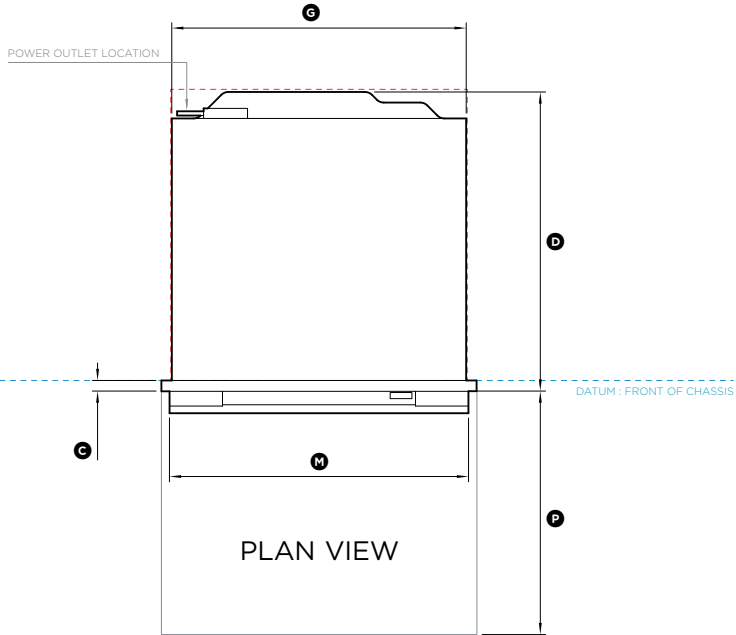

| Product Dimensions | mm |
|--|-----|
| Ⓐ Overall height of oven | 598 |
| Ⓑ Overall width of oven | 596 |
| Ⓒ Depth of front frame (excludes dial, handle and front stainless trim) | 20 |
| Ⓓ Depth of oven chassis and front frame (excludes dial, handle and front stainless trim) | 565 |
| Ⓔ Depth of chassis | 545 |
| Ⓕ Height of chassis | 575 |
| Ⓖ Width of chassis | 556 |
| Ⓗ Height from bottom datum to top of oven door | 487 |
| Ⓘ Height from bottom datum to bottom of door | 12 |
| Ⓚ Height of control panel | 100 |
| Ⓛ Height of stainless steel cap on control panel | 20 |
| Ⓜ Height from bottom datum to centerline of handle | 464 |
| Ⓝ Width of handle | 565 |
| Ⓞ Depth of handle (measured from front of door) | 42 |
| Ⓟ Thickness of handle | 16 |
| Ⓠ Depth of door when open (measured from front of door) | 460 |

| Minimum Clearances | mm |
|---------------------------------|-----|
| Minimum inside height of cavity | 580 |
| Minimum inside width of cavity | 560 |
| Minimum inside depth of cavity | 550 |

IMPORTANT NOTE: For full installation and clearance details please refer to the installation guide.

INDICATES PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----

DATE: **08.08.2022**

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com