

FISHER & PAYKEL

DATA SHEET 60cm Oven

Model no:
OS60SDTDB1


Product Dimensions	mm
Ⓐ Overall height of oven	598
Ⓑ Overall width of oven	596
Ⓒ Depth of control panel (excludes handle and front metal trim)	21
Ⓓ Depth of front door (excluding front trim)	20
Ⓔ Depth of oven chassis to front of door glass (excludes handle)	565
Ⓕ Depth of chassis	545
Ⓖ Height of chassis	577
Ⓗ Width of chassis	556
Ⓘ Height from bottom datum to top of oven door	487
Ⓛ Height of metal cap on oven door	117
Ⓚ Height from bottom datum to bottom of door	11
Ⓛ Height of control panel	100
Ⓜ Height of metal cap on control panel	20
Ⓝ Height from bottom datum to centerline of handle	464
Ⓞ Width of handle	565
Ⓟ Depth of handle (measured from front of door)	42
Ⓠ Thickness of handle	16
Ⓡ Depth of door (open) (measured from front of door)	460
Ⓢ Control panel half open (measured from front of chassis)	84
Ⓣ Control panel fully open (measured from front of chassis)	170
Ⓤ Water tank carriage fully open	133

Minimum Clearances	mm
Minimum inside height of cavity	580
Minimum inside width of cavity	560
Minimum inside depth of cavity	550



INDICATES PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----

DATE: 17.11.2021


IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

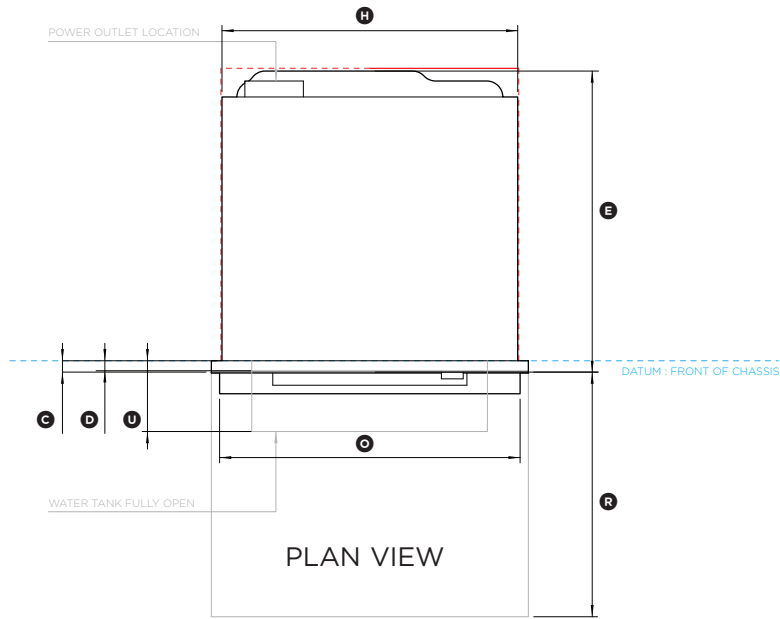

PLAN VIEW

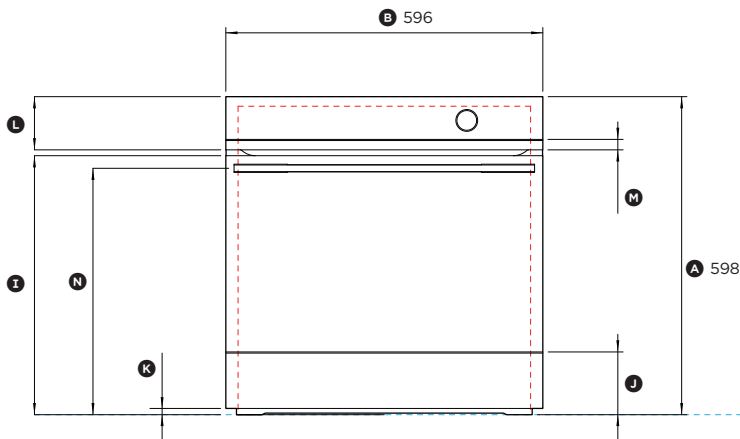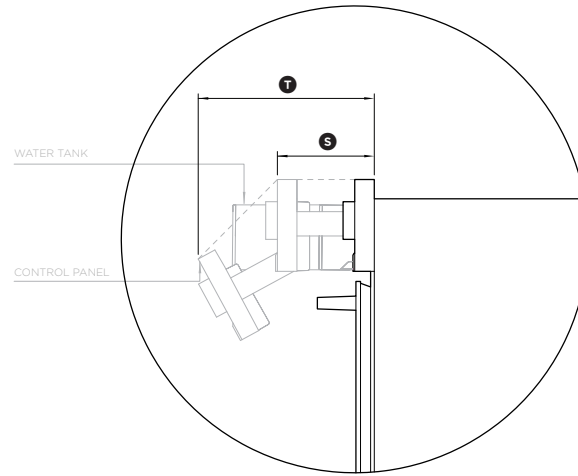

FRONT VIEW

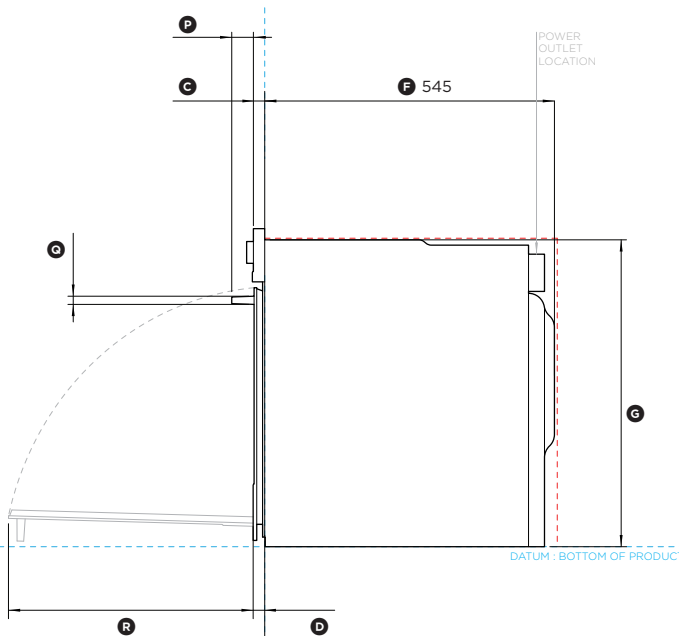

PROFILE VIEW

DATUM: FRONT OF CHASSIS