

INSTALLATION INSTRUCTIONS

Gas-on-glass cooktop

CG302D, CG451D, CG603D, CG604D,
CG752D, CG903D & CG905D
models

GB IE IN

Fisher & Paykel

⚠ WARNING!

Electrical shock hazard



Before carrying out any work on the electrical section of the appliance, it must be disconnected from the mains electricity supply.

Connection to a good earth wiring system is absolutely essential and mandatory.

Alterations to the domestic wiring system must only be made by a qualified electrician.

Failure to follow this advice may result in electrical shock or death.

⚠ WARNING!

Cut hazard



Take care - some panel edges are sharp.

Failure to use caution could result in injury or cuts.

IMPORTANT SAFETY INSTRUCTIONS!

- Particular attention shall be given to the relevant requirements regarding ventilation.
- Read these instructions carefully before installing this product.
- Please make this information available to the person installing the appliance as it could reduce your installation costs.
- This appliance must be installed and serviced only by a suitably qualified and registered person, and in accordance with the current editions of the following standards and regulations or other locally applicable regulations:
 - Gas Safety (Installation and Use) Regulations
 - Building Regulations
 - British Standards
 - Regulations for Electrical Installation
- Incorrect installation, for which the manufacturer accepts no responsibility, may cause personal injury or damage and could invalidate any warranty or liability claims.
- This gas appliance is suitable for connection only to the gas type for which it was set at the factory, as declared on the appliance data label. It is not convertible for use on any other gas type. If in doubt, refer to the local gas network operator or gas supplier to confirm gas type at installation site.
- Do not modify this appliance.

① SAFETY AND WARNINGS

- *Do not use or store flammable materials on or near this appliance.*
- *Do not spray aerosols in the vicinity of this appliance while it is in operation.*
- *Packing elements (eg plastic bags, polystyrene foam, staples, packing straps etc) and tools should not be left around during and after installation, especially if they are within easy reach of children, as these may cause serious injuries.*
- *You must remove the transit screws before installing the cooktop. See step 8 of installation instructions.*

Ventilation requirements

- The appliance should be installed in a room or space with an air supply in accordance with BS 5440:2 2009.
- For rooms with a volume of less than 5 m³, permanent ventilation through a free area of at least 100 cm² will be required.
- For rooms with a volume between 5 m³ and 10 m³, permanent ventilation through a free area of at least 50 cm² will be required, unless the room has a door which opens directly to the outside air, in which case no permanent ventilation is required.
- For rooms with a volume greater than 10 m³, no permanent ventilation is required.

Important!

Regardless of room size, all rooms containing the appliance must have direct access to the outside air via an openable window or equivalent.

- *Where there are other fuel-burning appliances in the same room, BS 5440-2: 2009 should be consulted to determine the correct amount of free area ventilation requirements.*
- *The above requirements also allow for use of a gas oven and grill, but you need to consult a qualified engineer if there are other gas-burning appliances in the same room.*

Before you install the appliance, please make sure that

- the local distribution conditions (nature of gas and pressure) and the adjustment of the appliance are compatible. For adjustment conditions for this appliance see 'Gas rate summary'.
- a suitable disconnection switch is incorporated in the permanent wiring, mounted and positioned to comply with the local wiring rules and regulations. A means of disconnection with at least a 3 mm air gap contact separation in all poles must be incorporated into the fixed wiring in accordance with the wiring rules, unless the local wiring rules allow for alternative means.
- the appliance is connected to a 220V - 240V 50Hz (10 A) power supply only and earthed via the power supply cable.
- there is a power outlet within reach of the power supply cable (900 mm from the centre rear of the product). This must be accessible after installation. The power supply cable should not touch any metal parts.
- if the power supply cable is damaged, it is replaced only by the special cable: Part no. 534994 KIT SPARES TRMNL BLK-FLEX 11, obtainable from authorised Fisher & Paykel Service Agents.

- the supply connection point (gas shut-off valve) is accessible after installation.
- the benchtop is made of a heat resistant material.
- the installation complies with all the requirements of all current local codes and regulations.

When you install the appliance


- We **do not recommend** you flush mount or seal this appliance into the bench with silicone or glue. Doing so will make future servicing difficult. Fisher & Paykel will not be liable for any costs associated with removing or replacing a sealed-in appliance, nor for repairing any damage that may be incurred by doing this.
- If installed with an approved flexible hose, the hose should not come in contact with the bottom of the appliance or any sharp edges. Flexible hose assemblies should be BS 699.1 certified.
- Seal exposed bare edges of the cutout with an oil-based paint or moisture-proof polyurethane to prevent possible moisture creeping between the cooktop trim and the benchtop.
- Take extreme care not to chip, crack, or break the top glass surfaces during installation. A heavy metal tool or part accidentally dropped on the glass could damage it.

① SAFETY AND WARNINGS


When you install the appliance

- If, after following the instructions given, correct performance cannot be achieved, please contact your nearest Fisher & Paykel Authorised Service Centre, Customer Care, or contact us through our website listed at the end of this document.


② PARTS SUPPLIED

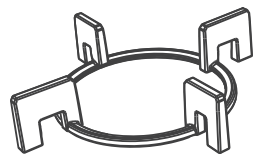

Dual Wok Pan support
(Models with a Dual Wok only)

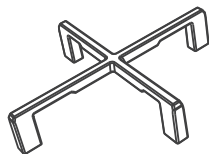

Pan support
(not supplied with
Dual Wok only models)

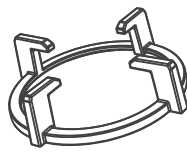

Mini wok Pan
support (1)
(CG604D only)



Small pan support (1)
(some models only)



Wok stand (1)



Fibre washer (1)



Elbow 1/2" BSP
external thread (1)



Clamping
brackets (4)
and screws (4)



LPG test point
adaptor (1)
(LPG models
only)








Installing multiple products

Note: We recommend installing multiple products in separate cutouts, with a minimum 5mm space between the glass edges of the adjacent products. If installing multiple products adjacent to each other within the same cutout, a separate joining strip kit is required for installation.

The kit is available from the nearest Fisher & Paykel Authorised Service Centre or our website listed at the end of this document.

If installing different products adjacent to each other (eg a wok burner next to an induction cooktop), the minimum clearance measurements for the different products may vary. Always use the greater distance.

③ GAS RATE SUMMARY-MODELS

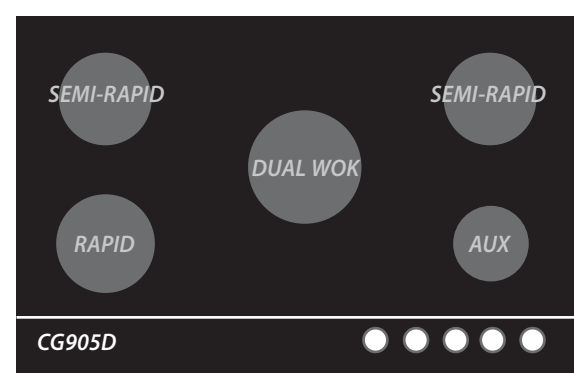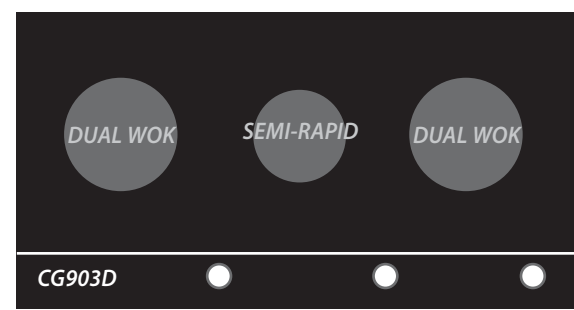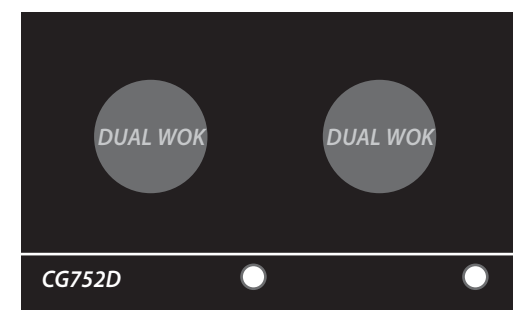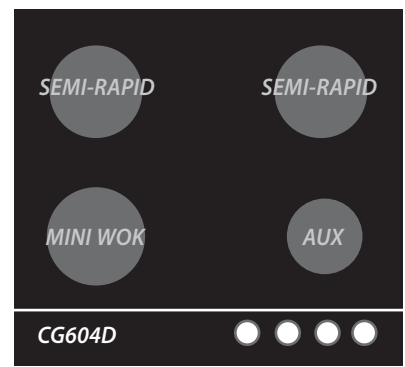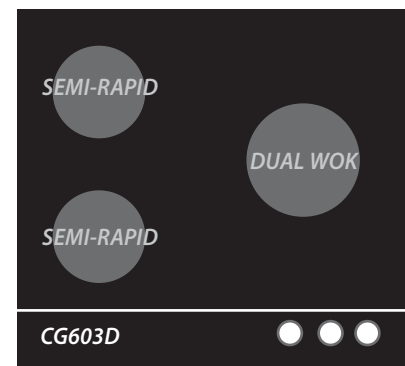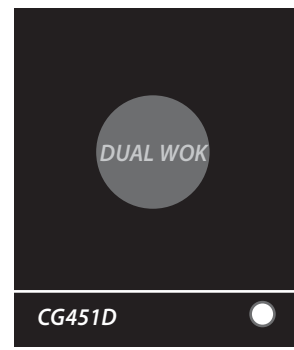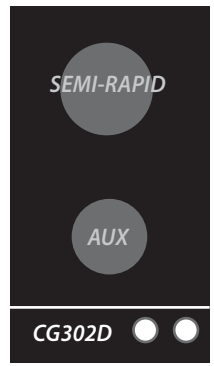


3 GAS RATE SUMMARY

All appliances are factory set for Natural gas or LPG and are not convertible. Check the appliance data label.


		CG302D, CG451D, CG603D, CG604D, CG752, CG903 & CG905													
BURNER GAS TYPE	AUX			SEMI-RAPID			RAPID			MINI WOK			DUAL WOK		
	Jet size (mm)	Nominal rating (kW)	Nominal rating (kCal/h)	Jet size (mm)	Nominal rating (kW)	Nominal rating (kCal/h)	Jet size (mm)	Nominal rating (kW)	Nominal rating (kCal/h)	Jet size (mm)	Nominal rating (kW)	Nominal rating (kCal/h)	Jet size (mm)	Nominal rating (kW)	Nominal rating (kCal/h)
NG (20mbar)*	0.78	1.1	946	1.14	2.3	1978	1.37	3.5	3010	1.41	3.6	3096	1.12 1.12 0.72	5.0	4299
LPG (29mbar)* Nominal rating (g/h)	0.56	1.2 (87 g/h)	1032	0.76	2.3 (167 g/h)	1978	0.96	3.5 (254 g/h)	3010	0.91	3.2 (233 g/h)	2752	0.69 0.69 0.50	4.5 (327 g/h)	3869

*Nominal pressure with at least one large burner on High.


4 PRODUCT & CABINETRY DIMENSIONS

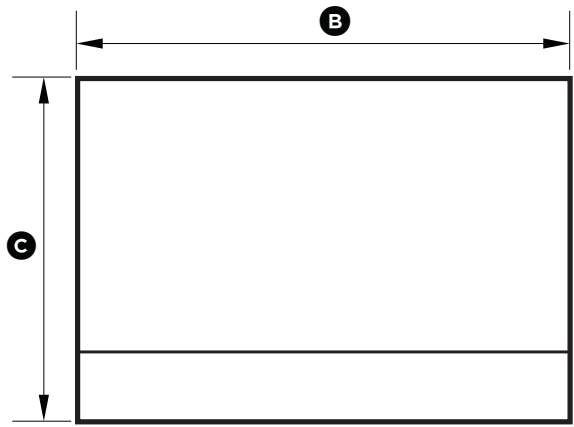


TOP

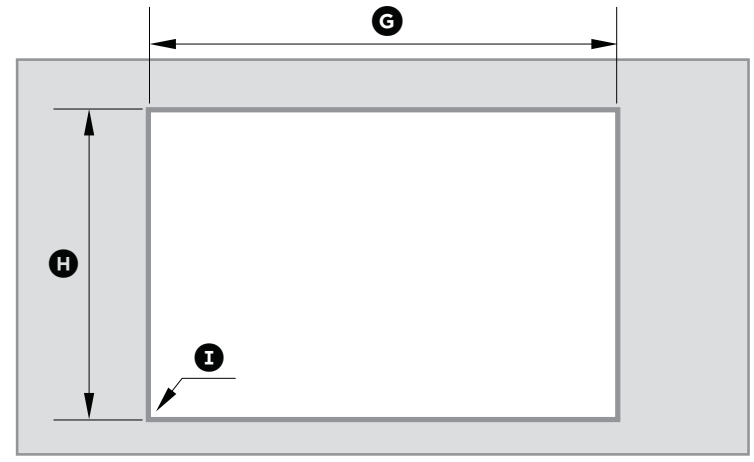

TOP

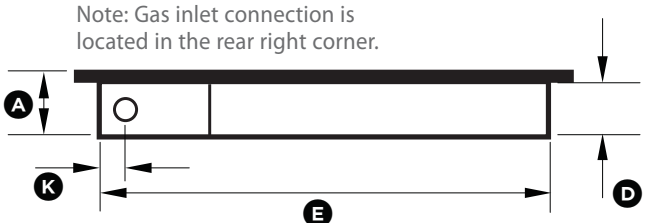

REAR

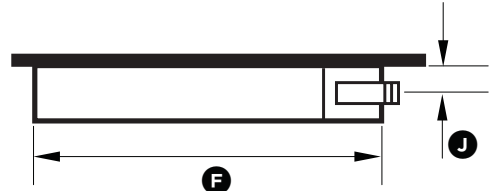

SIDE





FRONT

Product and cabinetry dimensions (mm)

	CG302D	CG451D	CG603D	CG604D	CG752D	CG903D	CG905D
A overall height of product (excluding burners, dials and pan supports)	64	64	64	64	64	64	64
B overall width of product	300	450	600	600	750	900	900
C overall depth of product	530	530	530	530	450	450	530
D height of chassis (below top of bench)	59	59	59	59	59	59	59
E width of chassis	256	406	555	555	706	856	856
F depth of chassis	486	486	486	486	410	410	486
G overall width of cutout	265	415	560	560	715	865	865
H overall depth of cutout	490	490	490	490	410	410	490
I corner radius of cutout	max. 10	max. 10	max. 10	max. 10	max. 10	max. 10	max. 10
J distance from top of bench to centre of gas inlet on product	30	30	30	30	30	30	30
K distance from edge of chassis to gas inlet on product	21	21	21	21	21	21	21

5 CLEARANCE DIMENSIONS

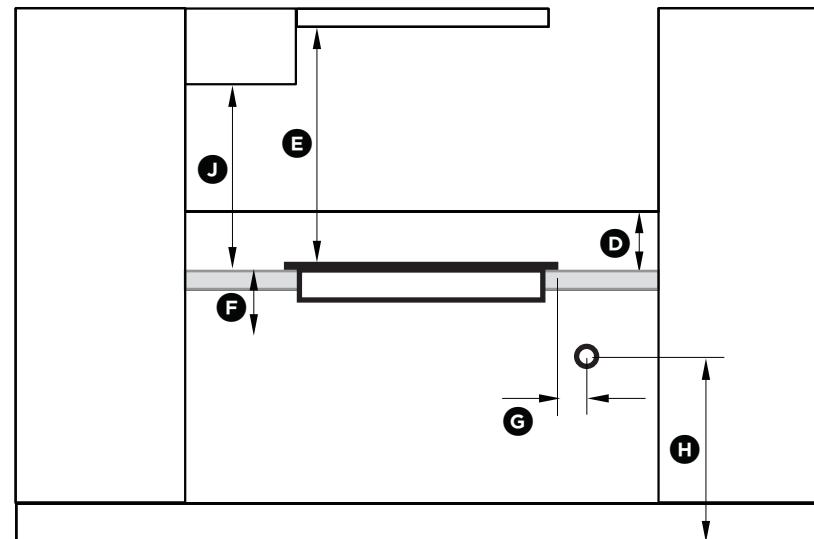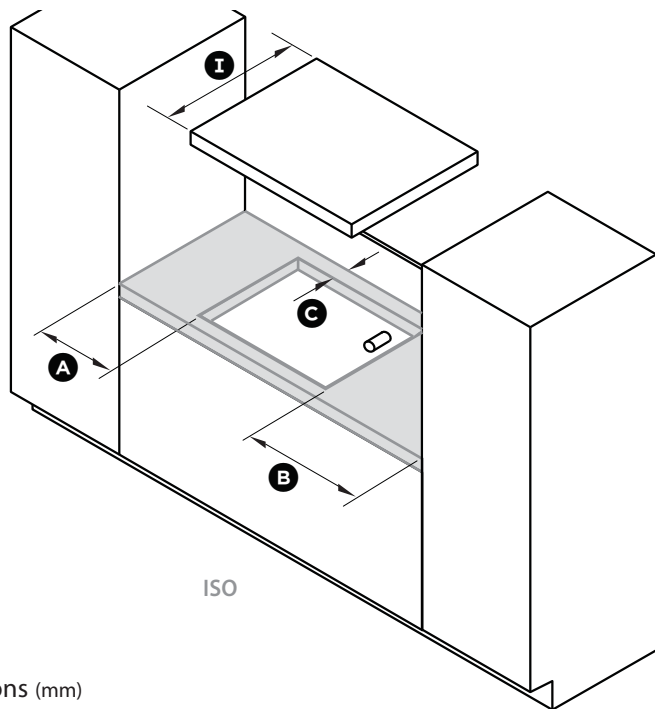


Clearance dimensions (mm)

	FRONT						
	CG302D	CG451D	CG603D	CG604D	CG752D	CG903D	CG905D
A	120	60	115	130	115	115	130
B	120	60	115	115	115	115	115
C	160	85	160	160	125	125	160
	45	45	45	45	45	45	45
D	150	150	150	150	150	150	150
E	650	650	650	650	650	650	650
	800	800	800	800	800	800	800
	650	650	650	650	650	650	650
	500	500	500	500	500	500	500
F	70	70	70	70	70	70	70
	65	65	65	65	65	65	65
G	250	250	250	250	250	250	250
H	min. 800 - max. 850	min. 800 - max. 850	min. 800 - max. 850	min. 800 - max. 850	min. 800 - max. 850	min. 800 - max. 850	min. 800 - max. 850
I	600	600	600	600	600	600	600
J	366	366	366	366	366	366	366

Note: Ensure there is an earthed power outlet within 900 mm of the centre rear of the product. The gas connector on the wall should be 800-850 mm (H) above the floor and to a distance of at least 250 mm (G) outside the width of the product, on the right-hand side. It should be accessible with the product installed.


6 FLUSH MOUNTING INSTALLATION (NOT RECOMMENDED)

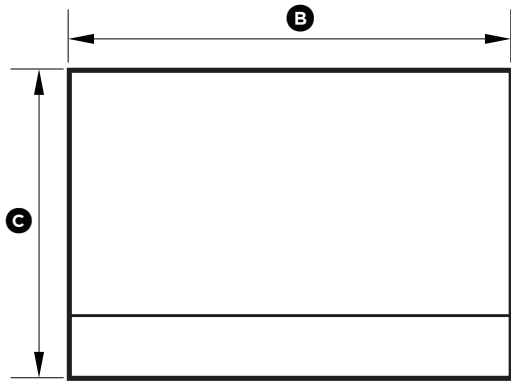

TOP

⚠ WARNING!


We do not recommend flush mounting and sealing as servicing requires the cooktop to be removed from the benchtop. The owner carries all risk for flush mounting the cooktop. The owner must ensure the cooktop has been cut out from the benchtop before servicing can be carried out. Fisher & Paykel will not be liable for any costs associated with removing or replacing a flush-mounted and/or sealed-in product, nor for repairing any damage that may be incurred by doing this.

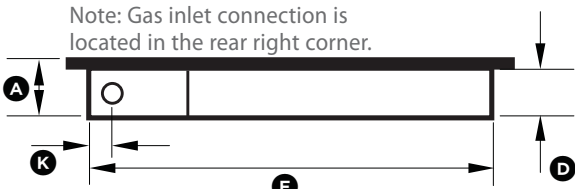

REAR



SIDE

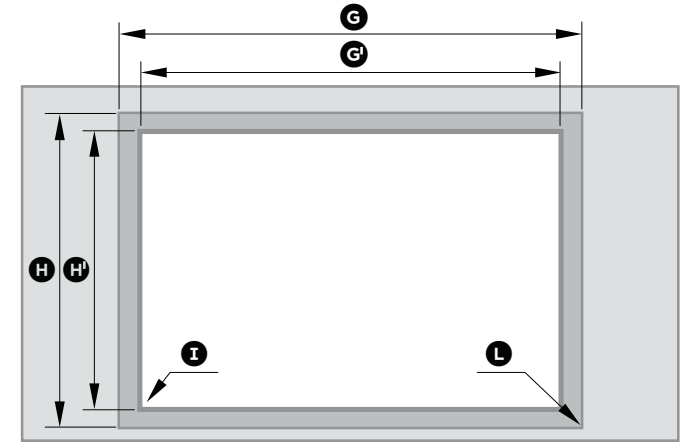

TOP




FRONT

Product and cabinetry dimensions (mm)


	CG302D	CG451D	CG603D	CG604D	CG752D	CG903D	CG905D
A overall height of product (excluding burners, dials and pan supports)	64	64	64	64	64	64	64
B overall width of product	300	450	600	600	750	900	900
C overall depth of product	530	530	530	530	450	450	530
D height of chassis (below top of bench)	64	64	64	64	64	64	64
E width of chassis	256	406	555	555	706	856	856
F depth of chassis	486	486	486	486	406	406	486
G overall width of routed recess	305	455	605	605	755	905	905
G' width of cutout	265	415	560	560	715	865	865
H overall depth of routed recess	535	535	535	535	455	455	535
H' depth of cutout	490	490	490	490	410	410	490
I corner radius of cutout	max. 10	max. 10	max. 10	max. 10	max. 10	max. 10	max. 10
J distance from top of bench to centre of gas inlet on product	35	35	35	35	35	35	35
K distance from edge of chassis to gas inlet on product	21	21	21	21	21	21	21
L corner radius of routed recess	max. 2	max. 2	max. 2	max. 2	max. 2	max. 2	max. 2
M height of routed recess	5	5	5	5	5	5	5
N minimum clearance below top of benchtop to:							
combustible surface	75	75	75	75	75	75	75
Fisher & Paykel oven or nearest non-combustible surface	70	70	70	70	70	70	70

⑥ FLUSH MOUNTING INSTALLATION (NOT RECOMMENDED)


⑥a) ROUTER THE BENCHTOP TO THE SPECIFIED DEPTH

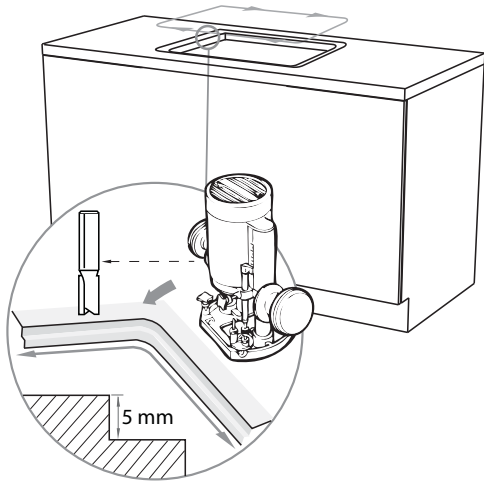


⑥b) FIT THE CLAMPING BRACKETS

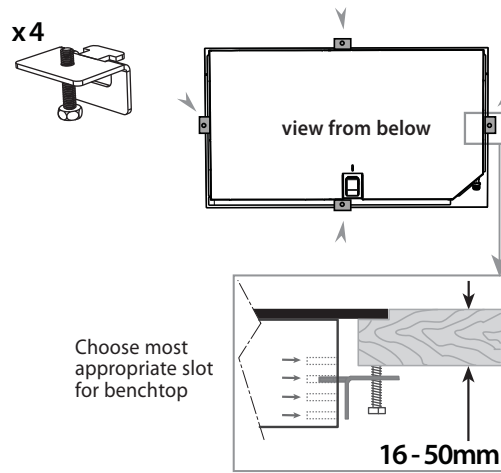

⑥c) MASK OFF THE AREA TO BE SILICONED

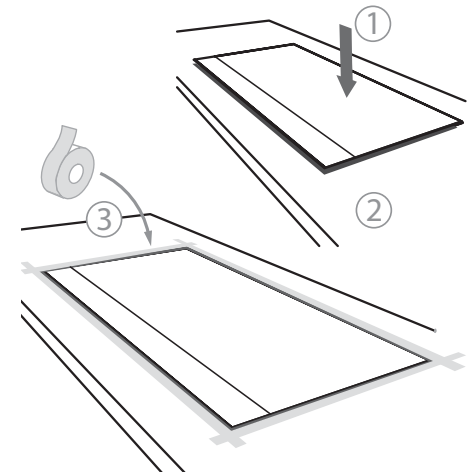


⑥d) APPLY SILICONE

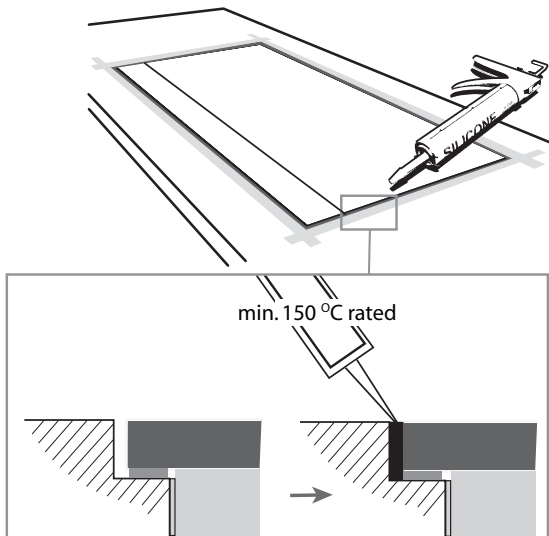


Ensure silicone does not leak underneath glass.


⑥e) WIPE OFF EXCESS SILICONE

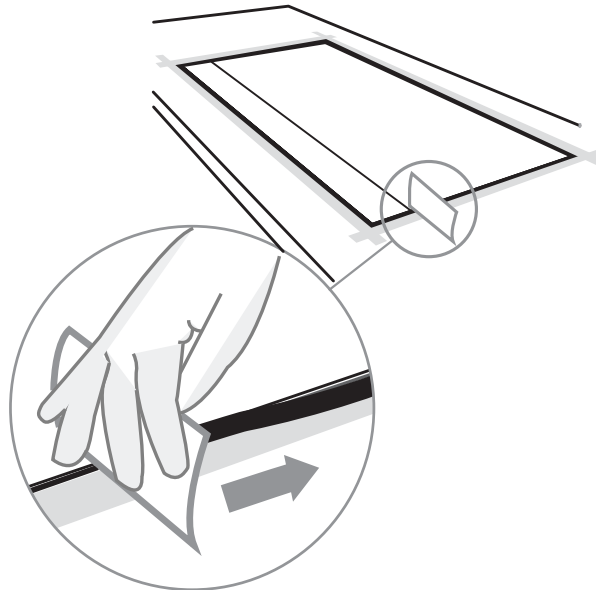


⑥f) IF REMOVING PRODUCT, CUT AROUND THE SILICONE

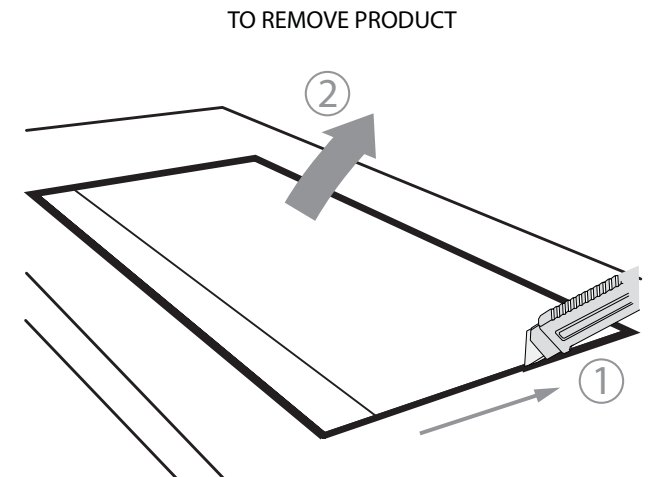


7 DISCARD PACKAGING

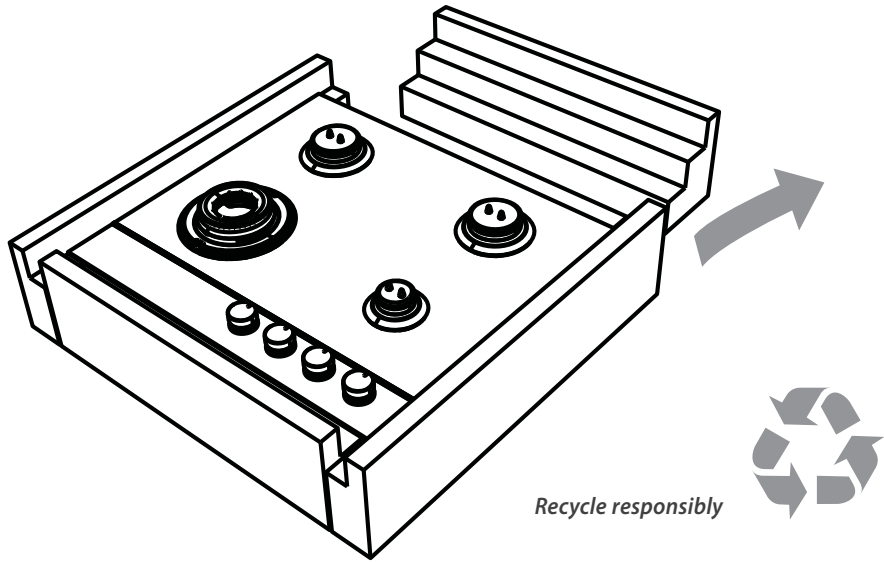


8 REMOVE THE TWO TRANSIT SCREWS

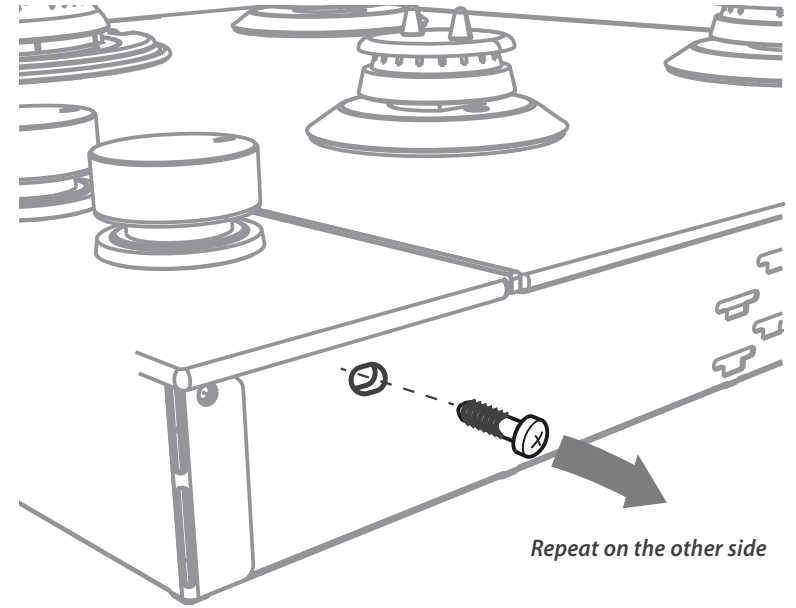


9 FIT THE ELBOW AND WASHER

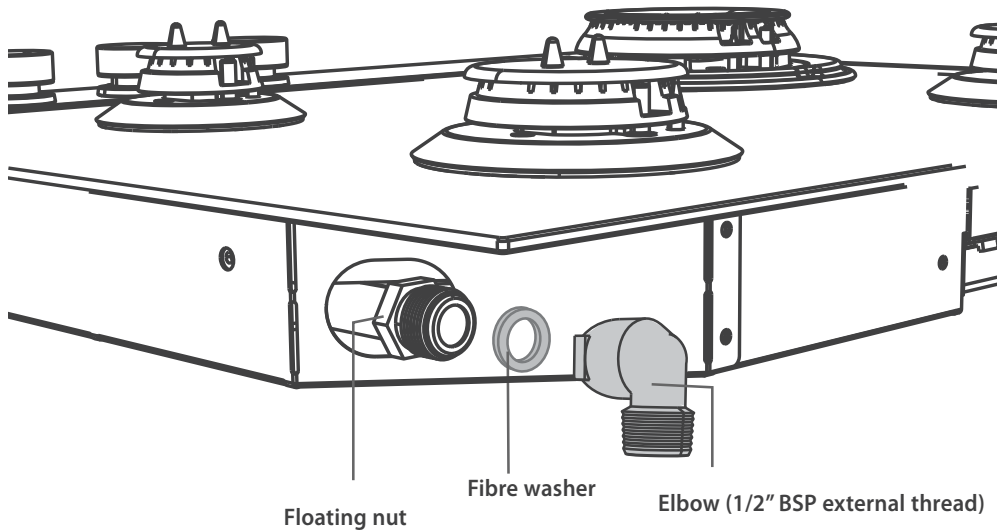


10 LOWER GENTLY INTO THE CUTOUT

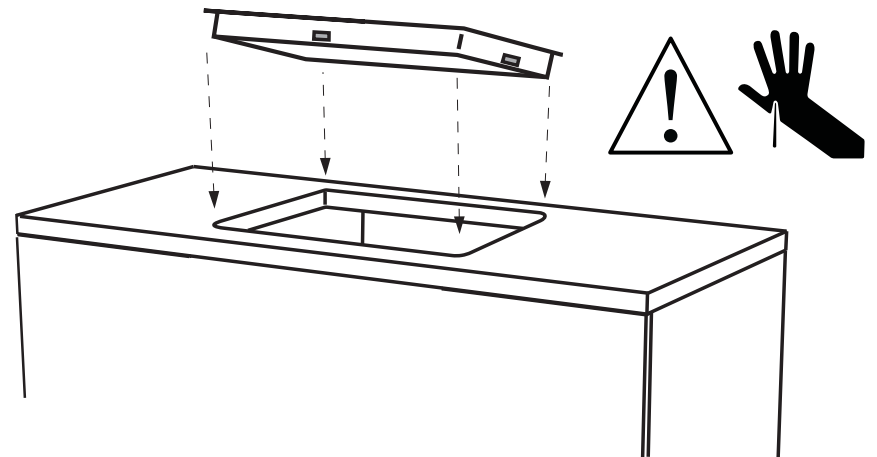

11 FIT CLAMPING BRACKETS BASED ON THE BENCHTOP THICKNESS

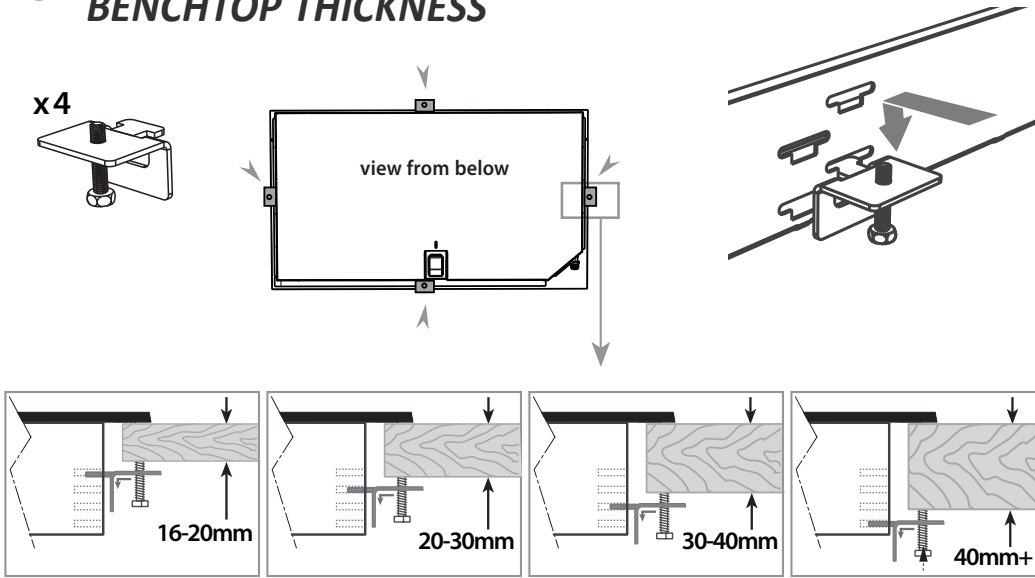

12 SECURE TO BENCHTOP

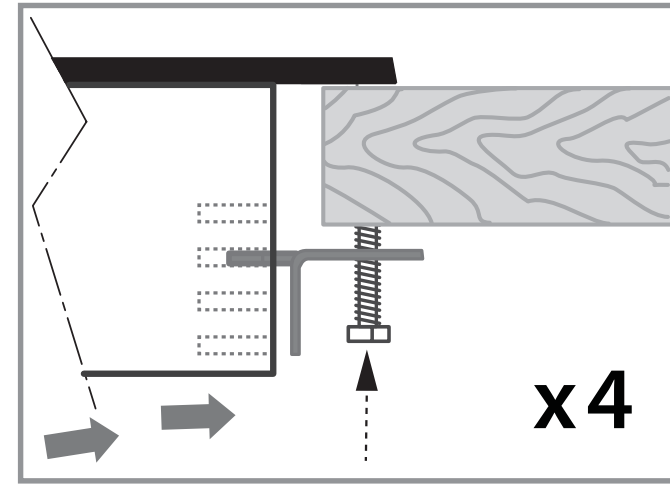

Repeat on all the other sides

13 CONNECT TO GAS SUPPLY

NG Models

Adjust to obtain a **test point pressure of 20 mbar** with all burners operating at highest setting.


LPG Models



- Make sure to fit the supplied test point adaptor.
- Make sure the **supply pressure is regulated to 29 mbar**, with all burners operating at highest setting.

ALL Models



- Make sure the connection point will be accessible with the cooktop installed.
- To enable the gas supply to be readily shut off by the customer, make sure the connection is fitted with an isolating valve close to the cooktop.

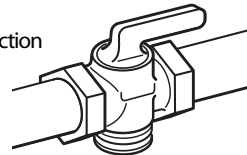


If connecting the gas with a flexible hose:

- Ensure the hose is long enough to allow for removal of cooktop for servicing.
- Make sure the connector is located as shown in step 5 CLEARANCE DIMENSIONS.
- The hose assembly must be BS 699.1 certified, with an Rp 1/2" (ISO 7-1) female thread connection.
- The hose assembly must be no longer than 1.2 m in length with minimum internal diameter of 10 mm and comply with local codes and standards requirements.
- The hose must not be kinked, subjected to abrasion or permanently deformed.
- The hose must not be near or in contact with any hot surfaces (e.g. base of metal hotplate, flue, or chassis of underbench oven etc.)

14 CHECK ALL CONNECTIONS FOR GAS LEAKS

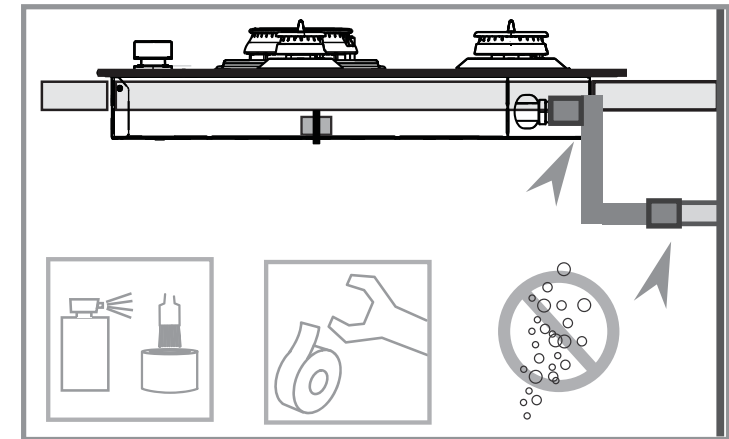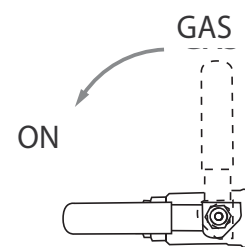


15 AFFIX DUPLICATE DATA LABEL SOMEWHERE ACCESSIBLE & PLUG COOKTOP IN

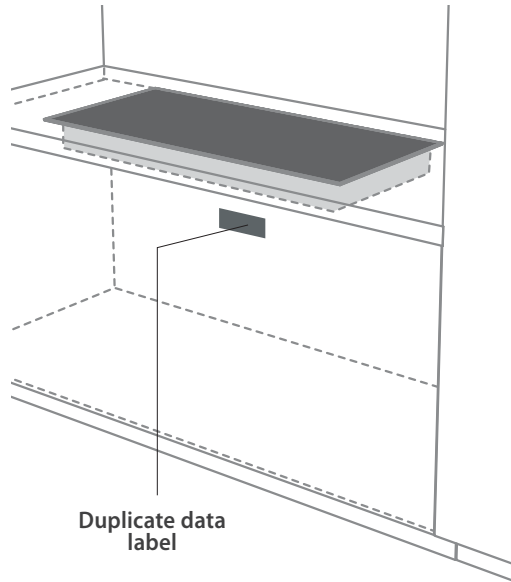

16 FIT PAN SUPPORTS

Ensure the pan supports are located securely and in the correct orientation (refer to User guide)

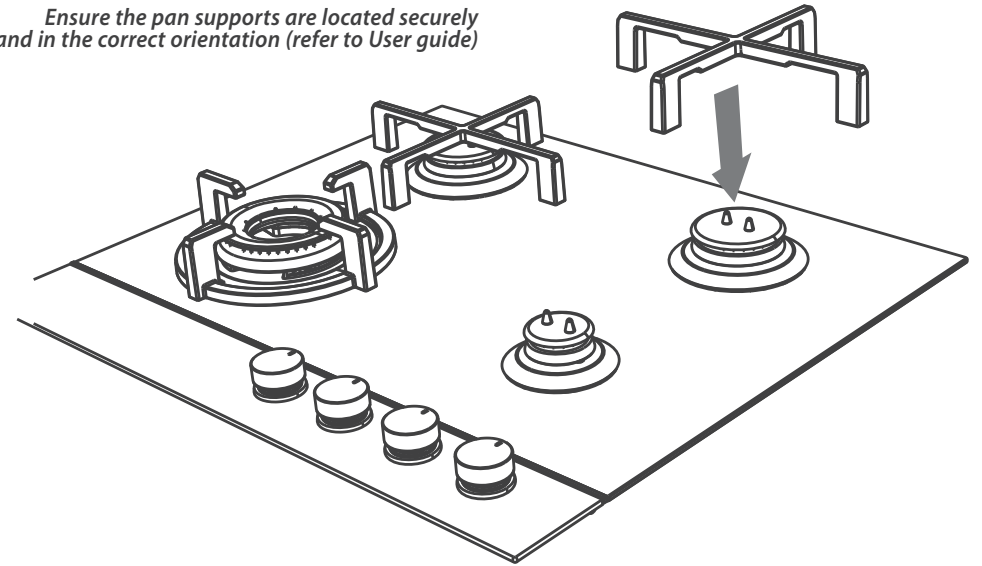

17 TEST OPERATION

- To check that the ignition system operates correctly, light each burner by itself, then all burners in combination.
- Check for a well-defined blue flame without any yellow tipping.
- If any abnormality is evident, check that the components of the burner assembly are located properly
- If proper operation cannot be obtained, contact Customer Care or your nearest F&P Authorised Service Centre.

The cooktop must not be used by the customer until proper operation has been achieved.





TO BE COMPLETED BY THE INSTALLER

- Have you installed the clamping brackets?
- Have you verified that the type of model (factory-set for NG or LPG) matches the type of gas at the site of installation?
- Have you used the fibre washer supplied?
- Have you leak-tested all connections?
- Is the appliance set to the correct working pressure?
- Have you affixed the supplied duplicate data plate label on an adjacent surface accessible to the customer?
- Is the cooktop earthed?
- Have you checked that the power supply cable is NOT touching the cooktop?

OPERATION:

- Do all burners ignite both individually and in combination?
- Are the flames consistent and appropriately sized?
- Have you demonstrated the basic operation to the customer?

Installer's name:

Installer's signature:

Installation company:

Date of installation:

LEAVE THESE INSTRUCTIONS WITH THE CUSTOMER

Important!
SAVE THESE INSTRUCTIONS

The models shown in this document may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please visit our local website listed at the end of this document or contact your local Fisher & Paykel dealer.

