FISHER & PAYKEL

DOUBLE DISHDRAWER™ DISHWASHER

DD60DI & DD60DHI models

INSTALLATION GUIDE

NZ AU GB IE SG

591383C 05.19

SAFETY AND WARNINGS

AWARNING!

Electrical shock hazard Before installing the dishwasher, remove the house fuse or open the circuit breaker. This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-earthing conductor and an earthing plug. The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.



WARNING- Improper connection of the equipment-earthing conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly earthed.

Do not modify the power supply plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an extension cord, adapter plug or multiple outlet box.

Failure to follow this advice may result in electrical shock or death.

AWARNING!

Cut Hazard Take care - panel edges are sharp. Failure to use caution could result in injury or cuts.

A WARNING!

Fitting integrated front panels requires access to electrical service areas.

This work must be performed and certified by a qualified electrical service technician.

Electrical Shock Hazard

WARNING: To reduce the risk of electrical shock, fire, or injury to persons, the installer must ensure that the dishwasher is completely enclosed at the time of installation. Before fitting the front panels and connecting the integrated badges (where present), the installer must ensure that the dishwasher is disconnected from the power supply. After installing the front panels, the installer must ensure that the following components are electrically earthed; the panel bracket, the integrated badge (where present) and any custom metal component (eg handle) that extends past the rubber seal. Failure to follow these warnings may result in electrical shock, injury or fire.

IMPORTANT SAFETY INSTRUCTIONS

- Installation of this dishwasher requires basic mechanical and electrical skills.
- Be sure to leave these Instructions with the Customer.
- Installation must comply with your local building and electricity regulations.
- At the completion of the dishwasher installation, the Installer must perform the Final Checklist.
- Remove all packaging materials supplied with the dishwasher.
- This dishwasher is manufactured for indoor use only.
- Ensure all water connections are turned OFF. It is the responsibility of the plumber and electrician to ensure that each installation complies with all Codes and Regulations.
- The dishwasher MUST be installed to allow for future removal from the enclosure if service is required.
- The switched power outlet must be outside the dishwasher cavity, so that it is accessible after installation.
- Care should be taken when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord and hoses.
- If the dishwasher is to be relocated from one installation to another it must be kept upright to avoid damage from water spillage.
- Make sure only new hoses are used for connection (supplied with the dishwasher). Old hoses should not be reused.
- Failure to install the dishwasher correctly could invalidate any warranty or liability claims.

IMPORTANT SAFETY INSTRUCTIONS

- Ensure the product is not plugged in when fitting custom panels.
- Installation of custom panels requires basic mechanical and electrical skills.
- Installation must comply with your local building and electricity regulations.
- Failure to install the custom panels correctly could invalidate any warranty or liability claims.

IMPORTANT! SAVE THESE INSTRUCTIONS

The models shown in this installation guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, go to our website www.fisherpaykel.com or contact your local Fisher & Paykel dealer.

2 PARTS SUPPLIED



Drain hose support (1)



Drain hose joiner (1)



Wire clip (2) (for securing Drain hose joiner)



Clamp (1) (for securing Drain hose joiner)



Side mounting bracket kit (A and B) (2) OPTIONAL




Top mounting brackets (2) OPTIONAL



Phillips 16 mm screws (9)


T

Rubber washer for inlet hose (1) (comes already fitted)

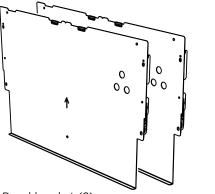

Panel bracket (2) & Knock-to-Pause Module (2) (shipped fixed to product)

Panel mounting screws (12)

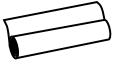

Moisture protection tape (1) (to prevent moisture damage to cabinetry)

ΠΩ

Hexagonal socket for feet adjustment (2) (long & short)

Prefinished toekick (1)



Toekick panel cutting template (1) (To enable a custom toekick panel to be cut to fit the product profile dependant on the depth of the toekick)




Toekick mounting bracket (1) (A custom toekick panel of any material with thickness 9 - 19mm can be screwed to the Toekick mounting bracket)


Toekick mounting screws (5)


Dishdrawer[™] installation overview

This video provides an overview of what is needed to install a DishDrawer™. It is intended as an overview only of the installation process and is not intended to be used as a guide on how to install a DishDrawer™ yourself. https://vimeo.com/325297597

If the Drain hoses supplied are not long enough to reach your services, you must use a Drain Hose Extension Kit P/N 525798 which will extend the drain hoses by 3.6 m. The kit is available from the nearest Fisher & Paykel Authorised Service Centre or our website.

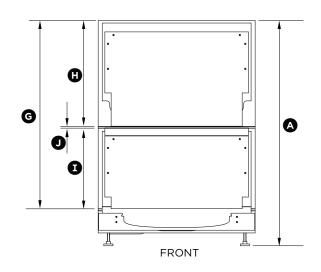

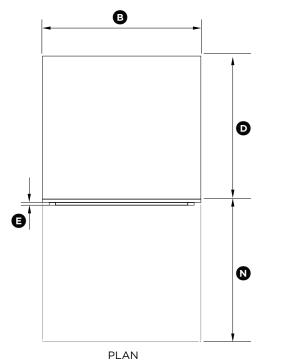

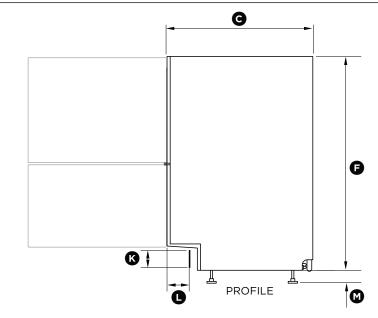


DD60DI DD60DHI

	DD00DIII
PRODUCT DIMENSIONS	ММ
(A) Overall height of product ^{1, 2}	820-880
B Overall width of product	599
© Overall depth of product ³	571
Depth of chassis (to back of front drawer panel)	553
E Depth of drawer front panel	16-20
(F) Height of chassis ¹	811
G Height of drawer front panels	min. 717
(H) Height of upper drawer front panel	min. 398
Height of lower drawer front panel	311-360
(J) Ventilation gap between drawer front panels	8
K Height of toekick (customisable)	58-118
L) Depth from front of drawer panel to front of toekick (adjustable) ^{4,5}	40-100
M Height of leveling feet (adjustable) ²	9-69
N Maximum extension of drawer ³	545
¹ includes 2mm high bracket slots ² depending on adjustment of leveling feet ³ assuming front panel thickn	ess of 18mm
⁴ adjustable to match toekick recess on adjoining cabinetry	


⁵ assuming custom toekick panel thickness of 18mm; if recess is between 50-84mm deep, the panel will need to be cut out - see step 'Custom panel calculations'

(4) CABINETRY DIMENSIONS

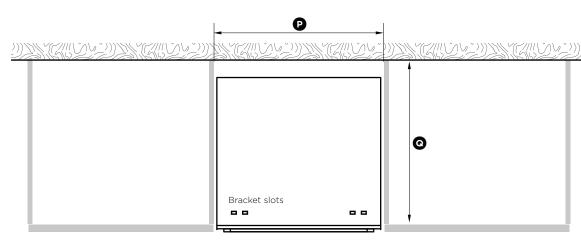


PLAN

	DD60DI DD60DHI
CABINETRY DIMENSIONS	ММ
Inside height of cavity*	min. 820
P Inside width of cavity	600
Inside depth of cavity	min. 560
R Recommended height of adjacent cabinet space	720
(s) Height of toekick space*	100-160
* depending on adjustment of levelling feet	

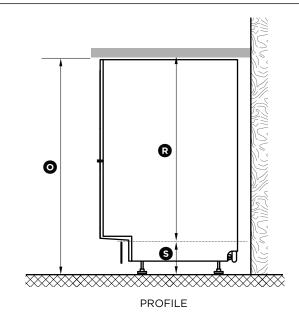

Minimum clearances from adjacent cabinetry

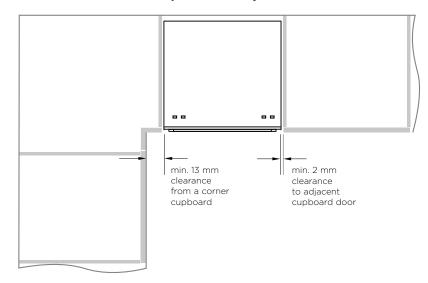


FRONT PANEL MATERIAL SPECIFICATIONS

- 16 20mm panel thickness
- Adequately sealed to withstand moisture (50°C @ 80% RH) Because of it being a hot and wet environment generally, the back and sides of the panel should be completely sealed with a waterproof vapour barrier (ie polyurethane) to prevent damage to the panel.
- The back of the panel (including any integrated handle) should be completely flush so that the seal between the panel and the rubber trim is maintained.
- Installation outside these specs may result in condensation on cabinetry surfaces.
- Maximum weight of each panel: 9kg

The following calculations assume the top of the upper panel is aligned with the top of the adjacent cabinetry. The final panel/cabinetry alignment is achieved by adjusting the feet:

WIDTH OF ALL PANELS


Measure A (the width between adjacent door/drawer fronts) and write it in the first box below, then complete the equation.

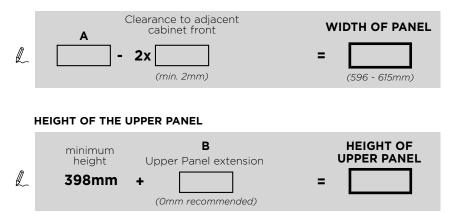


Note: The 'upper panel extension' **B** allows for the top of the upper panel to extend above the chassis where required, however a min. 2mm gap to the benchtop must be maintained.

HEIGHT OF THE LOWER PANEL

Measure C (door/drawer height (or equivalent)) and write it in the first box below, then complete the equation.

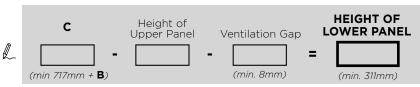

Note: The 'upper panel extension' **B** allows for the top of the upper panel to extend above the chassis where required, however a min. 2mm gap to the benchtop must

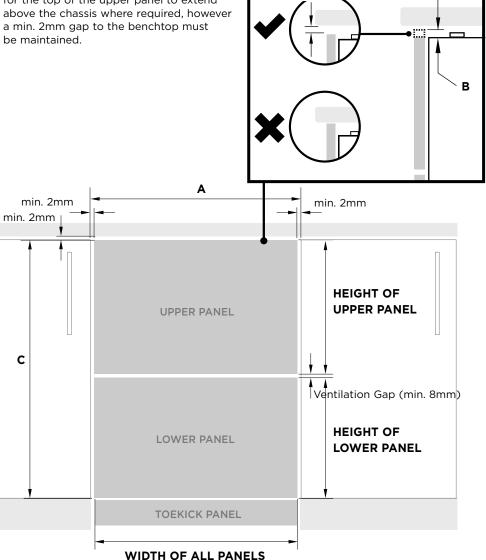


min. 2mm

TOEKICK PANEL MATERIAL SPECIFICATIONS


- min. 9mm panel thickness if using supplied screws
- Adequately sealed to withstand moisture (50°C @ 80% RH)
- You may choose to affix your custom toekick panel either by screwing it or gluing it to the supplied mounting bracket.

HEIGHT OF THE TOEKICK PANEL

Measure D (height from the top of adjacent cabinet door fronts to the floor) and write it in the first box below, then complete the equation.

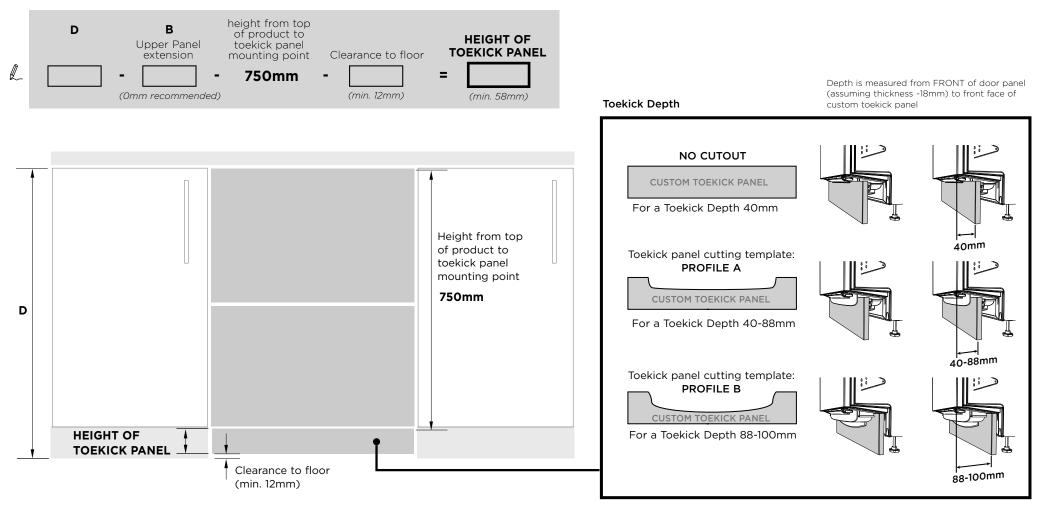

O CAVITY PREPARATION

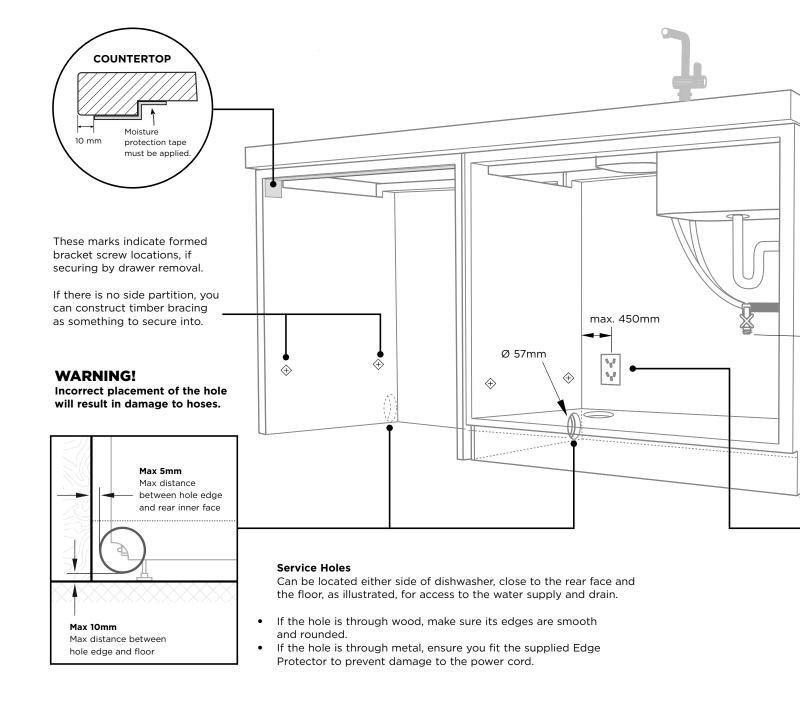

Water Connection

Recommended **COLD** (Maximum 60°C).

3/4" BSP (GB20) to suit flat washer.

Water Pressure

Water softener models Max. 1 MPa (145 psi) Min. 0.1 MPa (14.5 psi)

Models without water softener Max. 1 MPa (145 psi) Min. 0.03 MPa (4.3 psi)

Kosher requirements


Drains will need to be separated to satisfy kosher requirements. We suggest you confirm acceptability with your local rabbi in respect to kosher installations.

IMPORTANT!

200 mm


min.


The power outlet must be located in a cabinet adjacent to the dishwasher cavity. 220-240 VAC min. 9.5 A

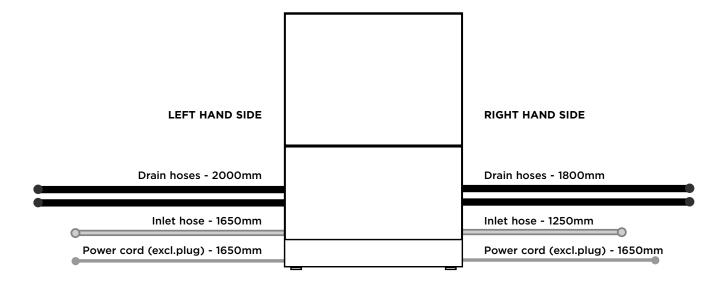

NOW CHOOSE WHICH INSTALLATION METHOD (A) OR (B) IS MORE SUITABLE FOR YOUR CABINETRY...


9 RECOMMENDED METHOD (A) - SECURE WITHOUT DRAWER REMOVAL (FRAMELESS CABINETRY ONLY)

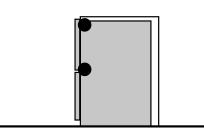


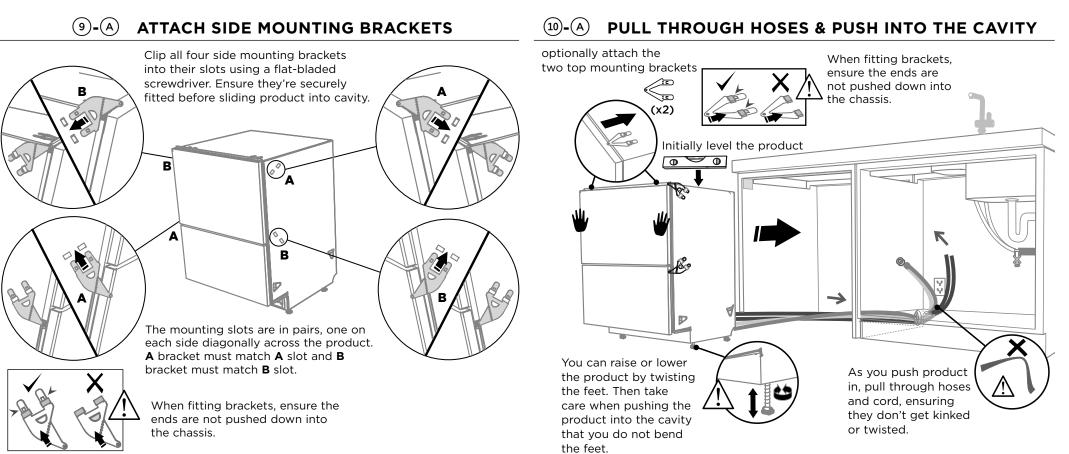

11-A SECURE TO THE CABINETRY ON THE SIDES


12-A OPTIONALLY SECURE TO THE CABINETRY ABOVE

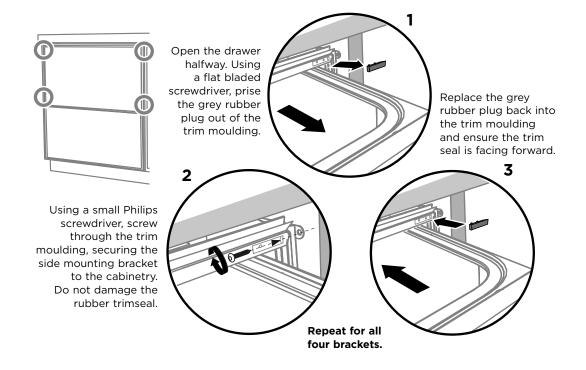

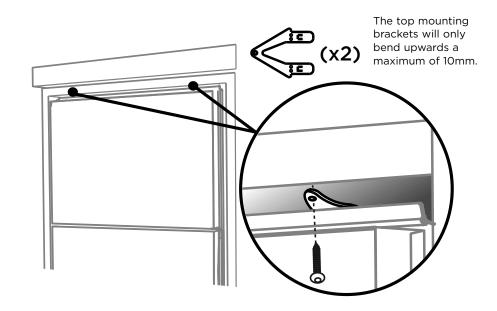

(13)-(A) AFTER SECURING, REFER TO 'FIT THE SUPPLIED TOEKICK PANEL' STEP

(9) ALTERNATIVE METHOD (B) - SECURE BY DRAWER REMOVAL

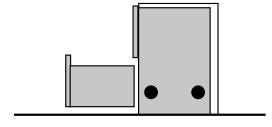


(9)**-**(B) **PULL THROUGH HOSES & PUSH INTO THE CAVITY**

(10)**-**(B) **REMOVE THE LOWER DRAWER**


100 mm

Lift drawer off runners.

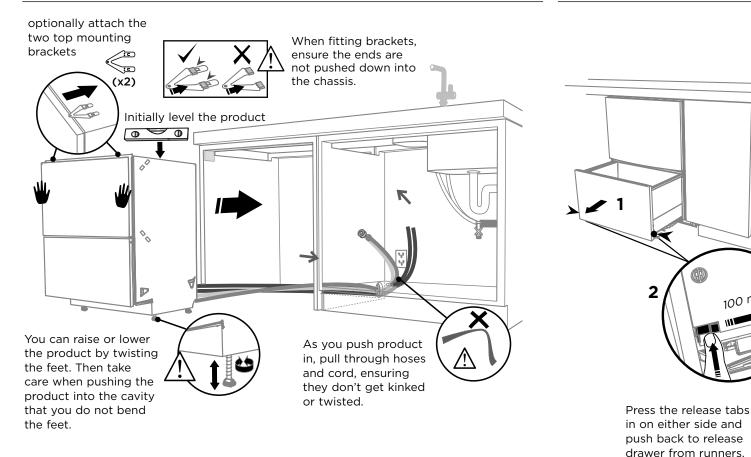


To prevent kinked hoses

Either sit the drawer down on the left hand side (recommended) or rotate the drawer clockwise, resting it on its side after removal.

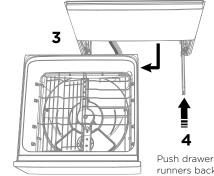

Sit the drawer down

runners back in on either side.

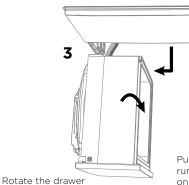


clockwise (max. 90°) and rest on side.


Push drawer runners back in on either side.

12-B OPTIONALLY SECURE TO THE CABINETRY ABOVE


(1)-(B) SECURE TO THE CABINETRY ON THE SIDES

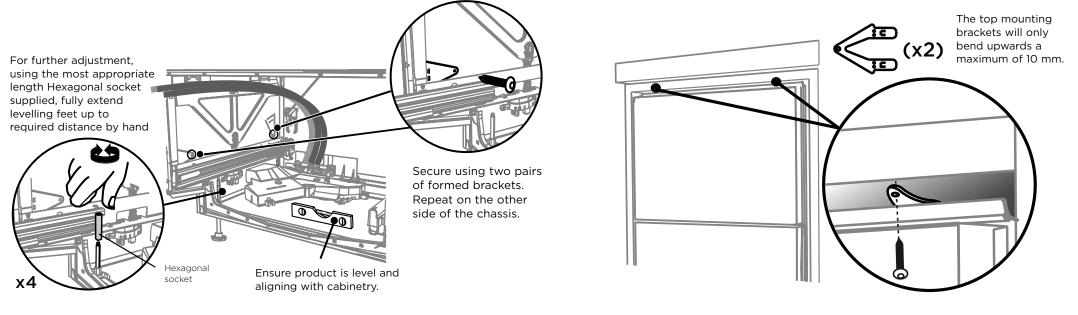

13-B REFIT THE DRAWER ONTO THE RUNNERS

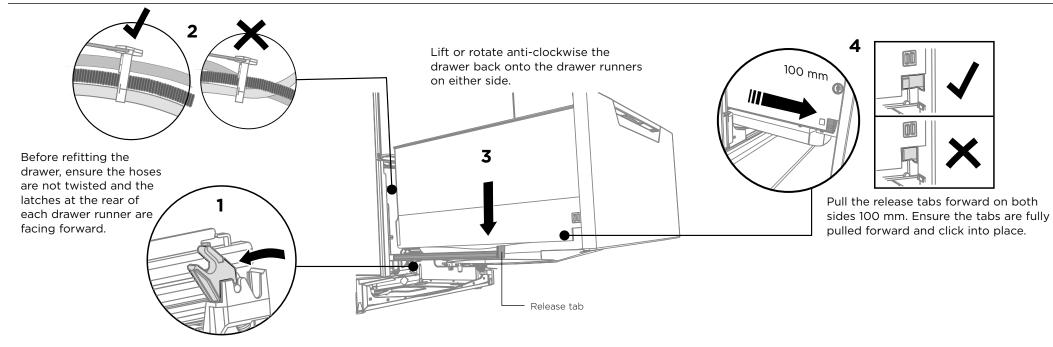


(14)-(A) **REMOVE BOTH PANEL BRACKETS FROM PRODUCT**

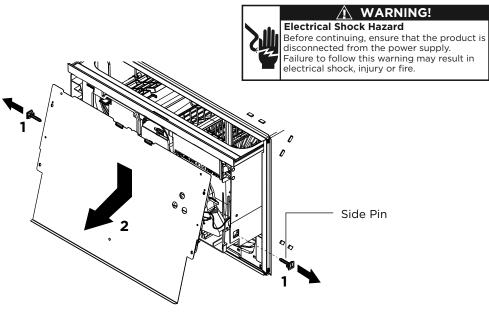


Remove side pins and gently pull off the panel bracket slightly.

Repeat for the other drawer.

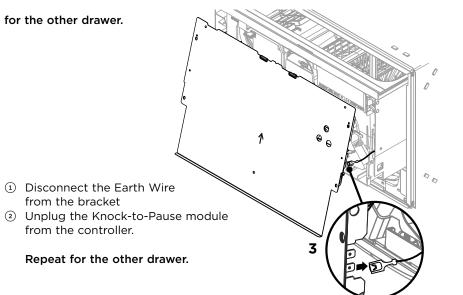

(14)**-**(B) **REMOVE THE KNOCK-TO-PAUSE MODULE**

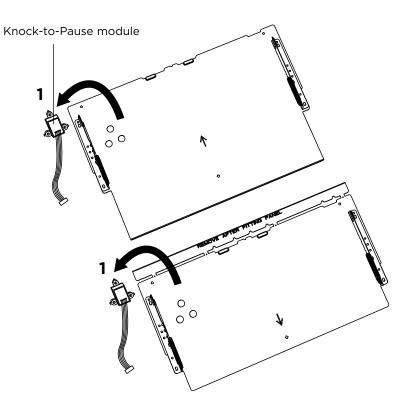


Remove the Knock-to-Pause module from the back of the bracket.

Repeat for the other bracket.

14-C ATTACH CUSTOM PANELS TO PANEL BRACKETS

3 16mm 0 0 There must be at least 3 screws used each side. 0 Align bottom of each custom panel with the bottom of each bracket. **IMPORTANT!** Break off and discard the tab at the top of the Lower Panel Bracket.

(14-D) ATTACH KNOCK-TO-PAUSE MODULES TO CUSTOM PANELS

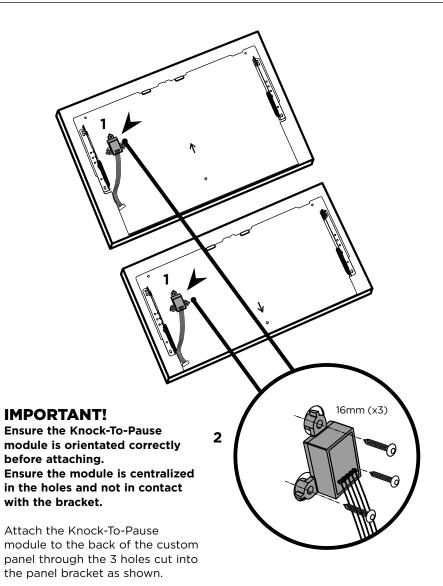



Use all 3 screws provided.

٠

٠

Repeat for the other module.

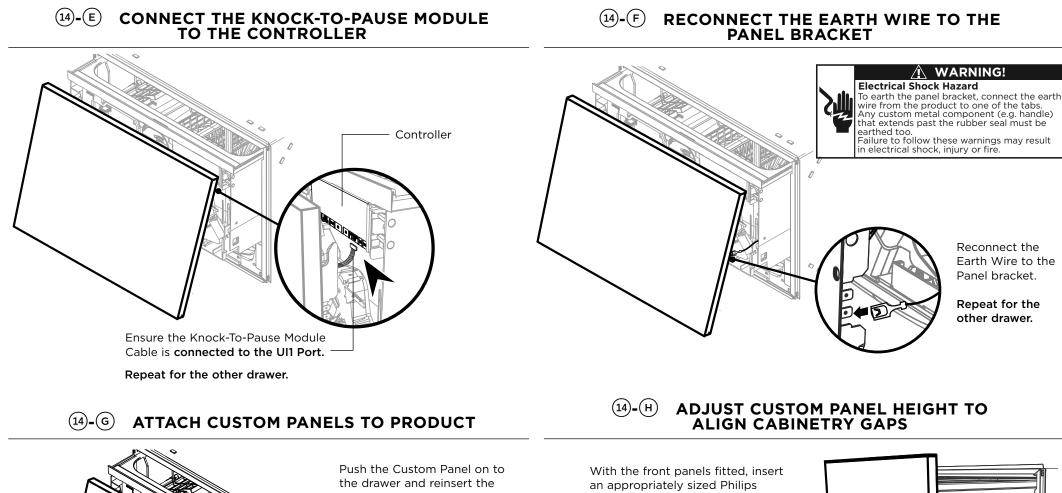

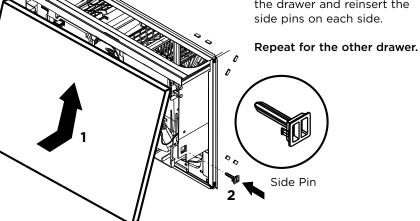


With the front panels fitted, insert an appropriately sized Philips screwdriver into the hole above the side pin and rotate the panels up or down to align the gaps in your cabinetry.


Repeat on the other side if necessary.

Each panel has a maximum travel of 2mm up or down.


IMPORTANT!


Ensure that you maintain a minimum of 8mm ventilation gap between the upper and lower panels.

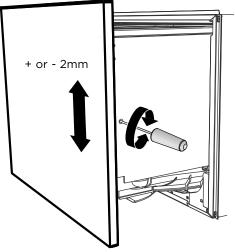

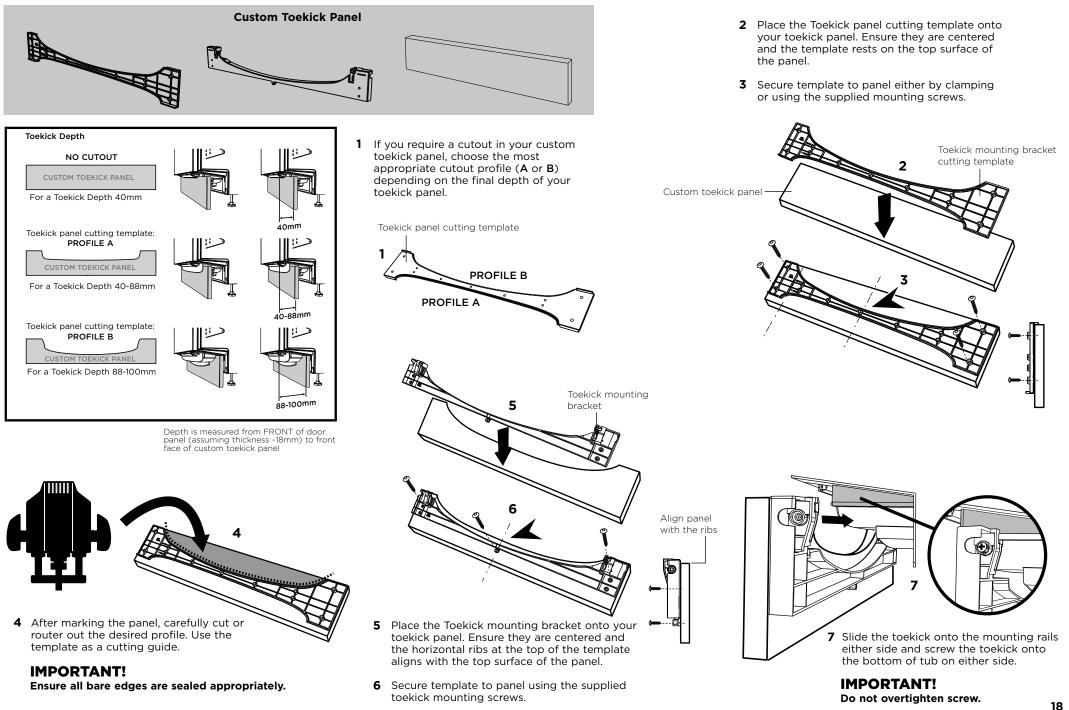

16 FIT THE SUPPLIED PREFINISHED TOEKICK PANEL (IF PREFERRED)

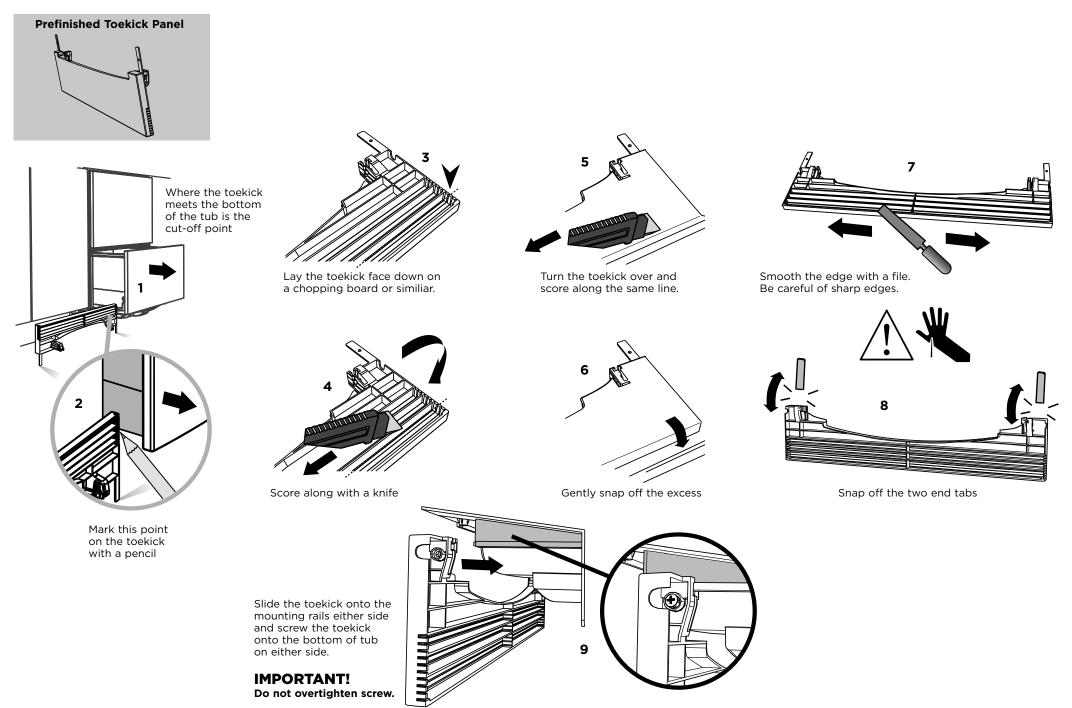

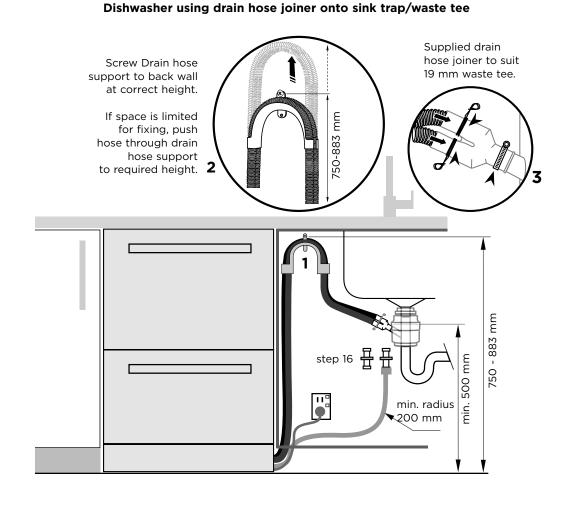

DRAINAGE OPTION 2




max

20 mm

ш

50-883

support to back wall at correct height. If space is limited for fixing, push hose through drain hose support to required height. **2**

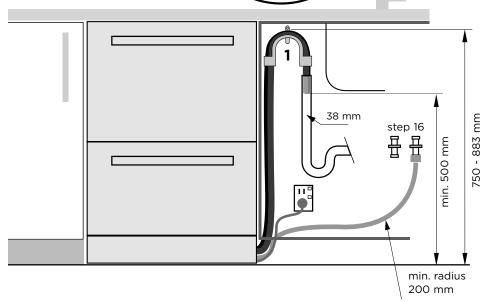


IMPORTANT!

Ensure that drain hose is installed as close to the underside of the benchtop as possible. This will ensure no waste re-enters the drain hose in the event of poor flow or a blockage in the plumbing.


Ensure the drain hose does not extend into water retained in the trap; an air gap is required to prevent waste water from siphoning back into the tub.

IMPORTANT!

Ensure that drain connection complys with local plumbing regulations.

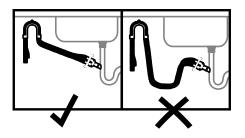

Ensure drain hose is routed straight to the joiner so that waste water does not accumulate in the hose. Remove *excess* drain hose material if necessary. **Do not shorten the inlet hose.**

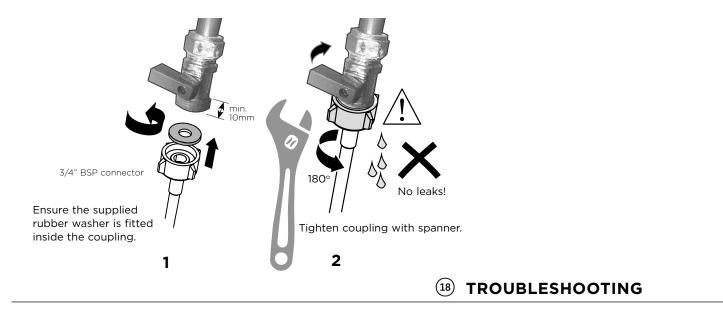

- Excessive water remaining above the filter plate, after the rinse cycle. (This is displayed as an A3 fault. See user guide 'How to attend to a fault') Check for a kinked drain hose, blocked or incorrectly drilled out waste connection, highloop not properly installed, drain hose not routed correctly or spray arms not in place.
- No water supply. (This is displayed as an A1 fault. See user guide 'How to attend to a fault') Check water is connected and turned on.
- The dishwasher is beeping continuously There is a fault. See section 'How to attend to a fault' in the User guide for further information and instructions.
- No program indicator lights up when the drawer is opened Ensure power is connected and is switched on. If it is and still no indicator lights up, see the 'Preference options' section of the 'Quick start guide'. An option called 'Open drawer auto power-on' may need to be turned on.
- Water around water supply and drainage connections Check connections, existing plumbing and hoses for leaks. Check rubber washer and hose clamp are correctly fitted.
- If product is tipping Ensure the product is secured to the cabinetry.
- If front panels are misaligned

Check and relevel product. Unscrew the product from the cabinetry. Adjust the feet to level the product, then re-secure to the cabinetry. Check the cabinetry is square.

• Drawer doesn't close properly

Ensure nothing is obstructing the drawer from closing properly eg hoses or drawer latches.

- If a problem occurs, consult the 'Troubleshooting' section of the User guide.
- If after checking these points you still need assistance, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, or contact us through our website, listed below.

TO BE COMPLETED BY THE INSTALLER

Turn on the power and water supplies, then open the drawers. You should hear a Check all parts are installed. beep and see a program indicator light up on the control panel. Ensure that all panels and parts thereof are secure and final electrical tests have Check the spray arms are in place, mounted correctly and free to rotate, by been conducted in accordance with local electrical regulations. physically rotating by hand. Ensure product is level, securely fastened to the cabinetry and opens and closes freely. The drawers must be free to fully close with no resistance from the cabinetry. Ensure inlet hose to water supply has supplied rubber washer fitted, and that it's tightened a further half turn after seal contact. Ensure any knockouts or plugs in drain connection have been drilled out and drain connection has been made. Spray arm The drain hose joiner must not support the weight of excess hose material. Keep drain hose as fully extended as possible to prevent sagging. Any excess length of drain hose should be kept on the dishwasher side of the highloop. Add three cups of water into the drawer. Press \gg until the indicator of the 'Rinse' If connecting the drain hose to the sink trap, ensure the Highloop is a minimum program lights up. Close the drawer and press \bowtie to start the program. 150 mm higher than the drain hose joiner. Repeat for the other drawer. Ensure any packaging or tape securing the racks or spray arms is removed from When the test cycle is in process check the knock sensor is working by knocking the drawers. twice on the door to pause the wash program. Water softener models only: adjust the water softener setting from the default After the Rinse program has finished, ensure the dishwasher has run and drained setting to suit the water hardness of the area. correctly. See the Quick start guide and section 'Water softener' in the User guide. Check the water supply has correctly shut off and drainage connection for leakage.

Complete and keep for safe reference:

Model	
Serial No.	
Purchase Date	
Purchaser	
Dealer Address	
Installer's Name	
Installer's Signature	
Installation Company	
Installation Date	

FISHERPAYKEL.COM

Copyright © Fisher & Paykel Appliances 2019. All rights reserved. The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

FISHER & PAYKEL

SINGLE DISHDRAWER[™] DISHWASHER

DD60SI, DD60STI, DD60SLI, DD60SHI & DD60SHTI models

INSTALLATION GUIDE

NZ AU GB IE SG

591383C 05.19

SAFETY AND WARNINGS

AWARNING!

Electrical shock hazard Before installing the dishwasher, remove the house fuse or open the circuit breaker. This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-earthing conductor and an earthing plug. The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.



WARNING- Improper connection of the equipment-earthing conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly earthed.

Do not modify the power supply plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Do not use an extension cord, adapter plug or multiple outlet box.

Failure to follow this advice may result in electrical shock or death.

AWARNING!

Cut Hazard Take care - panel edges are sharp. Failure to use caution could result in injury or cuts.

A WARNING!

Fitting integrated front panels requires access to electrical service areas.

This work must be performed and certified by a qualified electrical service technician.

Electrical Shock Hazard

WARNING: To reduce the risk of electrical shock, fire, or injury to persons, the installer must ensure that the dishwasher is completely enclosed at the time of installation. Before fitting the front panels and connecting the integrated badges (where present), the installer must ensure that the dishwasher is disconnected from the power supply. After installing the front panels, the installer must ensure that the following components are electrically earthed; the panel bracket, the integrated badge (where present) and any custom metal component (eg handle) that extends past the rubber seal. Failure to follow these warnings may result in electrical shock, injury or fire.

IMPORTANT SAFETY INSTRUCTIONS

- Installation of this dishwasher requires basic mechanical and electrical skills.
- Be sure to leave these Instructions with the Customer.
- Installation must comply with your local building and electricity regulations.
- At the completion of the dishwasher installation, the Installer must perform the Final Checklist.
- Remove all packaging materials supplied with the dishwasher.
- This dishwasher is manufactured for indoor use only.
- Ensure all water connections are turned OFF. It is the responsibility of the plumber and electrician to ensure that each installation complies with all Codes and Regulations.
- The dishwasher MUST be installed to allow for future removal from the enclosure if service is required.
- The switched power outlet must be outside the dishwasher cavity, so that it is accessible after installation.
- Care should be taken when the appliance is installed or removed to reduce the likelihood of damage to the power supply cord and hoses.
- If the dishwasher is to be relocated from one installation to another it must be kept upright to avoid damage from water spillage.
- Make sure only new hoses are used for connection (supplied with the dishwasher). Old hoses should not be reused.
- Failure to install the dishwasher correctly could invalidate any warranty or liability claims.


IMPORTANT SAFETY INSTRUCTIONS

- Ensure the product is not plugged in when fitting custom panels.
- Installation of custom panels requires basic mechanical and electrical skills.
- Installation must comply with your local building and electricity regulations.
- Failure to install the custom panels correctly could invalidate any warranty or liability claims.

IMPORTANT! SAVE THESE INSTRUCTIONS

The models shown in this installation guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, go to our website www.fisherpaykel.com or contact your local Fisher & Paykel dealer.


2 PARTS SUPPLIED

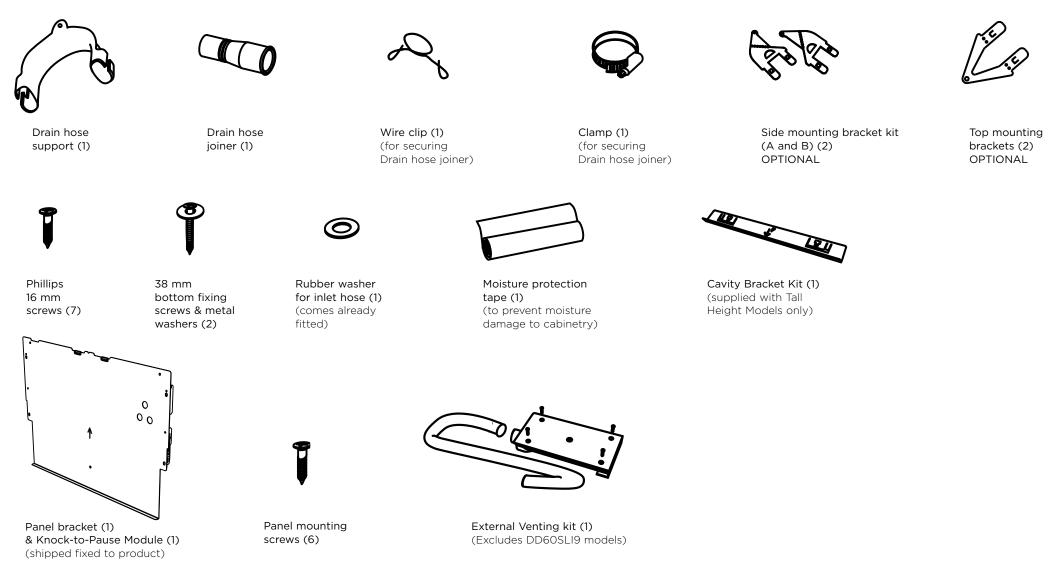

Dishdrawer[™] installation overview

This video provides an overview of what is needed to install a DishDrawer[™]. It is intended as an overview only of the installation process and is not intended to be used as a guide on how to install a DishDrawer[™] yourself. https://vimeo.com/325297597


If the Drain hose supplied is not long enough to reach your services, you must use a Drain Hose Extension Kit P/N 525798 which will extend the drain hose by 3.6 m. The kit is available from the nearest Fisher & Paykel Authorised Service Centre or our local website listed at the end of this document.

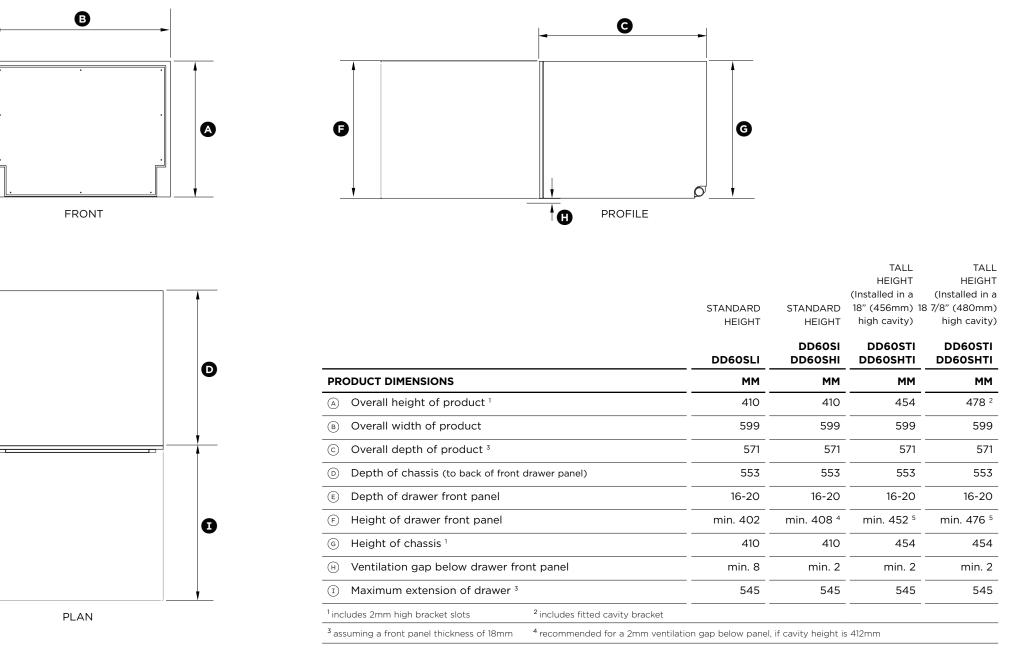

⁵ recommended for a 2mm ventilation gap below panel

Ø

(4)**CABINETRY DIMENSIONS**

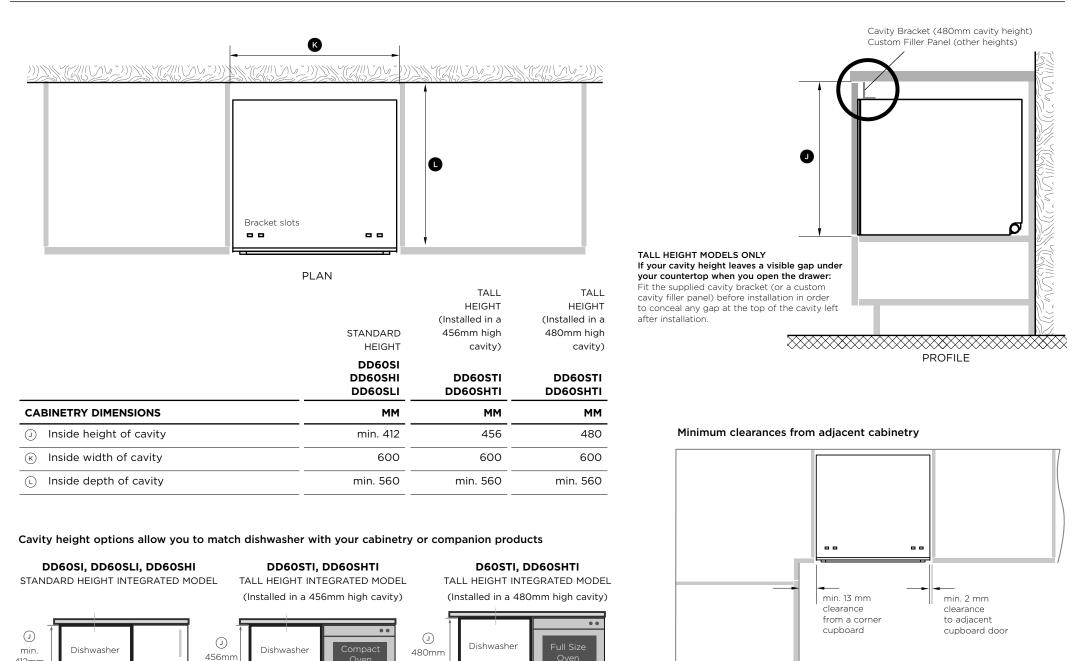

412mm


FRONT PANEL MATERIAL SPECIFICATIONS

- 16 20mm panel thickness •
- Adequately sealed to withstand moisture (50°C @ 80% RH) ٠ Because of it being a hot and wet environment generally, the back and sides of the panel should be completely sealed with a waterproof vapour barrier (ie polyurethane) to prevent damage to the panel.
- The back of the panel (including any integrated handle) should be completely flush so that the seal between the panel and the rubber trim is maintained.
- Installation outside these specs may result in condensation on cabinetry surfaces. •
- Maximum weight of panel: 9kg

The following calculations assume the top of the upper panel is aligned with the top of the adjacent cabinetry.

WIDTH OF THE PANEL

Measure A (the width between adjacent door/drawer fronts) and write it in the first box below, then complete the equation.

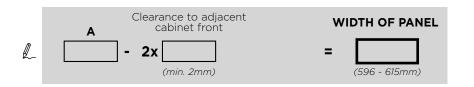

HEIGHT OF THE PANEL




DD*SLI9 models only:

This model is installed conventionally without an External Venting Kit. Therefore, the Ventilation Gap below the product in all calculations is min. 8mm. Note: when the top of the dishwasher has to be lower than the adjacent cabinetry, the top of the panel can extend above the chassis where required, however a min. 2mm gap to the benchtop must be maintained.


min. 2mm

min. 2mm

В

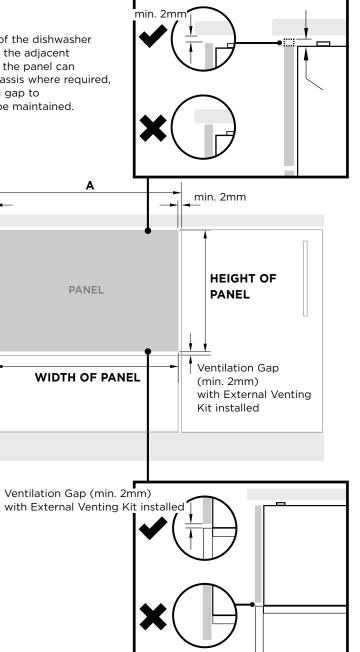


6 CAVITY PREPARATION

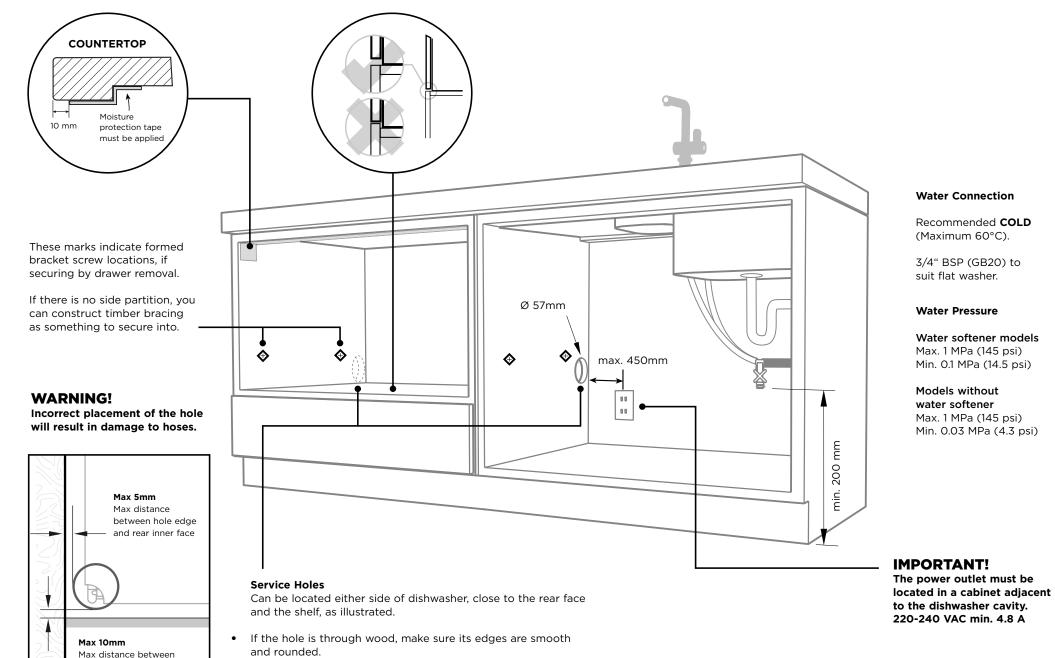


• If the hole is through metal, ensure you fit the supplied Edge Protector to prevent damage to the power cord.

hole edge and shelf

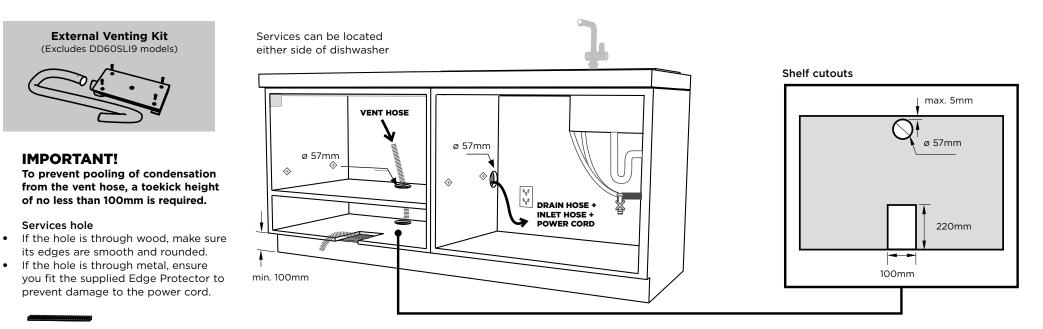

(8) PREPARATION FOR EXTERNAL VENTING THROUGH ADJACENT CABINET

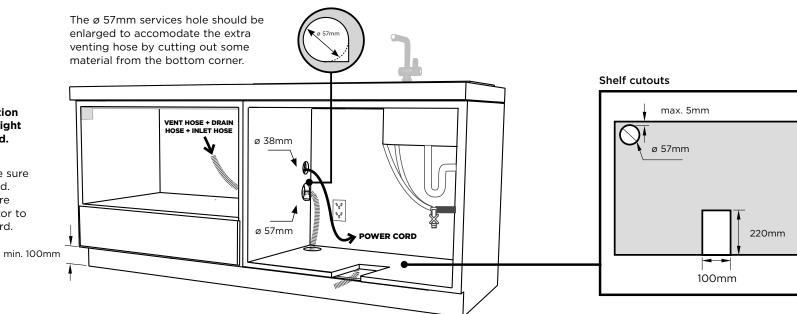

IMPORTANT!

IMPORTANT!


Services hole

To prevent pooling of condensation from the vent hose, a toekick height of no less than 100mm is required.

Services hole

- If the hole is through wood, make sure its edges are smooth and rounded.
- If the hole is through metal, ensure you fit the supplied Edge Protector to prevent damage to the power cord.

8 MAXIMUM DISTANCE OF HOSES & CORD FROM CHASSIS EDGE

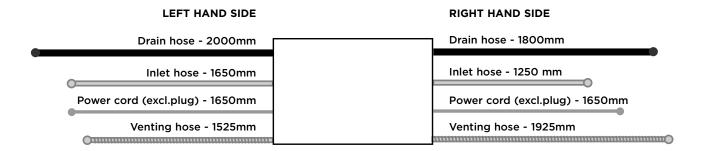


IDENTIFY ONLY - ATTACH CAVITY BRACKET


2

IMPORTANT!

The enclosed cavity bracket is fitted before installation in order to conceal the gap at the top of the cavity left after installation.

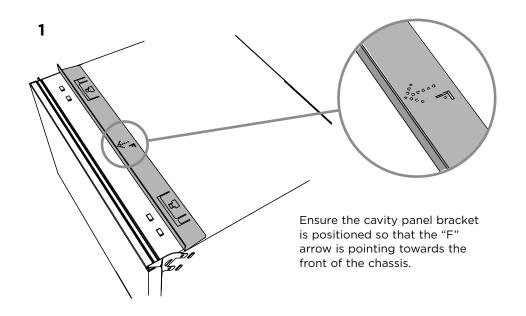


Firmly push the bracket so that the prongs engage with the top tabs and it clicks into place.

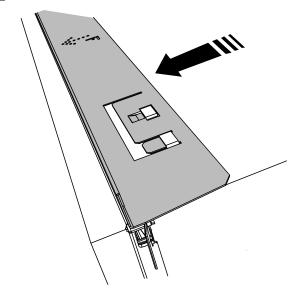

IMPORTANT!


Ensure the prongs have not been driven down into the chassis as this will damage the lid below.

> Ensure the top trim seal is facing forward after attaching the bracket.

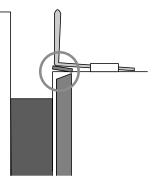

NOW CHOOSE WHICH INSTALLATION METHOD (A) OR (B) IS MORE SUITABLE FOR YOUR CABINETRY...

10 RECOMMENDED METHOD (A) - SECURE WITHOUT DRAWER REMOVAL (FRAMELESS CABINETRY ONLY)

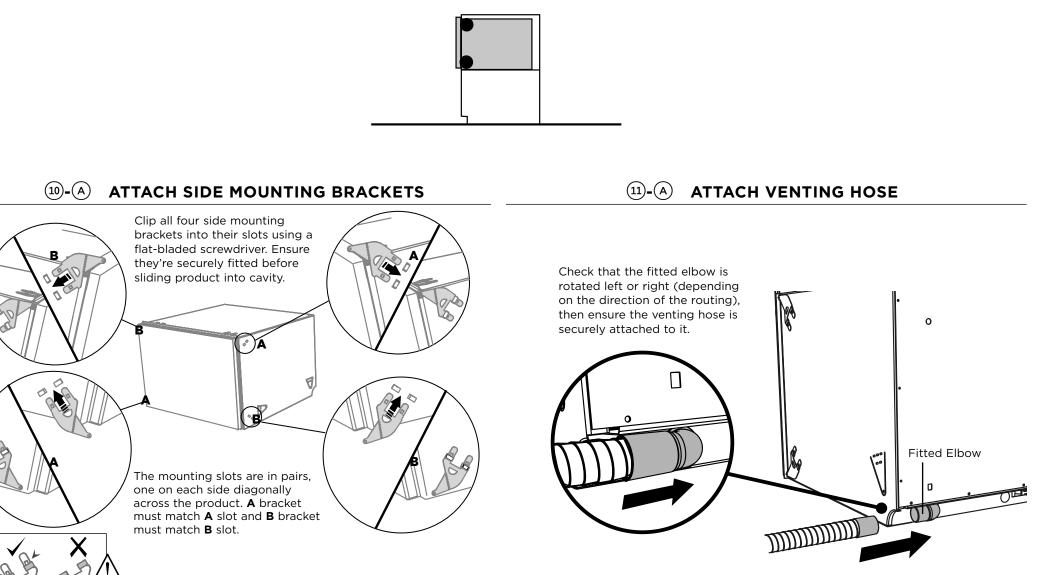


 When fitting brackets, ensure the ends are not pushed down into the chassis.

12-A PULL THROUGH HOSES & MOVE INTO THE CAVITY


13-A SECURE TO THE CABINETRY ON THE SIDES


four brackets.

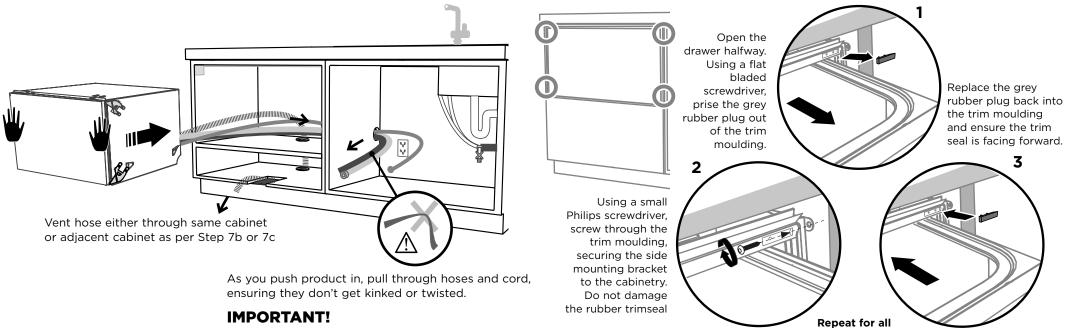


If product cannot be pushed in far enough, pull out again and rearrange hoses and cord. Do not use excessive force, as doing so may squash the hoses and lead to incorrect operation.

14-A SECURE THE EXTERNAL VENT

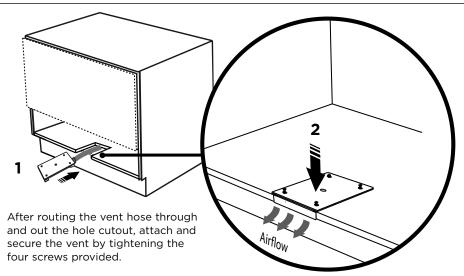


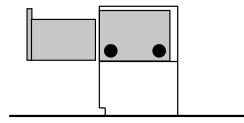

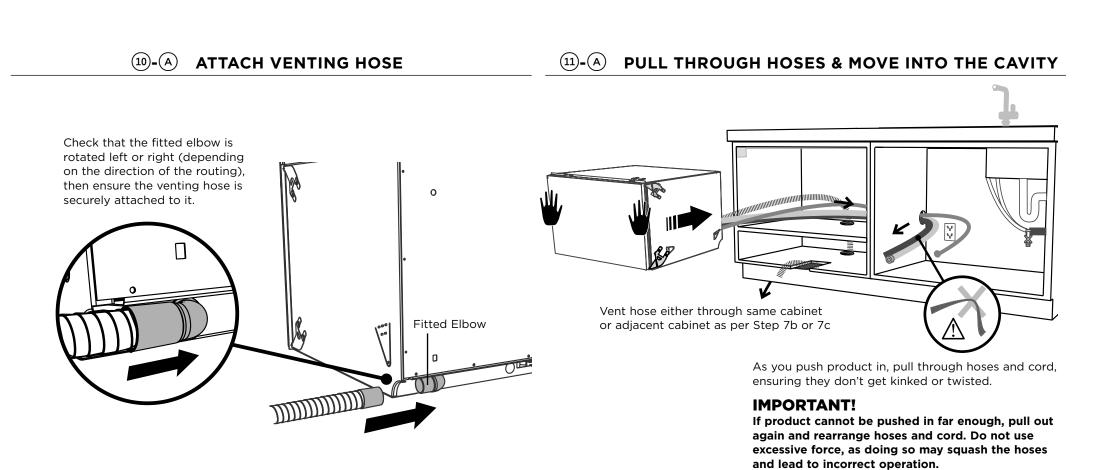



To prevent kinked hoses

Either sit the drawer down on the left hand side (recommended) or rotate the drawer clockwise, resting it on its side after removal.

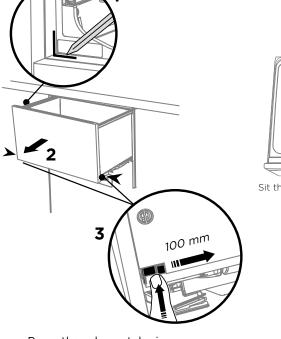


Press the release tabs in on either side and push back to release drawer from runners. Lift drawer off runners.

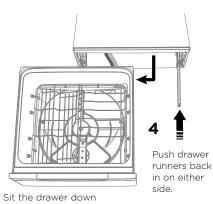

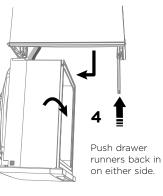


Rotate the drawer clockwise (max. 90°) and rest on side.

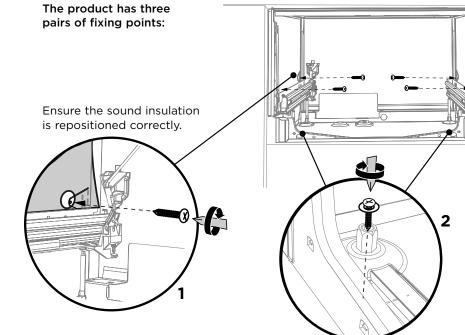


two pairs of formed brackets on either side of the chassis (use 16 mm screws)


a pair of fixing holes either side on the bottom (use 38 mm fixing screws & washers)

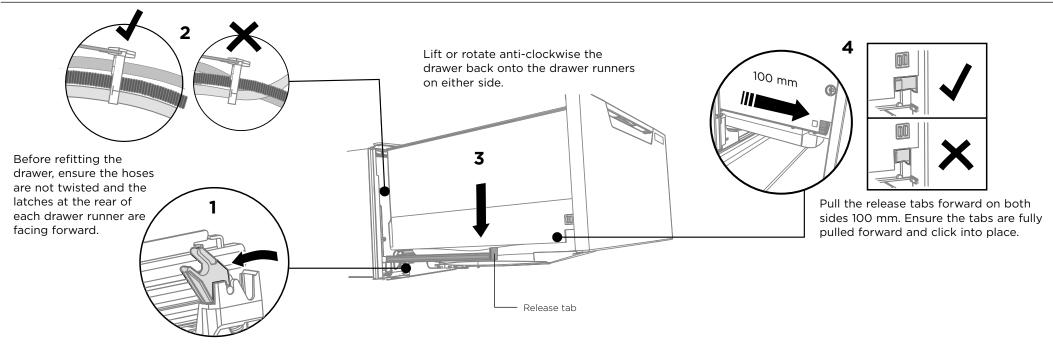


15-B SECURE THE EXTERNAL VENT

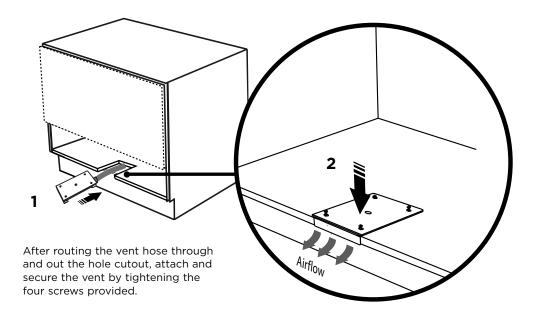


16-A REMOVE PANEL BRACKET FROM PRODUCT

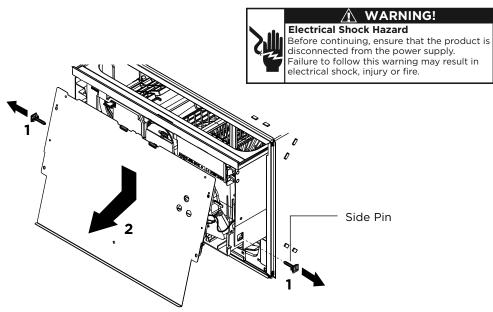

Remove side pins and gently pull off the panel bracket slightly.

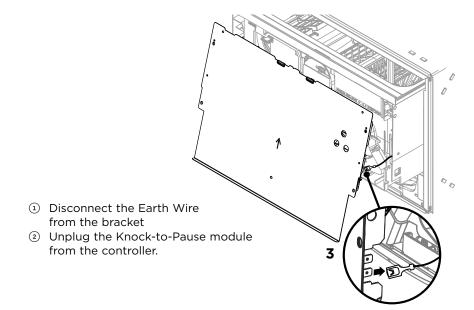


16-B REMOVE THE KNOCK-TO-PAUSE MODULE

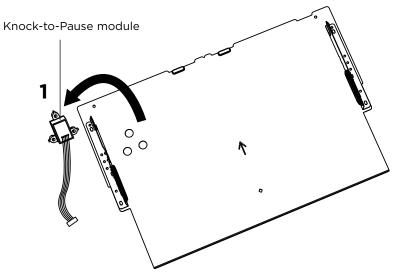


Remove the Knock-to-Pause module from the back of the bracket.

16-C ATTACH CUSTOM PANELS TO PANEL BRACKETS

(16-(D) ATTACH KNOCK-TO-PAUSE MODULE TO CUSTOM PANEL

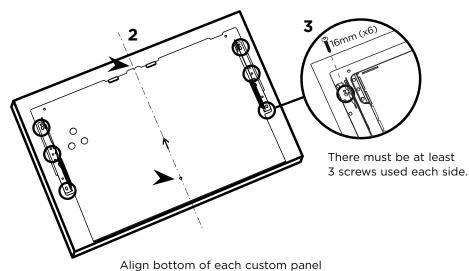

Align bottom of each custom panel with the bottom of each bracket.

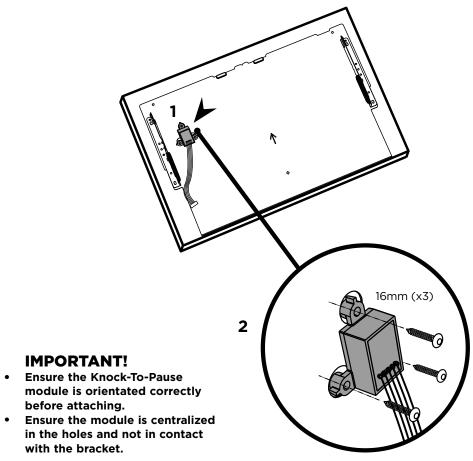


Attach the Knock-To-Pause module to the back of the custom panel through the 3 holes cut into the panel bracket as shown.

Use all 3 screws provided.

(16)**-**(E) CONNECT THE KNOCK-TO-PAUSE MODULE **RECONNECT THE EARTH WIRE TO THE** (16)**_**(F) TO THE CONTROLLER PANEL BRACKET WARNING! ∕!∖ **Electrical Shock Hazard** To earth the panel bracket, connect the earth wire from the product to one of the tabs. Any custom metal component (e.g. handle) that extends past the rubber seal must be earthed too. Controller Failure to follow these warnings may result in electrical shock, injury or fire. Reconnect the Earth Wire to the Panel bracket. Ensure the Knock-To-Pause Module Cable is connected to the UI1 Port.

16-6 ATTACH CUSTOM PANEL TO PRODUCT

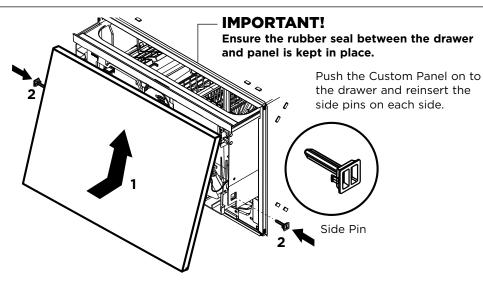

(16-(H) ADJUST CUSTOM PANEL HEIGHT TO ALIGN CABINETRY GAPS


With the front panels fitted, insert an appropriately sized Philips screwdriver into the hole above the side pin and rotate the panels up or down to align the gaps in your cabinetry.


Repeat on the other side if necessary.

Each panel has a maximum travel of 2mm up or down.

IMPORTANT!

Ensure that you maintain a minimum of 2mm ventilation gap below the panel.

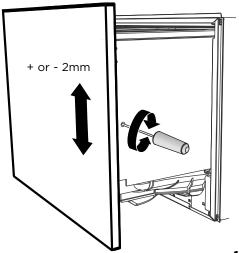

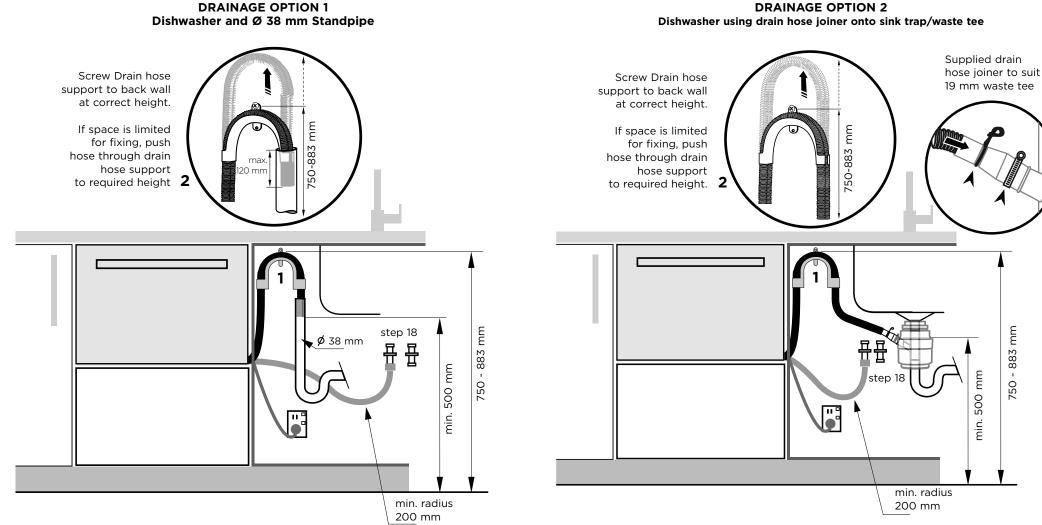


IMPORTANT!

Ensure that drain hose is installed as close to the underside of the benchtop as possible. This will ensure no waste re-enters the drain hose in the event of poor flow or a blockage in the plumbing.

Ensure the drain hose does not extend into water retained in the trap; an air gap is required to prevent waste water from siphoning back into the tub.


IMPORTANT!

Ensure that drain connection complys with local plumbing regulations.

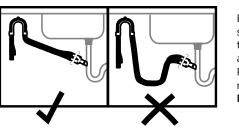

Ensure drain hose is routed straight to the joiner so that waste water does not accumulate in the hose. Remove *excess* drain hose material if necessary. **Do not shorten the inlet hose.**



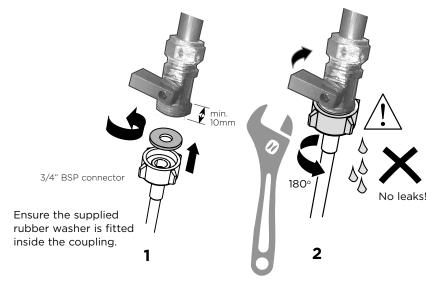



Tighten coupling with spanner.

- Excessive water remaining above the filter plate, after the rinse cycle. (This is displayed as an A3 fault. See user guide 'How to attend to a fault') Check for a kinked drain hose, blocked or incorrectly drilled out waste connection, highloop not properly installed, drain hose not routed correctly or spray arm not in place.
- No water supply. (This is displayed as an A1 fault. See user guide 'How to attend to a fault') Check water is connected and turned on.
- The dishwasher is beeping continuously There is a fault. See section 'How to attend to a fault'in the User guide for further information and instructions.
- No program indicator lights up when the drawer is opened

Ensure power is connected and is switched on. If it is and still no indicator lights up, see the 'Preference options' section of the 'Quick start guide'. An option called 'Open drawer auto power-on' may need to be turned on.

- Water around water supply and drainage connections Check connections, existing plumbing and hoses for leaks. Check rubber washer and hose clamp are correctly fitted.
- If product is tipping Ensure the product is secured to the cabinetry.
- Drawer doesn't close properly

Ensure nothing is obstructing the drawer from closing properly eg hoses or drawer latches.

- If a problem occurs, consult the 'Troubleshooting' section of the User guide.
- If after checking these points you still need assistance, please refer to the Service & Warranty book for warranty details and your nearest Authorised Service Centre, or contact us through our website, listed below.

TO BE COMPLETED BY THE INSTALLER

Check all parts are installed.		Turn on the power and water supplies, then open the drawer. You should hear a beep and see a program indicator light up on the control panel.
Ensure that all panels and parts thereof are secure and final electrical tests have been conducted in accordance with local electrical regulations.		Check the spray arms are in place, mounted correctly and free to rotate, by physically rotating by hand.
Ensure product is level, securely fastened to the cabinetry and opens and closes freely. The drawers must be free to fully close with no resistance from the cabinetry.		
Ensure inlet hose to water supply has supplied rubber washer fitted, and that it's tightened a further half turn after seal contact.		Spray arm
Ensure any knockouts or plugs in drain connection have been drilled out and drain connection has been made.		
The drain hose joiner must not support the weight of excess hose material. Keep drain hose as fully extended as possible to prevent sagging. Any excess length of drain hose should be kept on the dishwasher side of the highloop.		
If connecting the drain hose to the sink trap, ensure the Highloop is a minimum 150 mm higher than the drain hose joiner.		Add three cups of water into the drawer. Press \gg until the indicator of the 'Rinse' program lights up. Close the drawer and press >II to start the program.
Ensure any packaging or tape securing the racks or spray arms is removed from the drawers.		When the test cycle is in process check the knock sensor is working by knocking twice on the door to pause the wash program.
Water softener models only: adjust the water softener setting from the default setting to suit the water hardness of the area.		After the Rinse program has finished, ensure the dishwasher has run and drained correctly.
See the Quick start guide and section 'Water softener' in the User guide.		Check the water supply has correctly shut off and drainage connection for leakage.

Complete and keep for safe reference:

Model	
Serial No.	
Purchase Date	
Purchaser	
Dealer Address	
Installer's Name	
Installer's Signature	
Installation Company	
Installation Date	

FISHERPAYKEL.COM

Copyright © Fisher & Paykel Appliances 2019. All rights reserved. The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.